


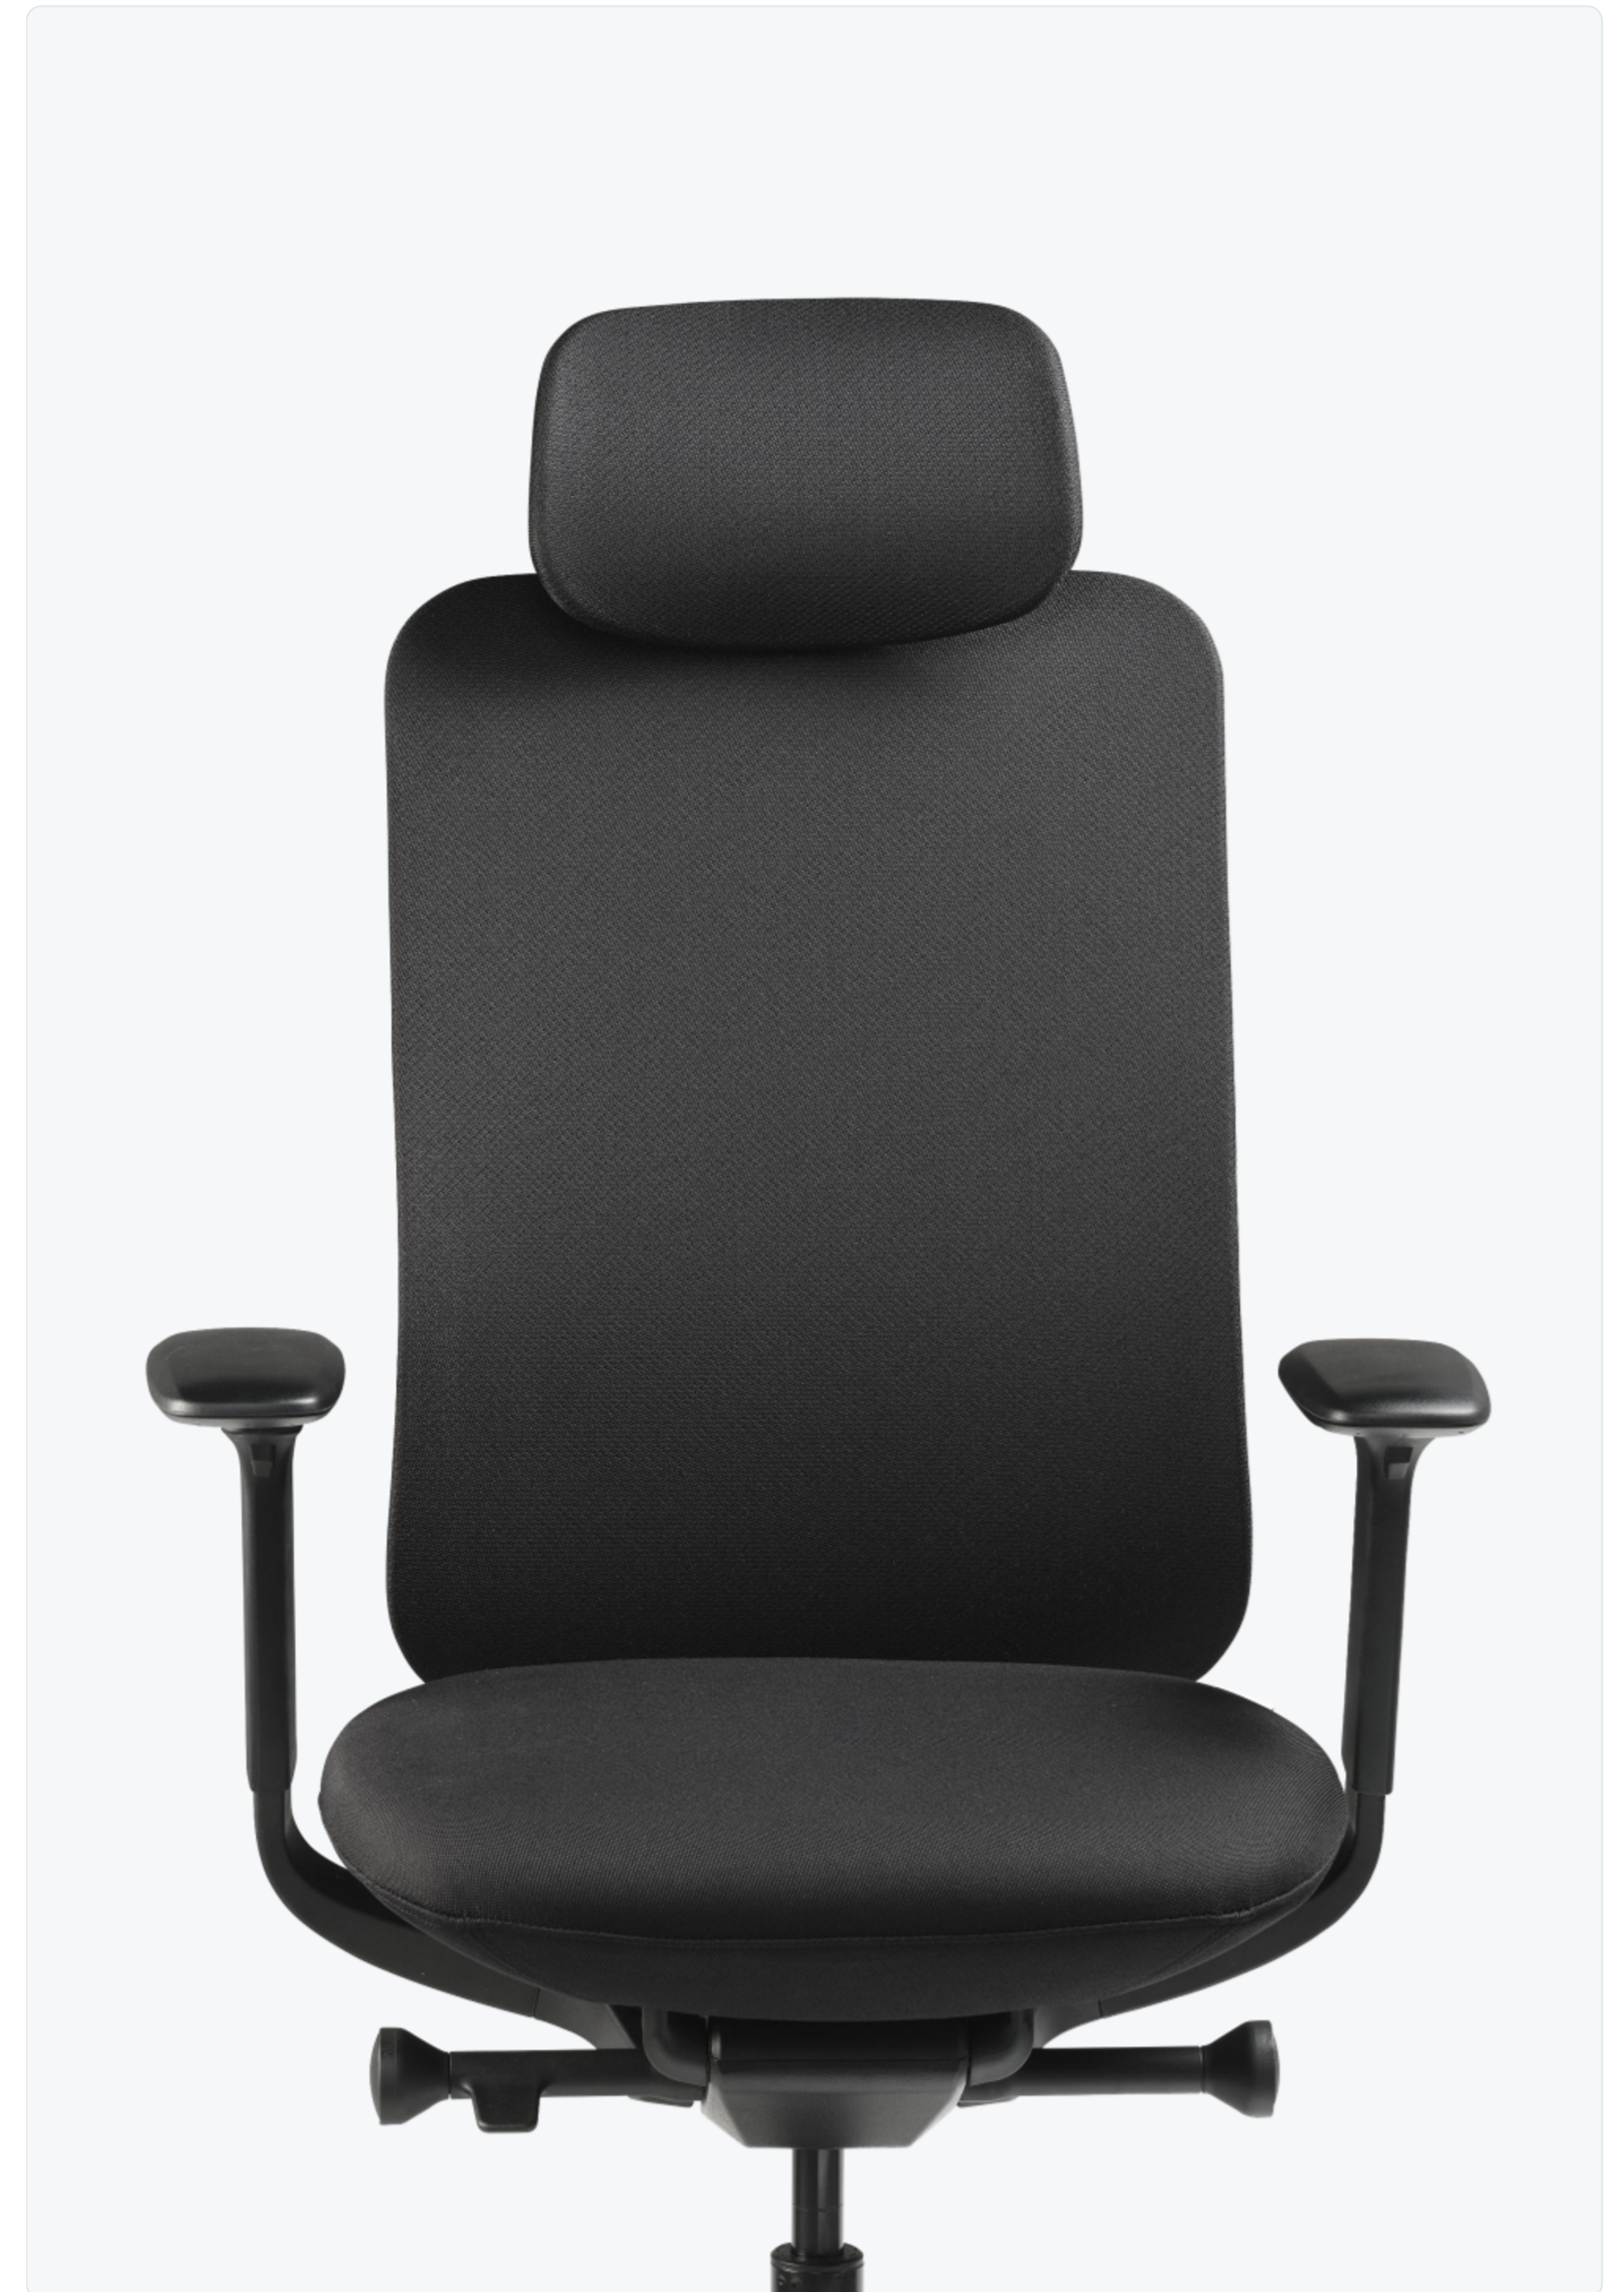

Product Manual

Electra - Executive Home Office Chair

Pago International - 2025



SEAT HEIGHT
Handle on the right inner knob



- ↑ Up:
Lift the handle up, stand up slightly and adjust to the suitable height.
Release the handle to lock the seat height.
- ↓ Down:
From a seated position and utilizing your own weight, lift the handle upward. Release the handle to lock seat height in place.



SEAT PLATE FORWARD AND BACKWARD MOVEMENT
Right side buckle



- ↔ Seat slide:
There is a pull on the right hand side of the seat.
Pulling outward to unlock, slide hips forward and release to lock.
- ↩ Floating buffer function:
Self-cushioning function (Adaptive descending cushioning height of 1.1 CM when sitting down).



QUICK ADJUSTMENT OF TILT TENSION
Knob on the right side, at the end of the handle



- ↻ 7-speed fast adjustment:
While seated, twist back the knob on the right handle.
There are 7 tension levels to adjust.



SEAT BACKREST TILT LOCK
Left side knob



- 🔒 Locked:
The left hand knob, twisted forward to lock the backrest tilt.
- 🔓 Unlock:
Twist backward to unlock and adjust the backrest tilt.



ARMREST ANGLE/HEIGHT
Front of armrest cushion



↔ Rotate left and right:
Sit and grasp the front armrest pad and rotate it to the left or right.

↕ Lift:
The height of the armrests can also be adjusted up and down by pressing the button under the armrest pad.



Adjusting the angle of the arms helps to support different types of work and postural transitions, swinging the chair arms inward for support when using the keyboard and outward to support the use of the computer mouse.

LUMBAR ADJUSTMENT
Adjustable lumbar support at the back of the seat



↕ Height adjustable up and down:
Raise or lower the lumbar support within the adjustment track to the most comfortable support point for you lumbar area.

↔ Top waist strength adjustment:
Soft TPE material lumbar support, 3 levels of adjustable front and back support strength, make the lumbar support softer and more comfortable.



ARMREST DEPTH/WIDTH
Front of armrest cushion



↔ Move the armrest pads back and forth:
Grasp the armrest pads and slide them forward and backward.

↕ Inside and outside handrail pads:
Grasp the armrest pads and inward or outward.



HEADREST HEIGHT/ANGLE:
Manually adjustable



↕ Headrest height:
The height of the headrest can be raised and lowered by following the headrest bracket track.

↻ Headrest angle:
The angle can be flipped around the numbers on the headrest bracket to adjust the angle of the headrest.

