



CleanGo

The 2 in 1 Cordless Stick Vacuum

Powerful, Efficient, Anywhere!



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

QAC9

CONTENTS

General Safety	4
Unpacking	6
Product Overview	7
How to Use	8
Setting up the vacuum cleaner	8
Charge the vacuum cleaner	9
Operate the vacuum cleaner	10
Cleaning and Maintenance	12
Clean the dust bin	12
Remove the dust bin and filter	12
Clean the inlet/outlet filter	13
Remove the handle (battery pack)	14
Clean a floor brush	14
Store devices	15
Remove and process the battery pack	15
Troubleshooting	16
Specifications	17
Customer Helpline	Last Page

GENERAL SAFETY

ELECTRICAL SAFETY AND POWER CORD HANDLING

- **Voltage:** Make sure that your outlet voltage and circuit frequency correspond to the voltage stated on the power adaptor rating plate.

WARNING!

- To reduce the risk of electrocution and other electrical hazards, do not spill liquids onto the vacuum cleaner, and do not operate it with wet hands.
- Do not attempt to repair, disassemble, or modify the appliance.
There are no user-serviceable parts inside this unit.

USAGE RESTRICTIONS AND CONDITIONS

- This appliance is intended for indoor domestic use only. It is not suitable for commercial, industrial or laboratory use.
- Do not use the appliance outdoors.
- The appliance is not intended to be operated by means of an external timer.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction on the use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance. Do not allow children to clean the vacuum cleaner or perform user maintenance.
- Maintain the vacuum cleaner in a clean condition to avoid deterioration, which could affect its working life and result in a hazard risk.
- We accept no liability for any eventual damages due to improper use, incorrect handling or non compliance with these instructions.

GENERAL SAFETY (Cont.)

MATTERS NEEDING ATTENTION

- Handle the vacuum cleaner gently to avoid impact;
- Do not put the vacuum cleaner too close to the fire source and other high temperature places;
- Do not put the vacuum cleaner in extremely unfavorable conditions to use and store, such as extreme temperature, it is recommended to use in the indoor 0-35°C ambient temperature, please store in a cool and dry place;
- If the machine is not used for a long time, it is recommended to charge it every three months.

BEFORE USE

- Please check whether the adaptor charging cable is intact before charging;
- After long-term storage, please use the battery fully;
- When using the vacuum cleaner for the first time or replacing the specified filter element, ensure that the filter element is installed in place.

IN USE

- Do not use vacuum cleaner in flammable and explosive gas;
- Do not use vacuum cleaner to suck detergent, kerosene, glass slag, needle, water dust, sewage, matches and other items;
- Do not use vacuum cleaner to suck cement, plaster powder, wall powder and other small particles, or toys, paper balls and other large objects, so as to avoid machine failure;
- When using the vacuum cleaner, please be careful not to block the suction or inhibit the brush rotation, so as not to cause short circuit;
- Do not use the vacuum cleaner to absorb water or other liquids. Do not rinse the vacuum cleaner with water to avoid short circuit;
- If the floor brush is found abnormal during use, please turn off the power switch and immediately check whether the floor brush is entangled with hair or other long fibers, and clean up in time;
- When the machine is fully charged but can not work, must go to the designated maintenance point for testing and maintenance, do not disassemble the machine;
- It is strictly prohibited to use the vacuum cleaner when the dust bin is not loaded;
- Do not allow children or people with incapacitated or mental capacity to use vacuum cleaners.

UNPACKING


Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the product, be sure to keep all the packaging materials until you have made sure your new product is undamaged and in good working order. This product has been packaging to protect itself against transportation.
- Be sure to remove all packaging materials around the product and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

PRODUCT OVERVIEW

1. Handle
2. Switch button(Fig c) Shift button(Fig d)
3. Display panel
4. Main unit
5. Dust bin release button
6. Aluminum tube release button
7. Battery pack
8. Dust bin
9. Filter
10. Dust bin empty button (locking latch)
11. Aluminum tube
12. Floor brush release button
13. Pivot connection
14. Motorised floor brush
15. Wall mount
16. Crevice Tool
17. 2 in 1 Brush
18. Battery charger (adaptor)

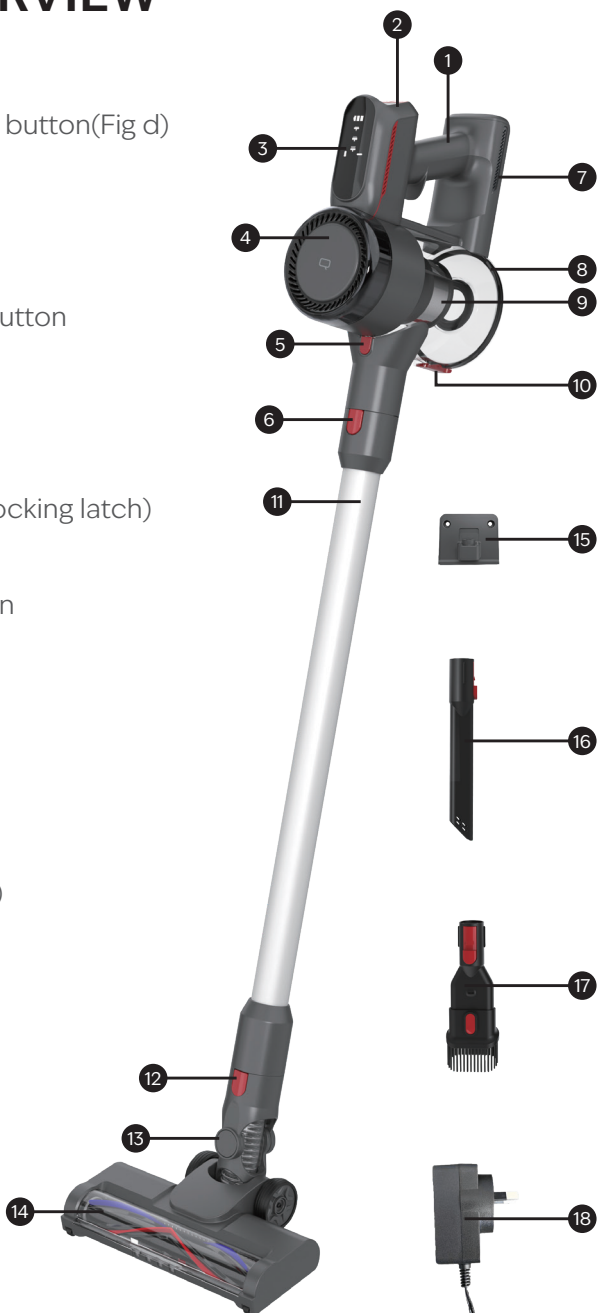

HOW TO USE

SETTING UP THE VACUUM CLEANER

Before using a cordless vacuum cleaner, clean it with a soft damp cloth dry thoroughly. Do not immerse the cordless vacuum cleaner in water or any other liquid medium. Assemble cordless vacuum cleaners and other accessories. Do not allow children or persons with incapacitated or mental capacity to use vacuum cleaners.

Assembly handle

First install the handle to the T-slot of the main unit in the direction of Fig a①, and then move down the direction Fig a② in the handle diagram until it snaps into place.

Assembling the aluminum tube

Fit the tube onto the main unit's air inlet until it clicks into the position Fig b②.

If need to remove the tube, hold the main unit, press the release button and remove the tube.

Assembling the motorised floor brush

Fit the floor brush on the tube until it click into the position Fig b③.

If need to remove the floor brush, hold the aluminum tube, press the floor brush release button and remove the brush from the tube.

Assembling the crevice tool



Fit the accessory on the main unit's air inlet and/or on the tube until it clicks into the position Fig b④.

The crevice tool is good for cleaning stairs, corners, and hard-reach areas.

Assembling the 2 in 1 brush

Fit the accessory on the main unit's air inlet and/or on the tube until it clicks into the position Fig b⑤.

The 2 in 1 brush is good for cleaning stairs, Corners and furniture etc.

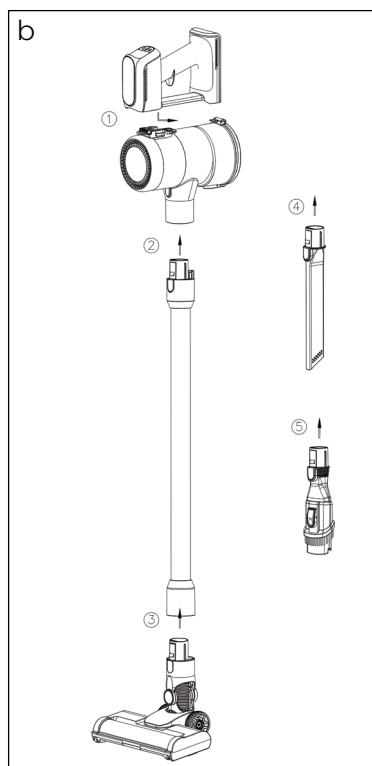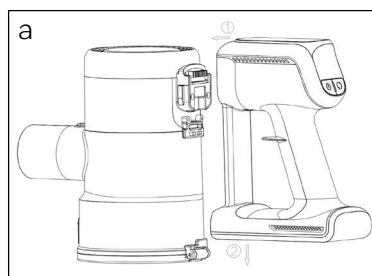

HOW TO USE (Cont.)


CHARGE THE VACUUM CLEANER

- Before first use, please charge the vacuum cleaner for about 5-5.5 Hours.

Charging the appliance

- Turn off the cordless vacuum cleaner.
- Connect the adaptor to the charging port on the host.
- Plug the adaptor into an outlet in your home that has a main power source.

WARNING: Only use the supplied, designated adaptor to charge the stick vacuum, do not use other adaptors to charge the vacuum cleaner, as using other adaptors increases the risk of injury/or damage to the product.

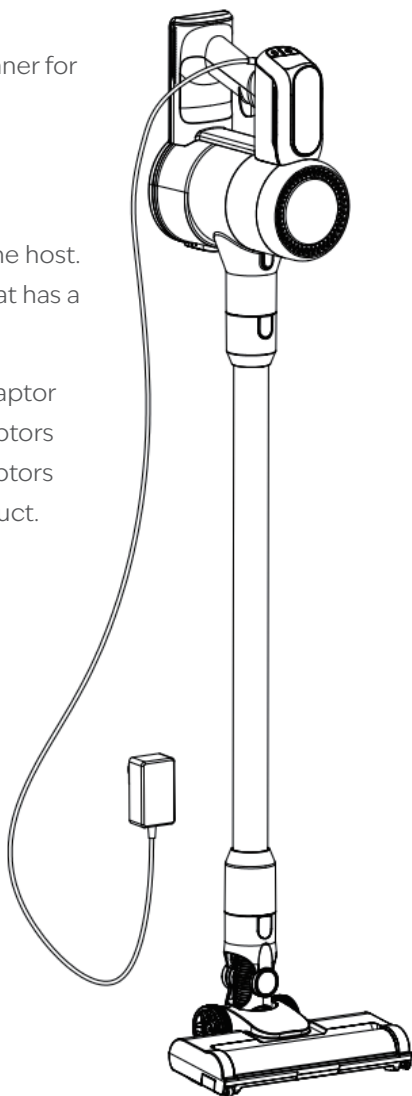



HOW TO USE (Cont.)

OPERATE THE VACUUM CLEANER

This vacuum cleaner has three speed regulation function (low, mid, high) to meet the requirements of different vacuuming occasions. It is recommended to use high grade for large amounts of dust or large particles of dust, and low grade for small dust occasions.

WARNING: Ensure that the filter or dust bin is properly installed before using the vacuum cleaner.

1. Press the switch button, as shown in Fig c below, to turn on the vacuum cleaner.
2. Press the shift button, as shown in Fig d below, to shift different speed. Every time the vacuum cleaner turned on default is low, press the shift button, switch to mid; press the shift button again, switch to high; then press the shift button, returned to low, in this cycle.

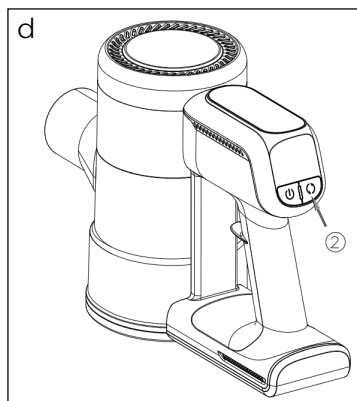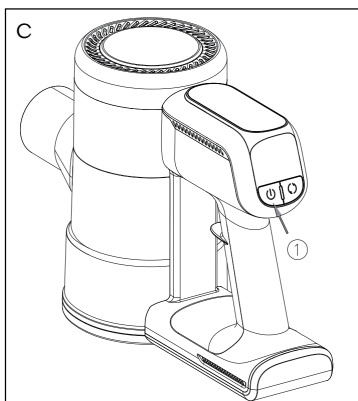

HOW TO USE (Cont.)


3. Power/charging indicator

When working, the power indicator light will turn off one by one from right to left. When the last light flash, it indicates that the battery is about to run out. When charging, the power indicator lights will illuminate one by one as the battery level increases, battery icon will steady on when fully charged. And please kindly note that all the lights will not go out until the charging plug is unplugged.

4. When the rolling brush rod is wrapped up and the rolling brush rod is caught by particles or entangled by hair and cannot be turned, the roller brush blockage indicator light will flash. The floor brush will stop working in a few seconds. Turn off the vacuum cleaner immediately. After removing the obstacles, restart the vacuum cleaner to resume work.

5. Speed indicator light, press the shift button, the corresponding speed indicator light will on.

6. When the filter cleaning indicator light flash, it means that the intake channel of the vacuum cleaner is blocked by foreign matter, or the air inlet filter element is blocked, prompting the user to clean the channel or clean the intake filter element.

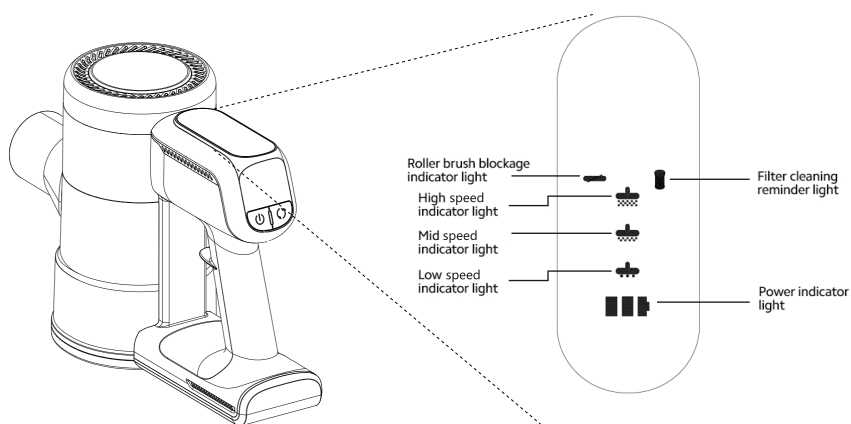

CLEANING AND MAINTENANCE



WARNING!

- Before cleaning the stick vacuum, make sure the main unit is switched off and cool and disconnected from the charger and wall socket.
- Do not use abrasive or aggressive cleaning materials. These could damage the surface of the appliance.

Clean the dust bin

Put the dust bin above the trash can, then press the dust bin empty button to pour the dust into the trash can, as shown in Fig e.



Alternatively, you can press dust bin release button to remove the dust bin firstly, then put the dust into the trash can, as shown in Fig f.

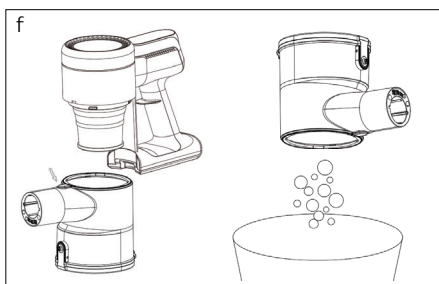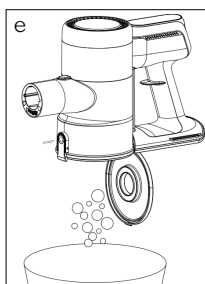

Remove the dust bin and filter



Note: In order to obtain good dust suction effect, it is recommended to clean the dust bin and air inlet filter frequently.

1. Turn off the vacuum cleaner
2. Press dust bin release button, hold the dust bin, turn clockwise, and remove the dust bin, as shown in Fig j.
3. After removing the dust bin, hold the filter and turn it clockwise to remove the filter. As shown in Fig k, the filter system can be divided into metal mesh & hepa filter.

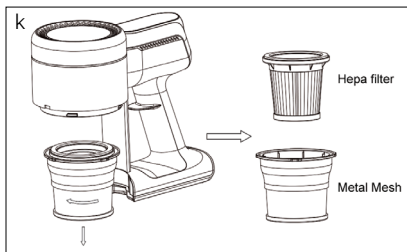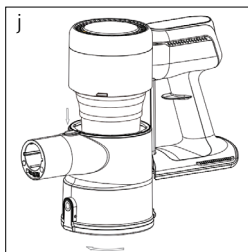





CLEANING AND MAINTENANCE (CONT.)

4. Clean the dust bin and metal mesh by tapping or rinsing with water, and wait for it to dry completely naturally.
5. Install the filter in reverse to ensure that it is locked in place, as shown in Fig l.
6. Install the dust bin on the host, ensure that it is locked in place, and hear the sound of “click”, as shown in Fig m.

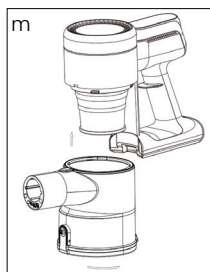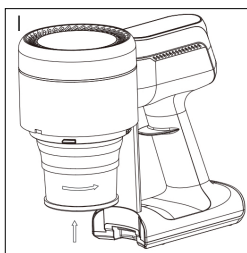

Clean the inlet/outlet filter

1. Turn off the vacuum cleaner
2. Press the release button, and the bottom will open automatically, as shown in Fig n.
3. Rotate and unlatch the filter, pull it downward, clean and dry it, and then insert it into the original position, as shown in Fig o.
4. Turn the air outlet gate cover clockwise, lift the outlet filter sponge upward, and put the outlet filter sponge back after cleaning and drying. As shown in Fig p.
5. Cleaning: clean the filter by patting or washing with water, and wait for it to dry completely naturally. As shown in Fig q.
6. Put the completely dried hepa filter back into the vacuum cleaner as required, as shown in Fig o and Fig p.

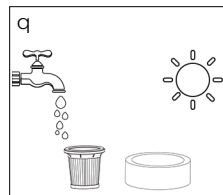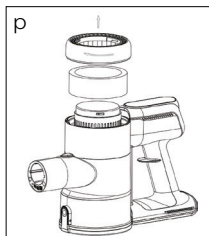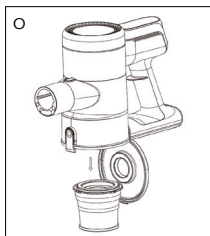
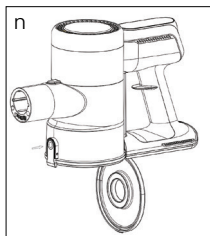


CLEANING AND MAINTENANCE (CONT.)

Remove the handle (battery pack)

Note: The handle (battery pack) can be removed from the console and can be charged separately, or an additional battery pack can be ordered for replacement.




1. Turn off the vacuum cleaner
2. Move the release button backward, as shown in Fig r. At the same time, move the handle (battery pack) upward, and remove (battery pack) backward (Fig s).

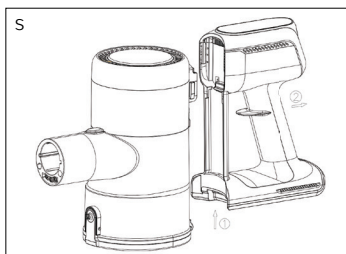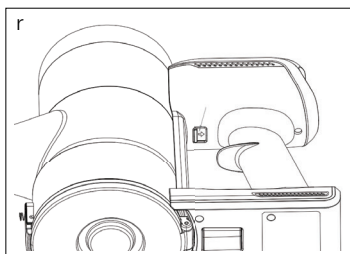

Clean a floor brush

Note: It is recommended to clean the brush frequently to ensure the dust removal performance of the brush. Prevent damage to the floor brush due to hair/cloth/large particle litter preventing the floor brush from working properly.

1. Remove the electric floor brush from the main machine as described before and turn the floor brush over. As shown in Fig t(1)
2. Move the slider in the direction of the arrow. As shown in Fig t(2)
3. Remove one end of the brush roller first. As shown in Fig t(3)
4. Pull out the whole roller rod along the axis.

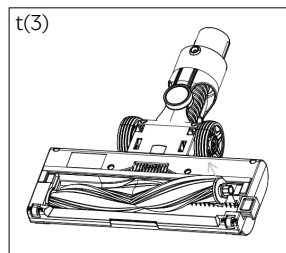
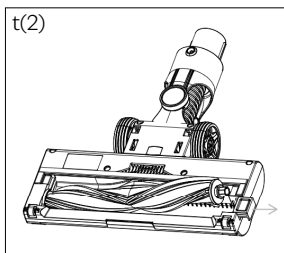
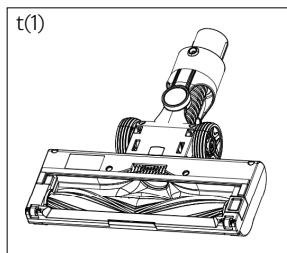


CLEANING AND MAINTENANCE (CONT.)

Store devices

Note: After use, it is recommended to store your appliances in a safe place away from heat, humidity, or fire.

1. Fix the hook. Choose a suitable spot on a sturdy wall then install the hook and use screws to fix as shown in Fig u. It should be positioned so that you can comfortably store the assembled appliance standing up.
2. Disconnect the device from the main power supply.
3. Empty the dust bin and clean the filter.
4. Hang your device on the fixed hook, as shown in Fig v & Fig w.

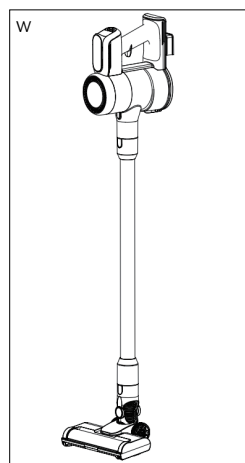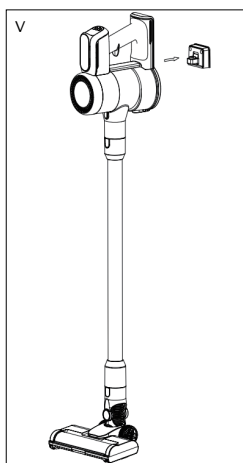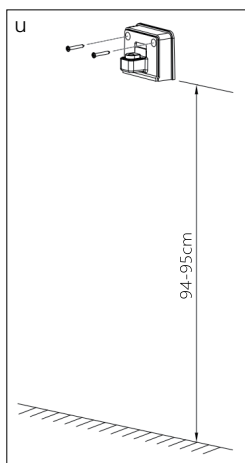

Remove and process the battery pack


At the end of your cordless vacuum cleaner's useful life, it won't fit in the trash because it has a lithium-ion battery installed and needs to be disposed of in an environmentally friendly way.

Waste batteries are not environmentally friendly and should be disposed of in accordance with applicable regulations.

If the battery pack cannot discharge continuously, it indicates that the battery pack has reached its end of life.

Remove the battery pack from the device.

Dispose of batteries to chemical waste collection.

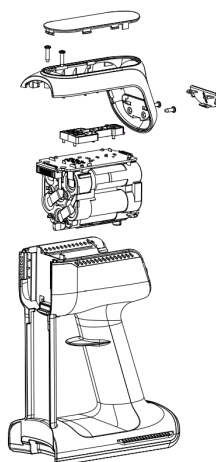

TROUBLESHOOTING

If you experience problems with the appliance , check in the table below for solutions to common problems. If our suggestions do not help you, or if you experience any other problems with the appliance, do not try and manage them by yourself. Contact our after sales support centre (info@ayonz.com / 02 8279 8606) for advance on repair or replacement.

Fault phenomenon	Cause analysis	Troubleshooting
The floor brush does not rotate	1. The floor brush entangles too much hair, long fibers, and other foreign matters; 2. The electric floor brush is not properly installed.	1. Clean the entanglements on the floor brush; 2. Install the electric floor brush correctly as required.
The motor does not work	1. Low battery power; 2. After too long time of use, the temperature becomes too high.	1. Charge the vacuum cleaner; 2. After cooling down, restart the cleaner for using.
The suction is reduced	1. The filter element is dusty; 2. The air intake duct of the floor brush is blocked or the floor brush gets stuck 3. Meshes of the cyclone shield are blocked by scraps of paper or fluffy fibers; 4. The air duct between the dust bin and the main body of the cleaner is blocked.	1. Clean or replace the filter element; 2. Clean up the garbage attached to the inside of the electric floor brush; 3. Check the cyclone mesh regularly for garbage blockage; 4. Check the air duct between the dust bin and the main body of the cleaner for garbage blockage.
The indicator light does not go on or flickers during charging	1. The adapter is not properly connected; 2. The battery temperature is too high;	1. Check whether the adapter is properly connected; 2. Charge the battery again after cooling down;

SPECIFICATIONS

Ratings	Vacuum Cleaner Input: 27VDC 500mA Floor Brush Input: 22.2VDC 15W
Dust Canister Capacity	0.6L
Operation Time	18 Minutes. - HIGH 30 Minutes. - MID 55 Minutes. - LOW
Charge Time	5-6 hours
Battery	Rechargeable Lithium Battery, 2600mAh
Dimensions	245 (w) x 204 (d) x 1060 (h) mm
Weights	Net: 1.8 kg (with floor brush) / Gross: 2.8 kg

THIS PAGE IS LEFT BLANK
ON PURPOSE

THIS PAGE IS LEFT BLANK
ON PURPOSE



CUSTOMER HELPLINE: info@ayonz.com / 02 8279 8606

DISTRIBUTED BY: Ayzon Pty Ltd

