



**BlendGo**

The Rechargeable Portable Blender

Fresh, Fast, Anywhere!



**WARNING:** THIS PRODUCT IS POWERED AND WILL TURN ON, PLEASE BE CAREFUL WHEN UNPACKING, PREPARING FOOD OR WHILE IN USE. DO NOT PLACE HANDS NEAR BLADES TO AVOID INJURY. APPLIANCE SHOULD NOT BE USED UPSIDE DOWN/INVERTED.

# INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

QBPBUSBC



# CONTENTS

General Safety	4
Product Overview	7
Operation	8
Cleaning & Maintenance	9
Troubleshooting	10
Specification	11
Customer Support	Last Page

# GENERAL SAFETY

Read this manual thoroughly before you start using the blender.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

## IMPORTANT INFORMATION

- Do not expose this product to rain or moisture.
  - Do not temper or change or modify the product in any way.
  - Only use Accessories outlined and recommended by the manufacturer.
  - Please do not expose the product to splashing or water contact
- 
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
  - No naked flame source, such as candles, should be placed on the product.
  - This appliance is not to be used by persons (including children) with reduced physical, sensor or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.  
Children being supervised not to play with the appliance.
  - Do not place the base of the blender into water to wash it. This product is not waterproof and will damage the product if not handled correctly.
  - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

WARNING: THIS PRODUCT IS POWERED AND WILL TURN ON, PLEASE BE CAREFUL WHEN UNPACKING, PREPARING FOOD OR WHILE IN USE. DO NOT PLACE HANDS NEAR BLADES TO AVOID INJURY. APPLIANCE SHOULD NOT BE USED UPSIDE DOWN/INVERTED.

# GENERAL SAFETY (Cont.)

- If you notice any unusual odors or smoke around the unit, immediately turn off the device and contact the service center. Failure to do so may result in fire or electric shock.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- To maintain the product do not use any chemical or cleaning agent, please only ensure to utilize a cloth to wipe it down from marks or dust and only after unplugging the product from the power socket and turning off the switch.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Protected from excessive dust or grease.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

This appliance is intended to be used in household and similar applications as:

- staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments
- 
- Switch off the appliance and disconnect from supply before changing accessories or approaching that move in use.
  - Be careful if hot liquid is poured into the product as it can be ejected out of the appliance due to a sudden steaming.
  - Warn of potential injury from misuse.

# GENERAL SAFETY (Cont.)

- This product is suitable for TYPE-C mobile phone charger, charging for 4 hours or after charging is completed, the indicator light is always on.
- When the juicer blender is working, it is prohibited to open the lid, put hands or something rigid into the cup.
- Before cleaning, please make sure the switch is off, don't put the base into the water or else the base element will be damaged.
- The juicer blender idling revolving time is 5s, working time is 30s. Before restart it, please reset the switch first then turn it on. Please do not let it work under high strength in order to prevent the electronic elements from loading too much to secure its durability.
- The accessories of this blender can't be disinfected by microwave or hot water over 80°C.
- It is prohibited to wash accessories in washing equipment, such as dish-washing machine.
- It is prohibited to wash it with steel ball or abrasiveness or corrosivity cleanser.
- Please put this product beyond the reach of children. Do not let the disabled or mental patients to use or play this product.
- This product is applied only to individual or family. If malfunction is occurred, please contact customer service. Do not repair or disassemble by yourself, or else you will lose the warranty service rights.

## WARNING

- Make sure children do not use this product.
- When unscrewing the container from the blender base, make sure to place the base with the blades in a safe area, out of reach from person(s) or children. The blades are sharp and will cause harm if not handled carefully.
- The container is separate from the blender base with blades,  
**DO NOT** unscrew the container while in use upright. Make sure to turn blender upside down before unscrewing the container, otherwise the contents will spill.

## MAGNETIC SAFETY DESIGN

This product has a magnetic safety design, when the container is not attached to the base of the blender, the device will not power on.

# PRODUCT OVERVIEW



# OPERATION

Please check if all the indicator lights are on before initial use. Please clean the cup body and base before use. This blender has double safety protection. It will work when the cup body are completely fixed at the base, then double click the switch.



1. Cut the fruit into small pieces. (1.5\*1.5cm)



2. Put the fruit into the cup body, the fruit is filled around 60%, adding some water, the cup body is filled around 80%.



3. Tighten the cup body and base, make sure the magnet is vertical to switch, then you turn the blender upside down, double click the switch.



4. When mixing is finished, turn off the switch, upside down the cup body, screw off the base, then you can enjoy the juice.



# CLEANING & MAINTENANCE

## Cleaning the motor unit

Always unplug the unit from the power outlet and turn off the switch before cleaning. Wipe the motor unit over with a clean cloth after each use.

### **WARNING!**

Never immerse the motor unit in water or wash it under running water. The blade is very sharp: take extreme care when handling it! To avoid accidental cuts, do not leave it soaking in water.

## Cleaning the accessories

All the accessories can be washed by hand in warm water with a soft cloth or sponge and a little washing-up detergent. Rinse and dry thoroughly with a soft cloth.

The accessories of this blender can't be disinfected by microwave or hot water over 80°C.

It is prohibited to wash accessories in washing equipment, such as dish-washing machine. It is prohibited to wash it with steel ball or abrasiveness or corrosivity cleanser.

## Storage

Make sure that your appliance and all its accessories are completely dry before putting them away. Store the appliance assembled, in a cupboard out of reach of children. Do not store anything on top of the appliance.

## Responsible disposal

At the end of its service life, unplug the unit and cut off the cord. Do not throw this appliance out with your household rubbish. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

**WARNING: THIS PRODUCT IS POWERED AND WILL TURN ON, PLEASE BE CAREFUL WHEN UNPACKING, PREPARING FOOD OR WHILE IN USE. DO NOT PLACE HANDS NEAR BLADES TO AVOID INJURY. APPLIANCE SHOULD NOT BE USED UPSIDE DOWN/INVERTED.**

# TROUBLESHOOTING

## Troubleshooting

If your products stops working, contact our call centre at [info@ayonz.com](mailto:info@ayonz.com).

**Do not attempt to open and repair the unit yourself.**

Problem	Possible cause and solution
Indicator light is off, unable to start.	Battery low. Charging 4-5 hours.
Indicator light flicker, unable to start.	The cup of body is not tighten to the base. Tighten the body and base, magnet is vertical to switch.
Stop working, indicator flicker.	No food at cup body. Add the food at cup body.
Stop working, indicator flicker.	Food is too thick or volume too big, motor overload protection. Add some liquid or make the food to smaller size, restart it.
Water leaking.	The sealing ring is not install properly. Install the sealing ring.

# SPECIFICATIONS

Input	5Vdc 1A
Battery Type/Capacity	18650 / 2000mAh*2
Motor Speed	18000 rpm/min.
Charging Time	About 3-5 hours
Single Working Time	30S
Dimensions	83 (w) x 83 (d) x 246 (h) mm
Weights	Net: 0.47 kg / Gross: 0.79 kg

# Q B E L L

**CUSTOMER HELPLINE:** [info@ayonz.com](mailto:info@ayonz.com) / 02 8279 8606

**DISTRIBUTED BY:** Ayonz Pty Ltd

