


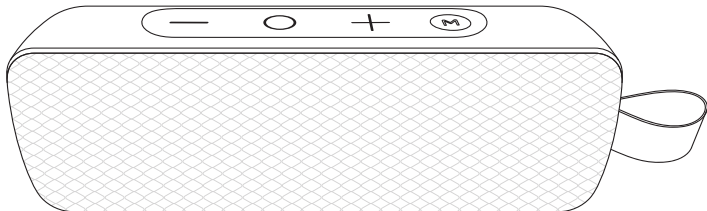


Portable Speaker

Model: BT300



INSTRUCTION MANUAL

Product Overview

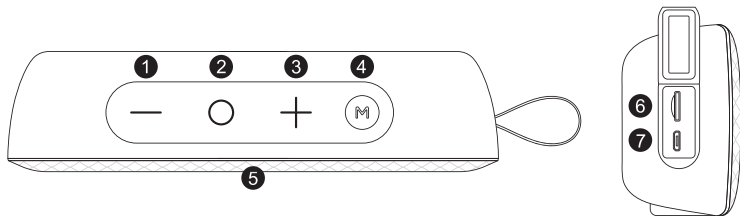

- ① Volume down / previous track / previous channel
- ② Power on / off / play / pause
- ③ Volume up / next track / next channel
- ④ Mode switch / search FM channel

- ⑤ LED indicator light
- ⑥ TF card slot
- ⑦ Micro USB charging port

Charging

- Connect the included USB cable to the charging port on the side of speaker with a working USB power source. Charging status light will turn on red and then turn off once the charging cycle is completed.

Recharge the speaker in full before using it for the first time.

Power On / Off

- Press and hold  until “Power on” plays to turn on the speaker.
- Press and hold  until “Power off” plays to turn off the speaker.

TWS Connection (Before Bluetooth Pairing)

1. Press and hold  until “Power on” plays to turn on the speaker.
 2. Short press both  and  at once on either speaker to connect to TWS.
 3. The voice prompt “TWS Connected” will be played once connected.
 4. The first speaker's blue indicator will flash and the second speaker's indicator will turn blue.
- Short press both  and  at once on either speaker to disconnect to TWS.
 - Two speakers of the same model can engage TWS coupling to make TWS pair.

Bluetooth Pairing

1. Turn on the speaker by pressing **O** . Blue indicator will flash. Enable the Bluetooth feature on the device and initialise the search function.
 2. Select Bluetooth ID “BT300” and confirm to pair with. The voice prompt “Bluetooth Connected” will be played once connected.
- Press **O** twice and disable the Bluetooth feature on the connected device after use. By default, the speaker will automatically search and pair with the last connected device after being turned on.

Playing Music

- After pairing, launch music apps on mobile device, press **O** to start playing music and press again to pause.

Skipping Music Track

- Press and hold **+** once to skip to the next track.
- Press and hold **—** once to skip to the previous track.

Volume Up / Down

- Short press on either **+** or **—** to adjust the volume to the desired level.

Switching Modes

- Press  once to switch between modes which loop in the sequence of TF (MicroSD) mode (when a TF card/ MicroSD card is inserted) > Bluetooth mode > FM mode.

3 EQ modes

- Press and hold  to switch EQ modes which loop in the sequence of Music mode > Bass mode > Vocal mode.

Media File Playback

- Insert TF card / MicroSD card into the TF card slot on the side of the speaker. Press  to switch the audio mode to media files playback.

Radio Operation

- Press  twice to scan for radio stations.
- Press and hold  once to skip to the next radio station.
- Press and hold  once to skip to the previous radio station.

Hands-Free Conversation

- Speaker plays the voice prompt “Incoming call” when connected device receives an incoming call.
- Press  to pick up the incoming call.
- Press  again to end the call.
- Press  twice to reject the incoming call.

Note: Hands-free conversation feature allows users to remotely accept voice call from direct number dial in and certain instant messaging apps by pressing  on the speaker. Some instant messaging apps do require users to confirm the acceptance of voice call within the app only.

Specification

- Model: BT300
- Officeworks Product Code: QDBTSK6BK/QDBTSK6GY
- Bluetooth version: 5.0
- Built-in 2000mAh rechargeable lithium battery
- Operating range: up to 10m
- Output: 5W x 2
- Listening time: up to 7 hours
- Charging time: 3 hours
- Standby time: 72 hours

Package Contents

- Portable speaker x 1
- Micro USB charging cable (30cm) x 1
- Instruction manual x 1
- Quick start guide x 1

WARNING

- Do not connect this cable to products other than BT300 Portable Speaker. Connecting this cable to other devices might cause damage to both cable and the device.
- To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.

Product Warranty – Valid for Australian Customers Only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as specified during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product;

- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competition & Consumer Act 2010. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Officeworks Ltd. is under license.

OFFICEWORKS LTD
236-262 EAST BOUNDARY ROAD
EAST BENTLEIGH VIC 3165 AUSTRALIA

MADE IN CHINA