 


STILFORD

ASSEMBLY INSTRUCTIONS

STILFORD 1200/1500/1800x900mm SCREEN

JBSC129WBK / JBSC129WBE / JBSC129WGR / JBSC129WGE
JBSC129BBK / JBSC129BBE / JBSC129BGR / JBSC120BGE
JBSC159WBK / JBSC159WBE / JBSC159WGR / JBSC159WGY
JBSC159BBK / JBSC159BBE / JBSC159BGR / JBSC159BGY
JBSC189WBK / JBSC189WBE / JBSC189WGR / JBSC189WGY
JBSC189BBK / JBSC189BBE / JBSC189BGR / JBSC189BGY

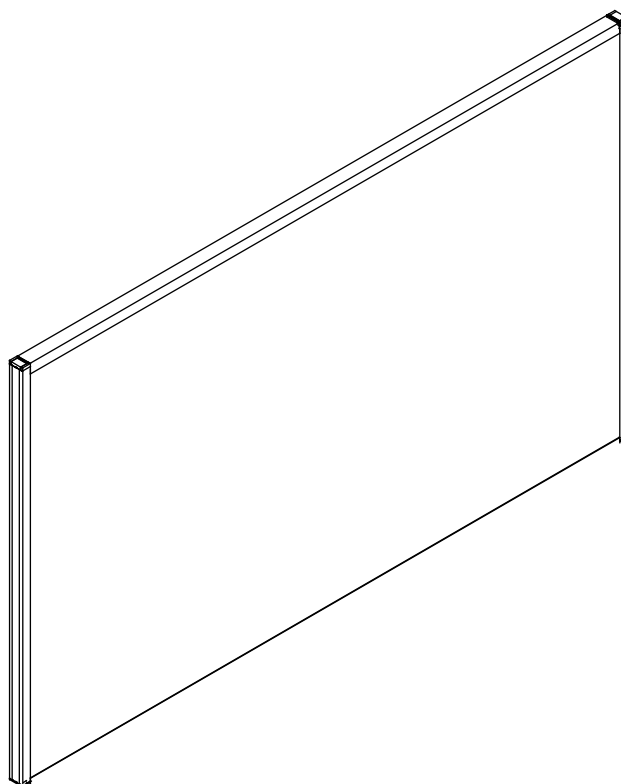

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

1 Carton

For spare parts or hardware call 1300 OFFICE (1300 633 423)

Estimated Assembly Time: 15 minutes

Customer Service Contact Details



Spare Parts & Hardware

1300 OFFICE (1300 633 423)

 
People Required



General Advice



Tools Required



CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact 1300 OFFICE (1300 633 423)
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all screws are firmly secured.
- Check that all screws are securely tightened at least every 4 months.

 
 
 

WARNING

- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

 
 


 

 
 
 
 
DANGER

- CHILDREN MUST BE SUPERVISED.

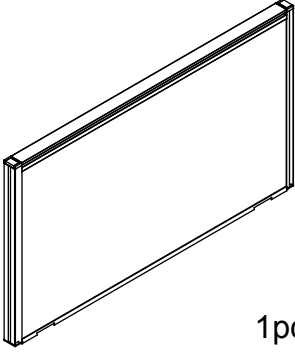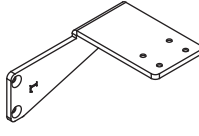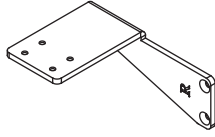Parts List


1  1pc	2  1pc	3  1pc
4  2pc		

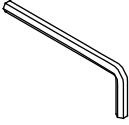Hardware List


A  1pc	B  M4x20 mm 8pcs	C  2pcs	D  M6x10 mm 4pcs
E  4pcs	F  M6x20 mm 4pcs	G  M6x25 mm 4pcs	H  2pcs
I  2pcs	J  M4x20 mm 8pcs		

Compatible with back to back or single desks

 Straight desk installation - Go to page 7

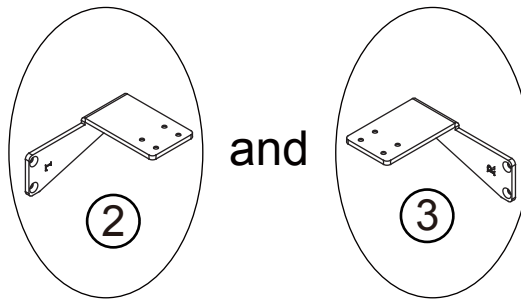


Estimated Assembly Time:
15minutes

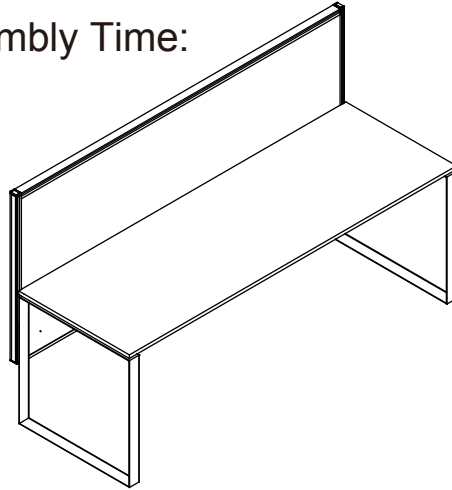 


Connect screen and desks side by side

 Estimated Assembly Time:
30minutes

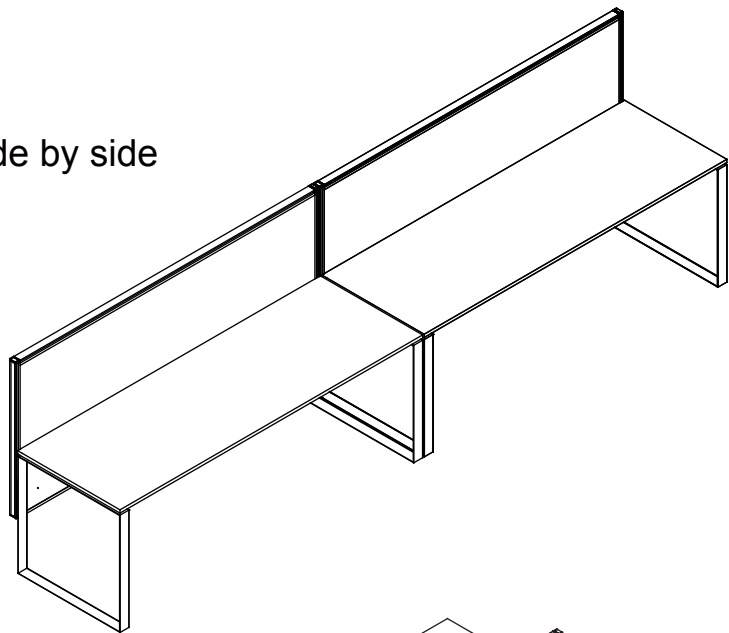

Desk back to back - Go to Step 1 & 6
W1800 Desk use W1500 Screen;
W1500 Desk use W1200 Screen.


 
Estimated Assembly Time:
20minutes

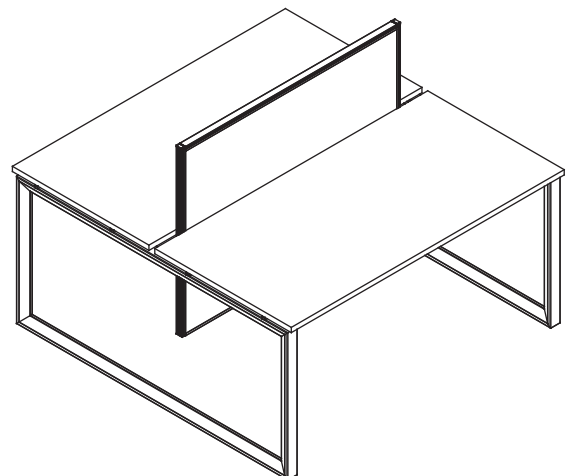

Compatible with back to back or single desks


Stilford Electric back to back installation
- Go to page 10

  Estimated Assembly Time:
10minutes

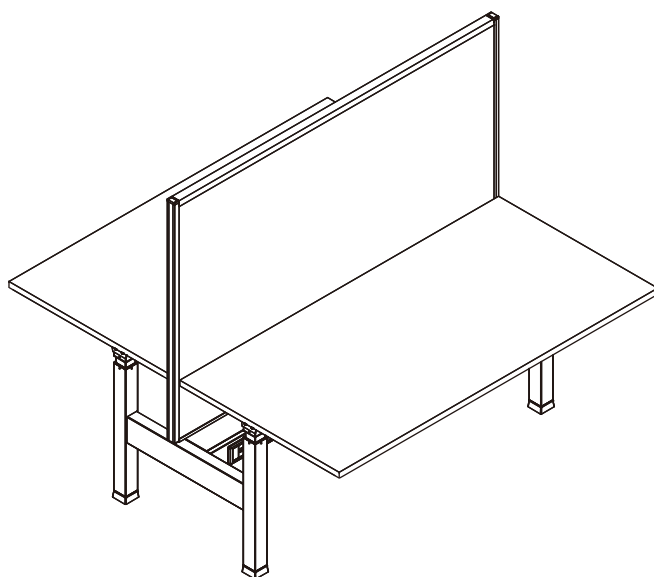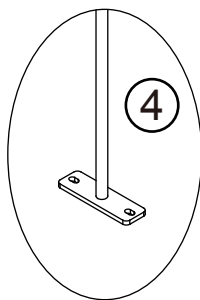


Connect screen and desks side by side

 
Estimated Assembly Time:
30minutes

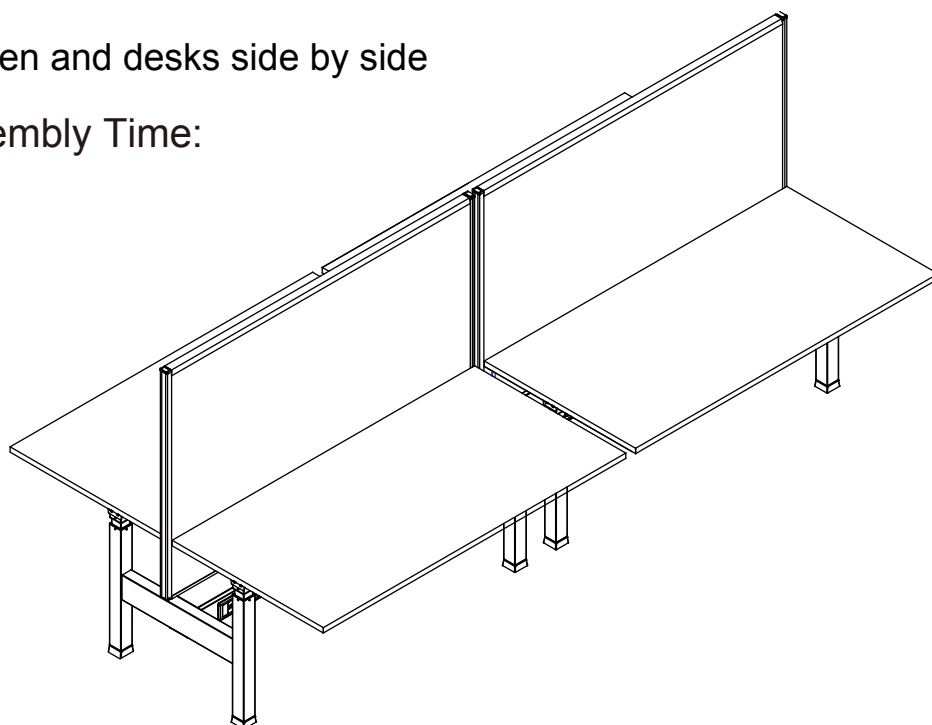

 Step 1

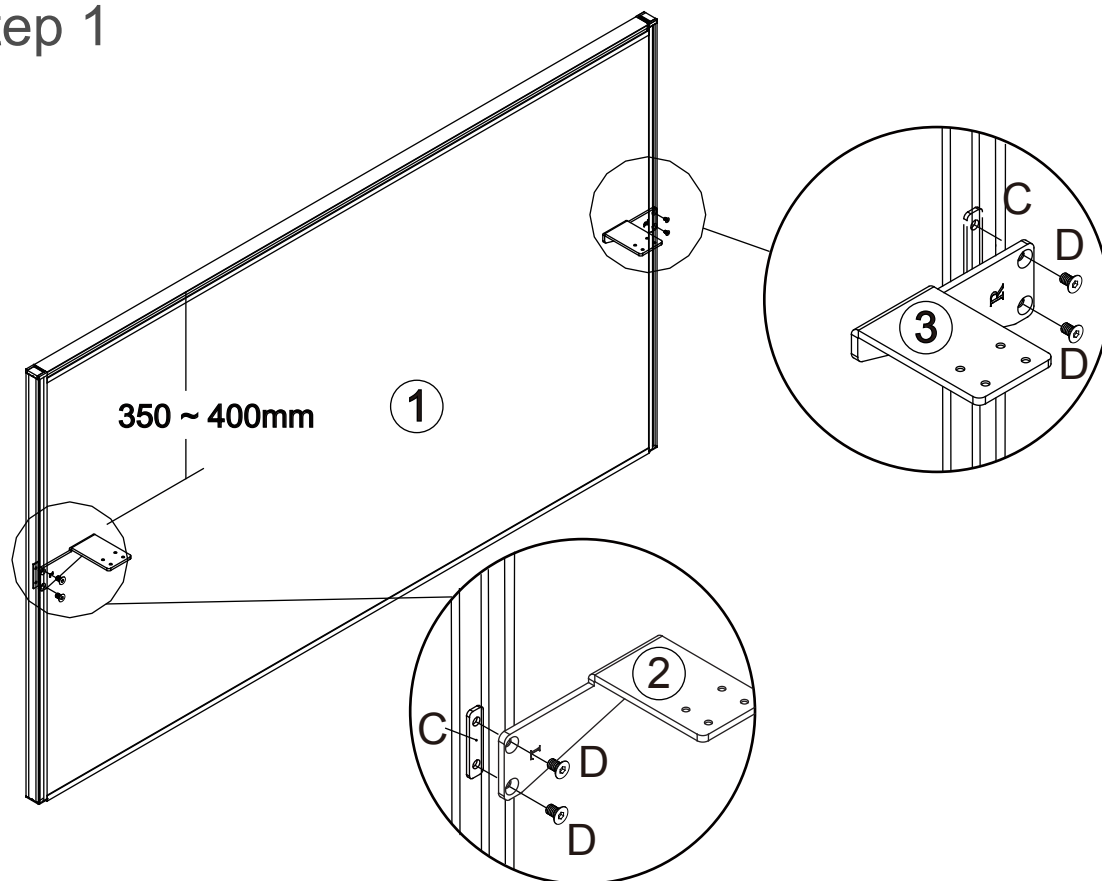


 Step 2

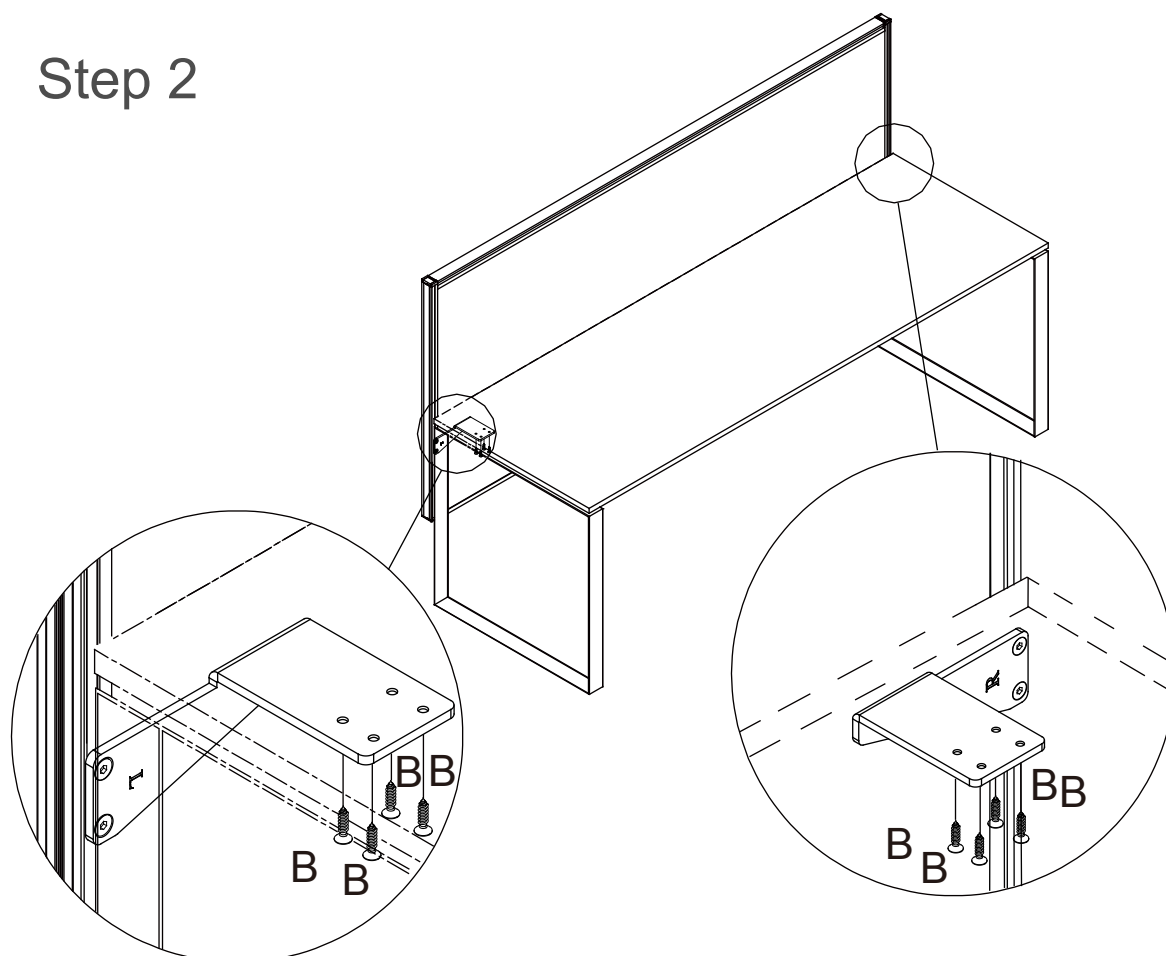


Step 3

 Connect screen and desks side by side

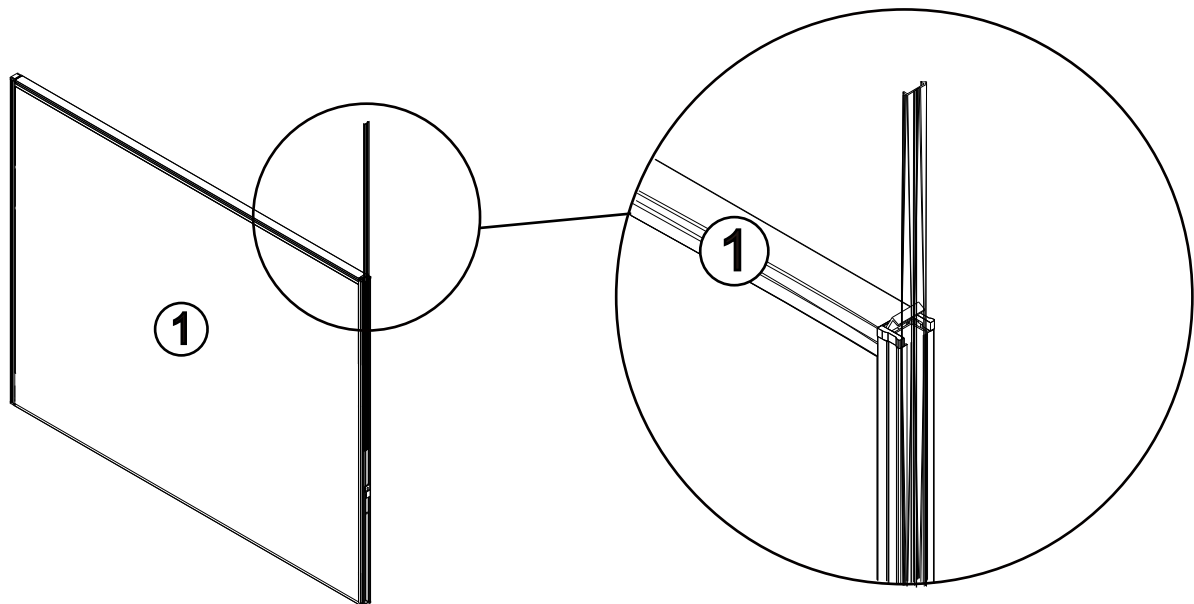


Open the cap and remove side covers


 
Step 4

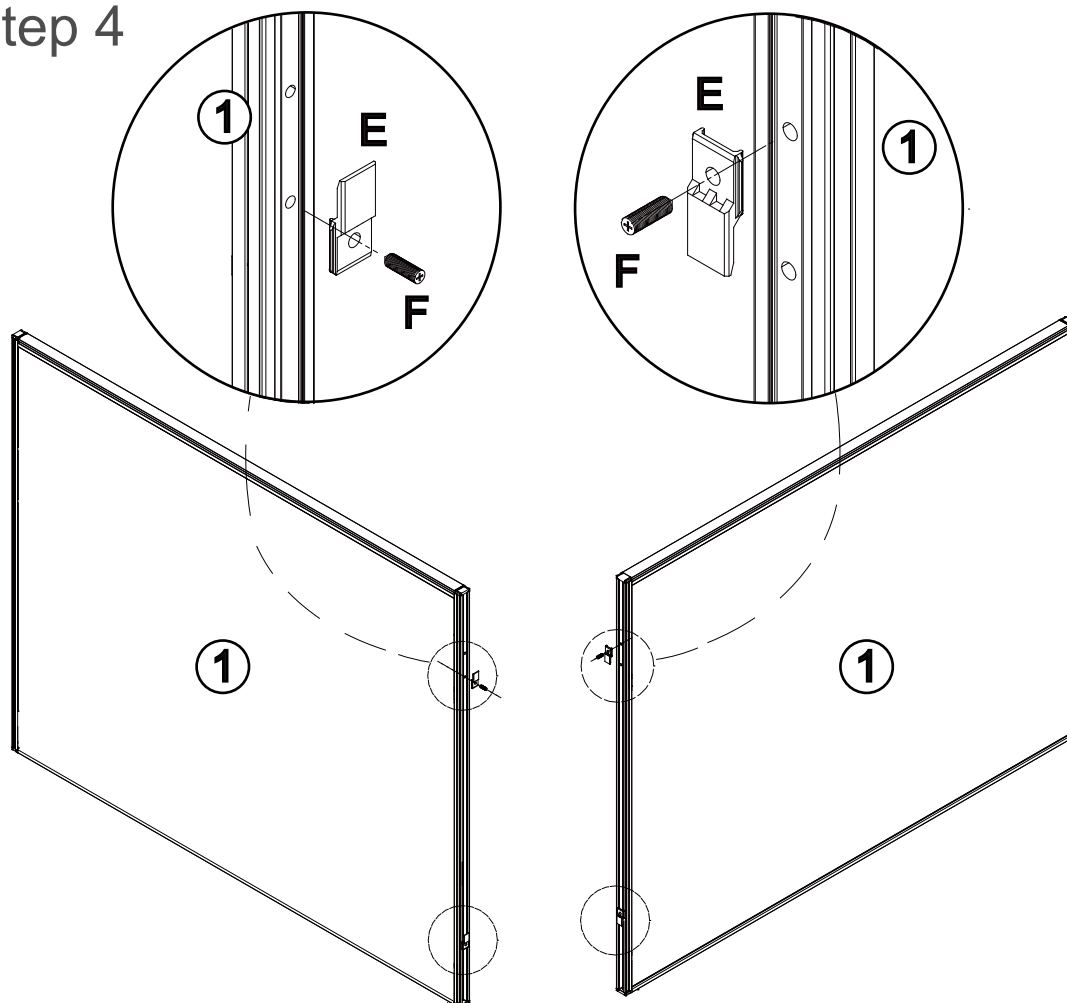

 Step 5



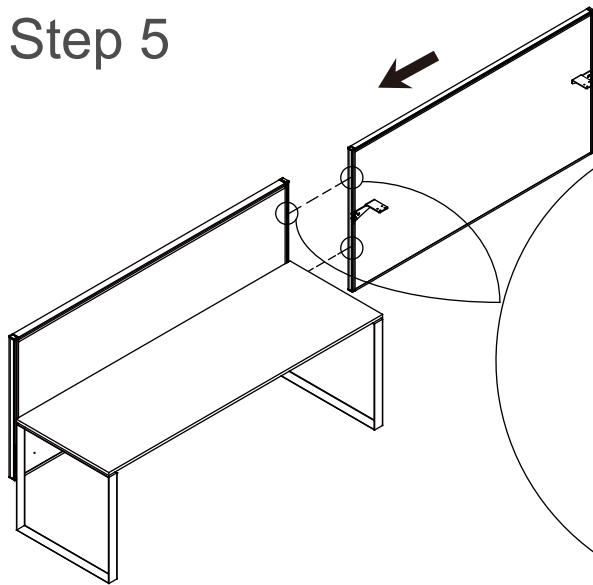


Repeat setp 1 and step 2

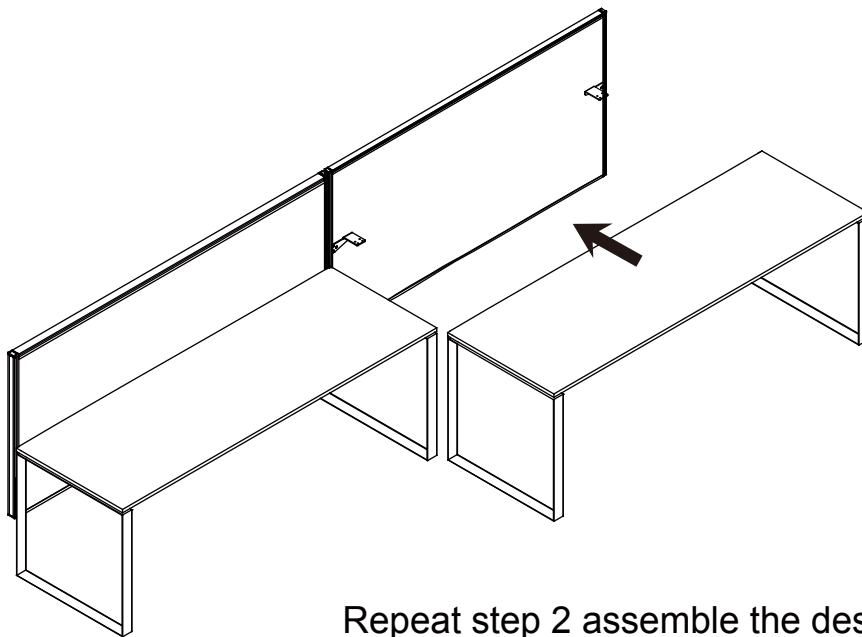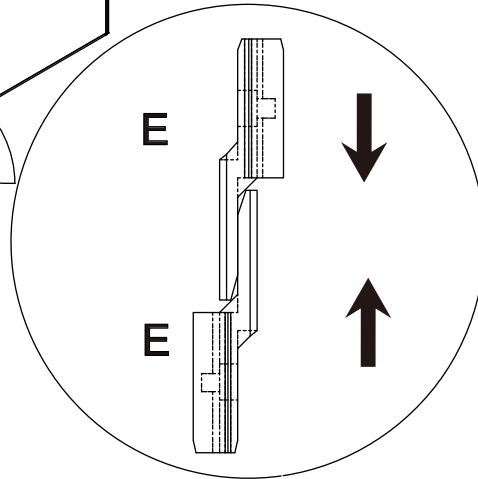  


Repeat step 2 assemble the desk to screen

   
Step 6

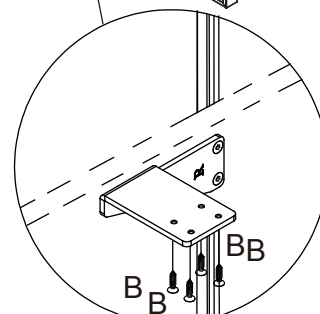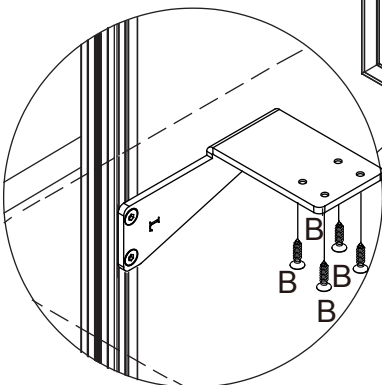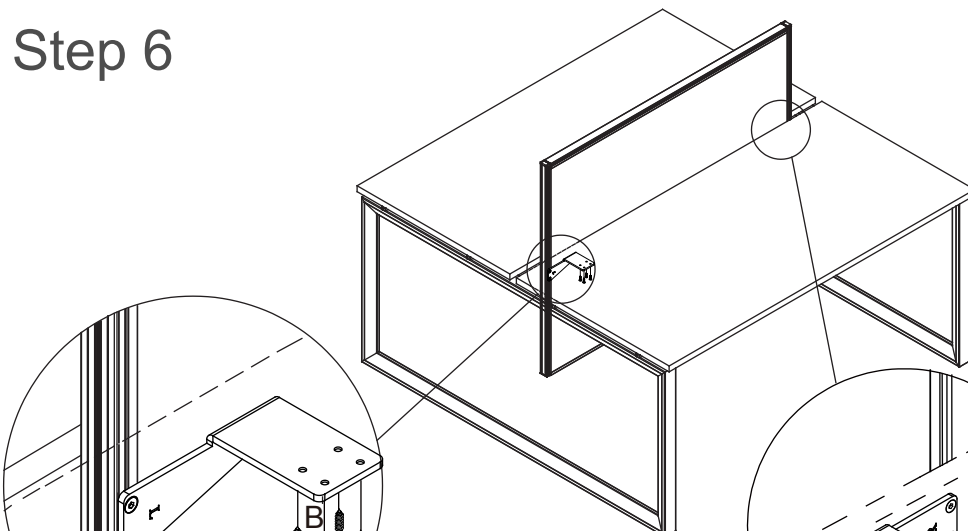

 
Step 7

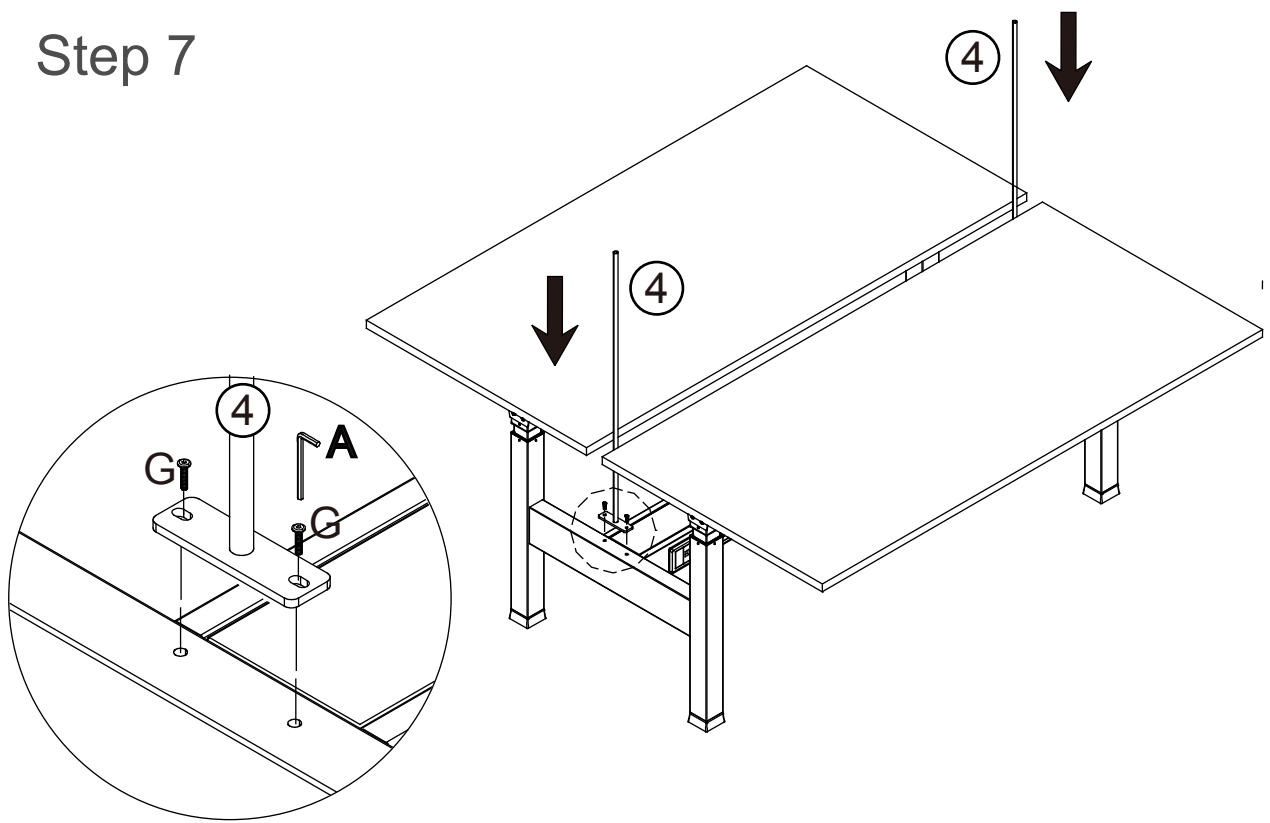

 Step 8

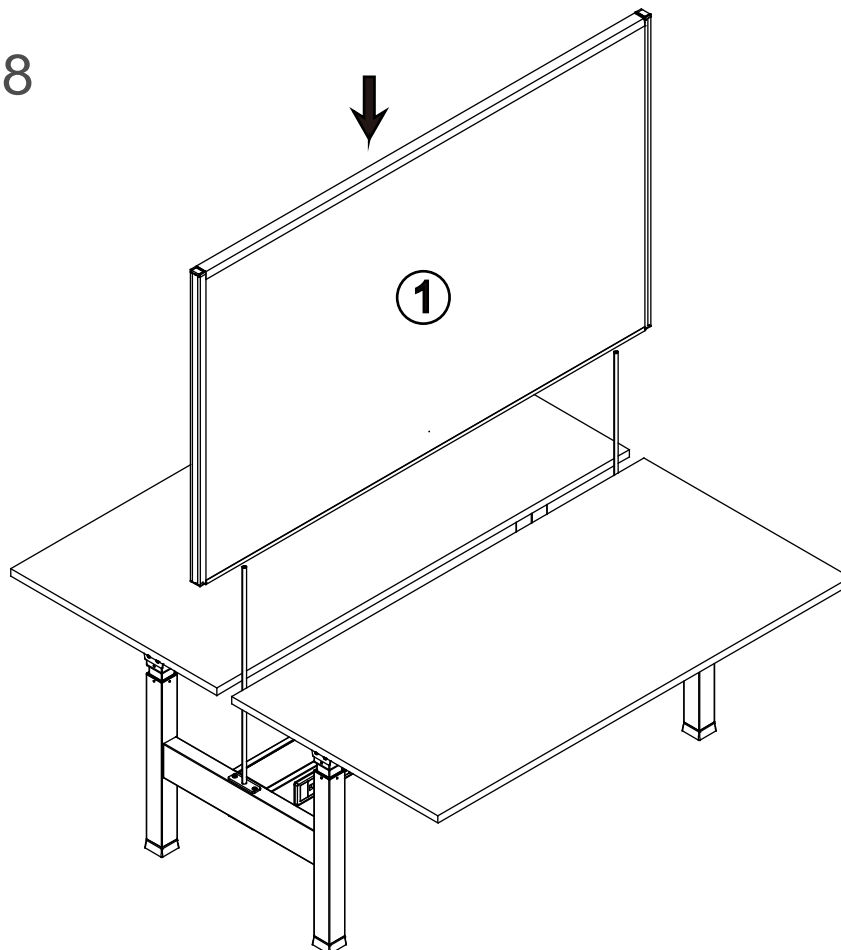


 Step 9

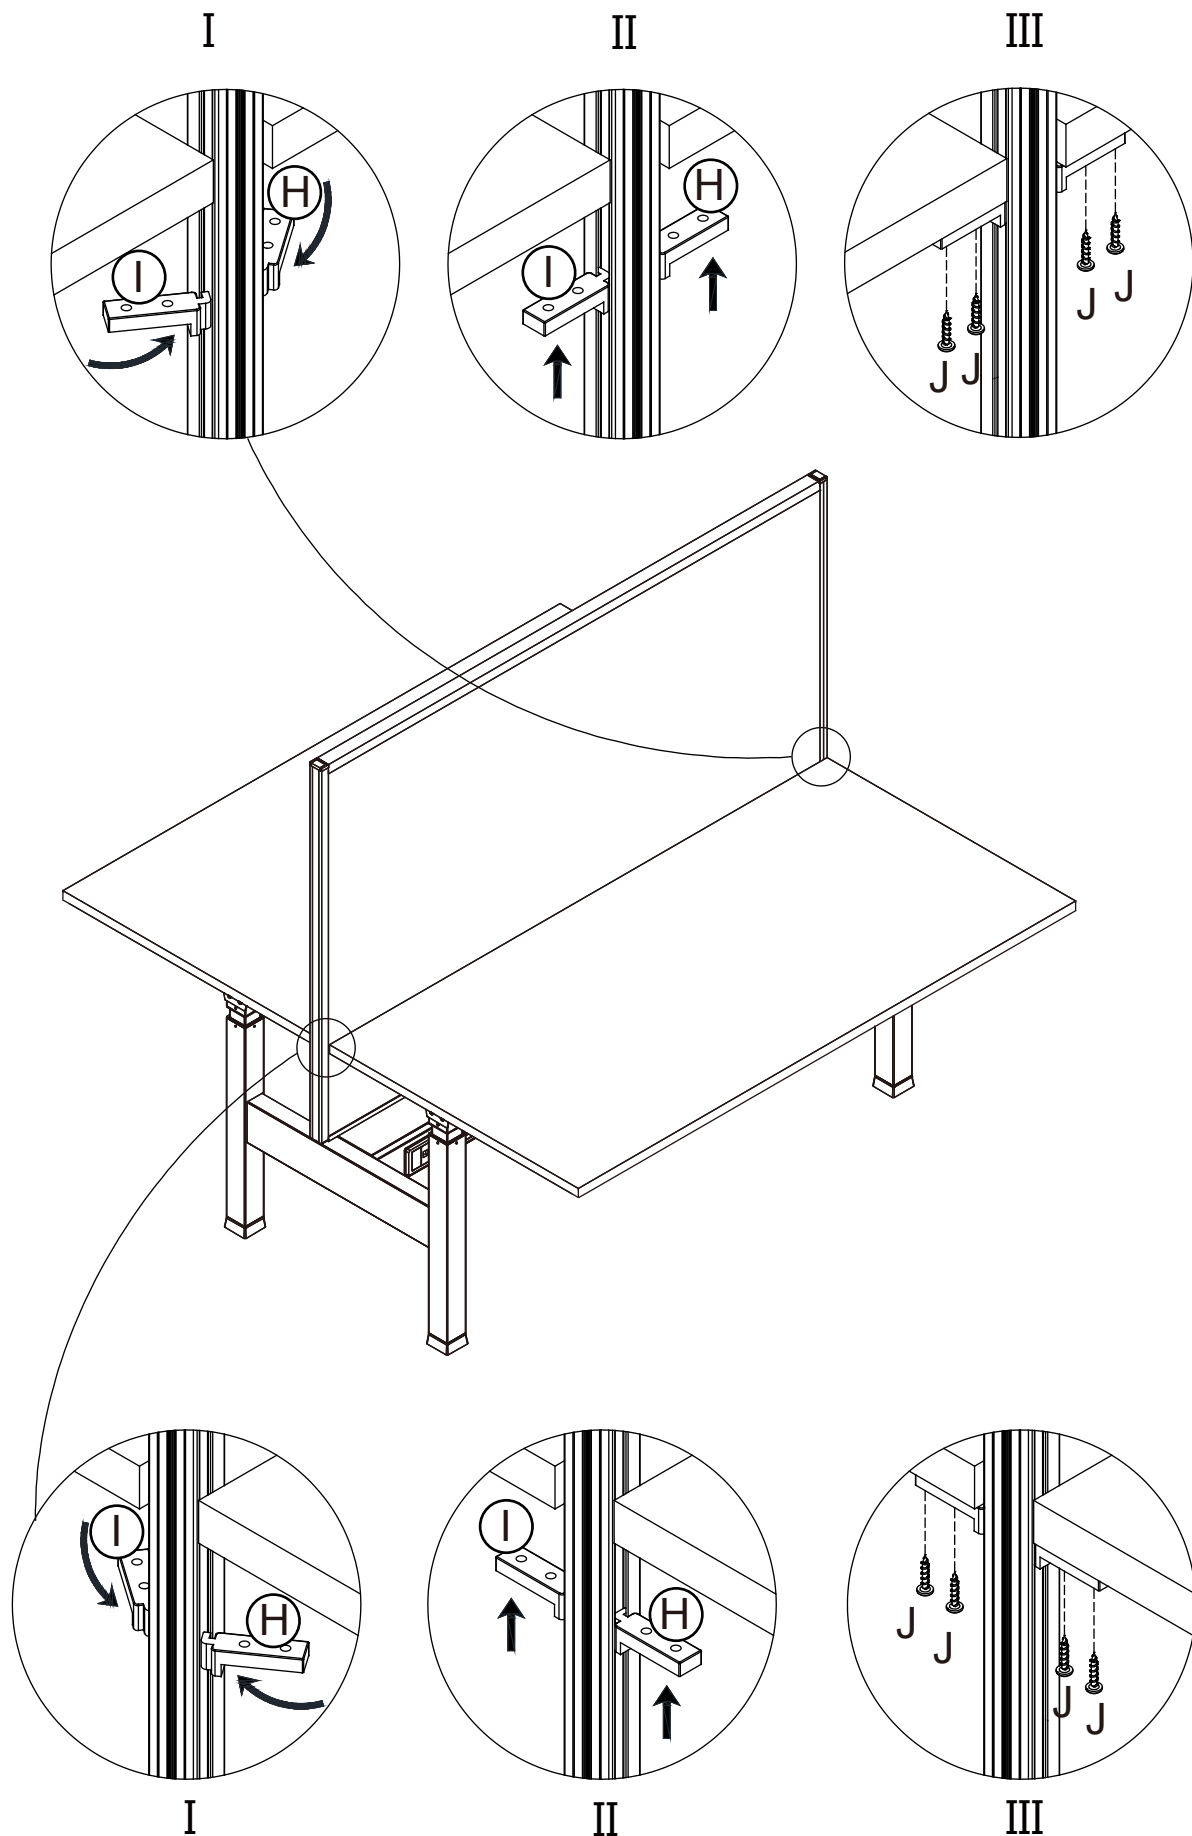


Step 10

 Connect screen and desks side by side

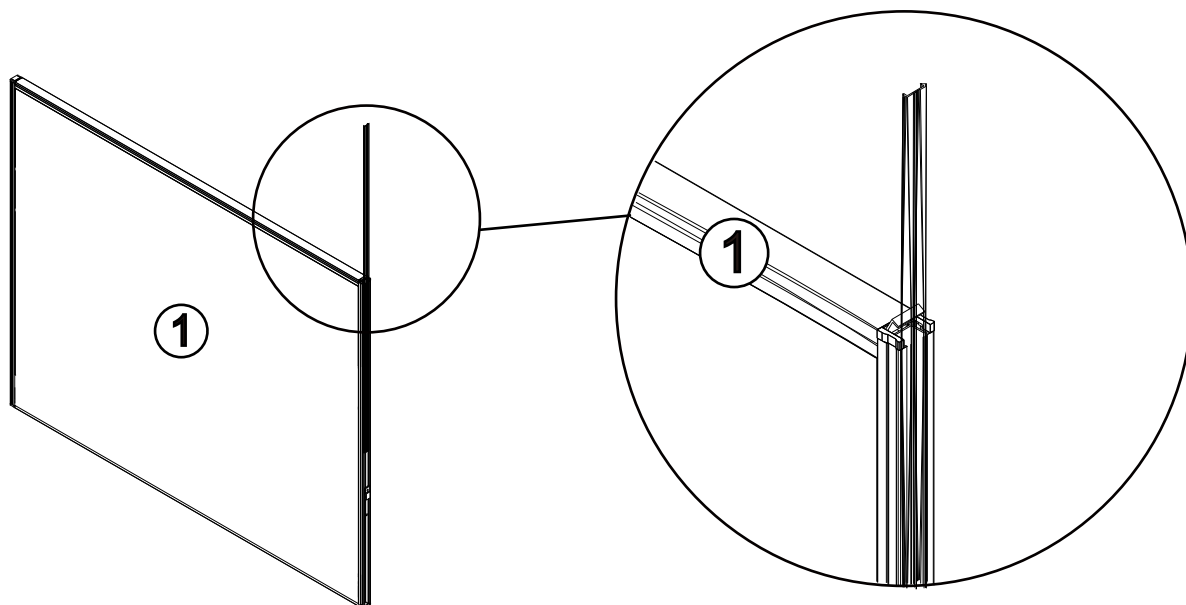

Open the cap and remove side covers

 Step 11


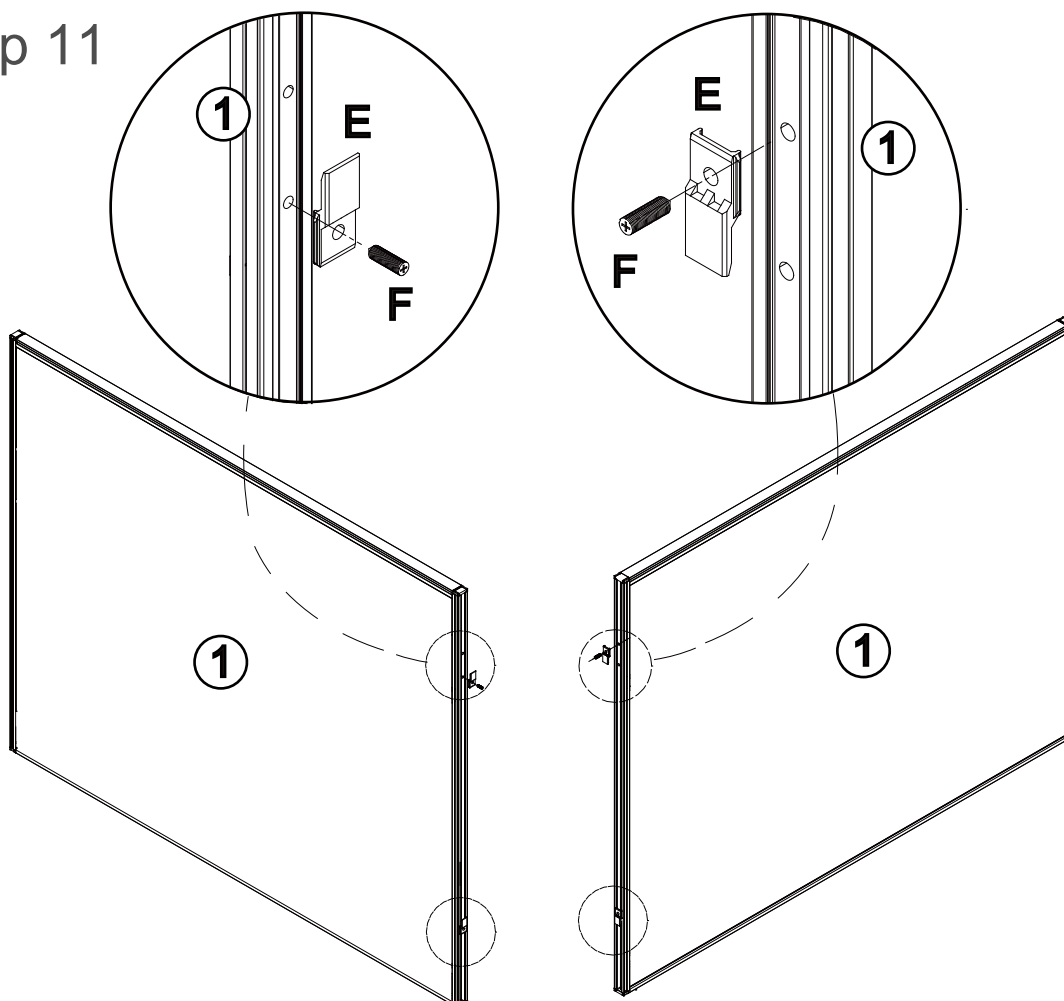


STILFORD SCREEN 4 WAY CONNECTOR


JBSC4W90BK/JBSC4W90WE



  
Hardware List

<p>E</p>  <p>8pcs</p>	<p>H</p>  <p>M6x10 mm 8pcs</p>
--	---

 Step 12

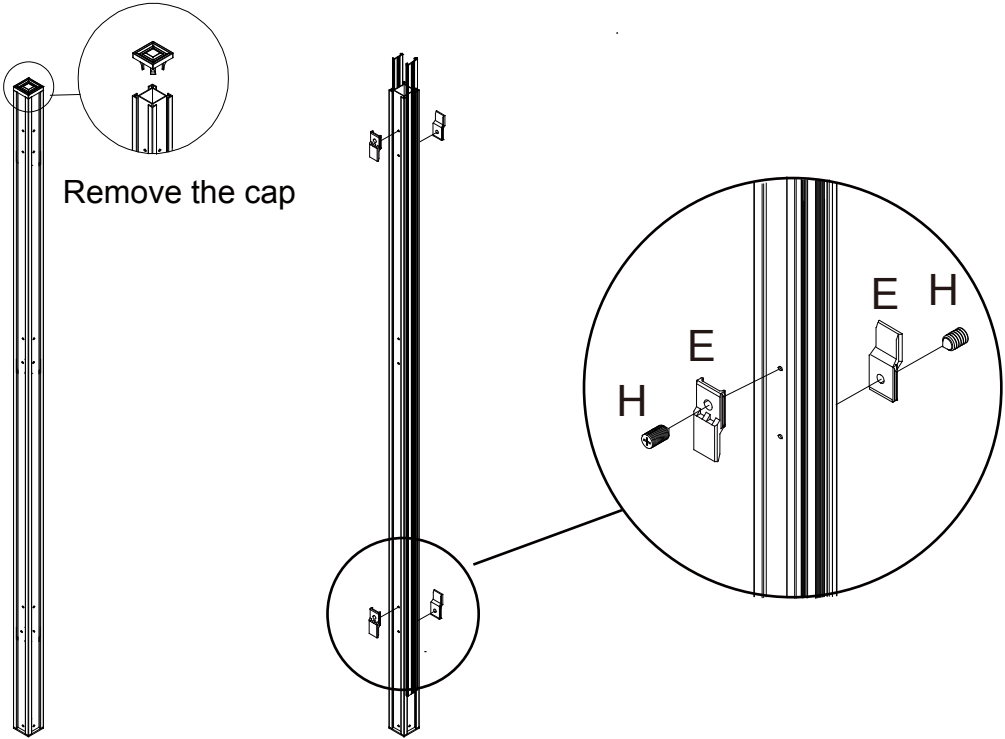


 Step 13

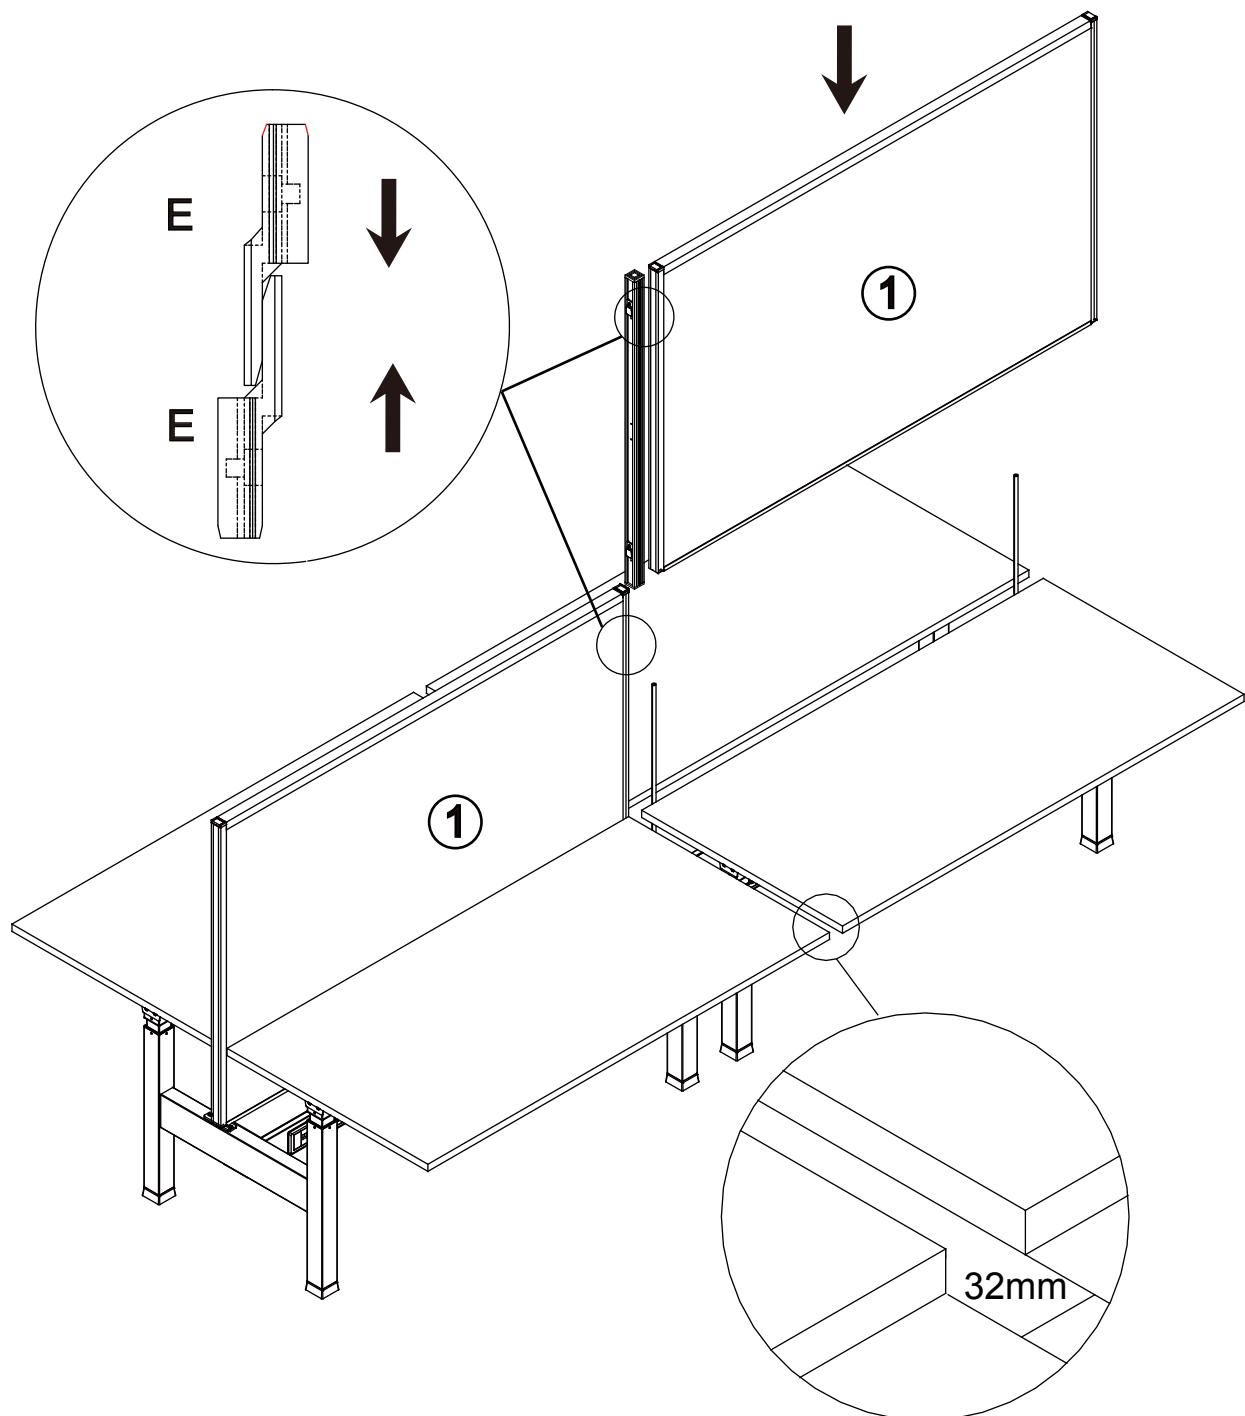


Step 14

 Estimated Assembly Time:
10minutes

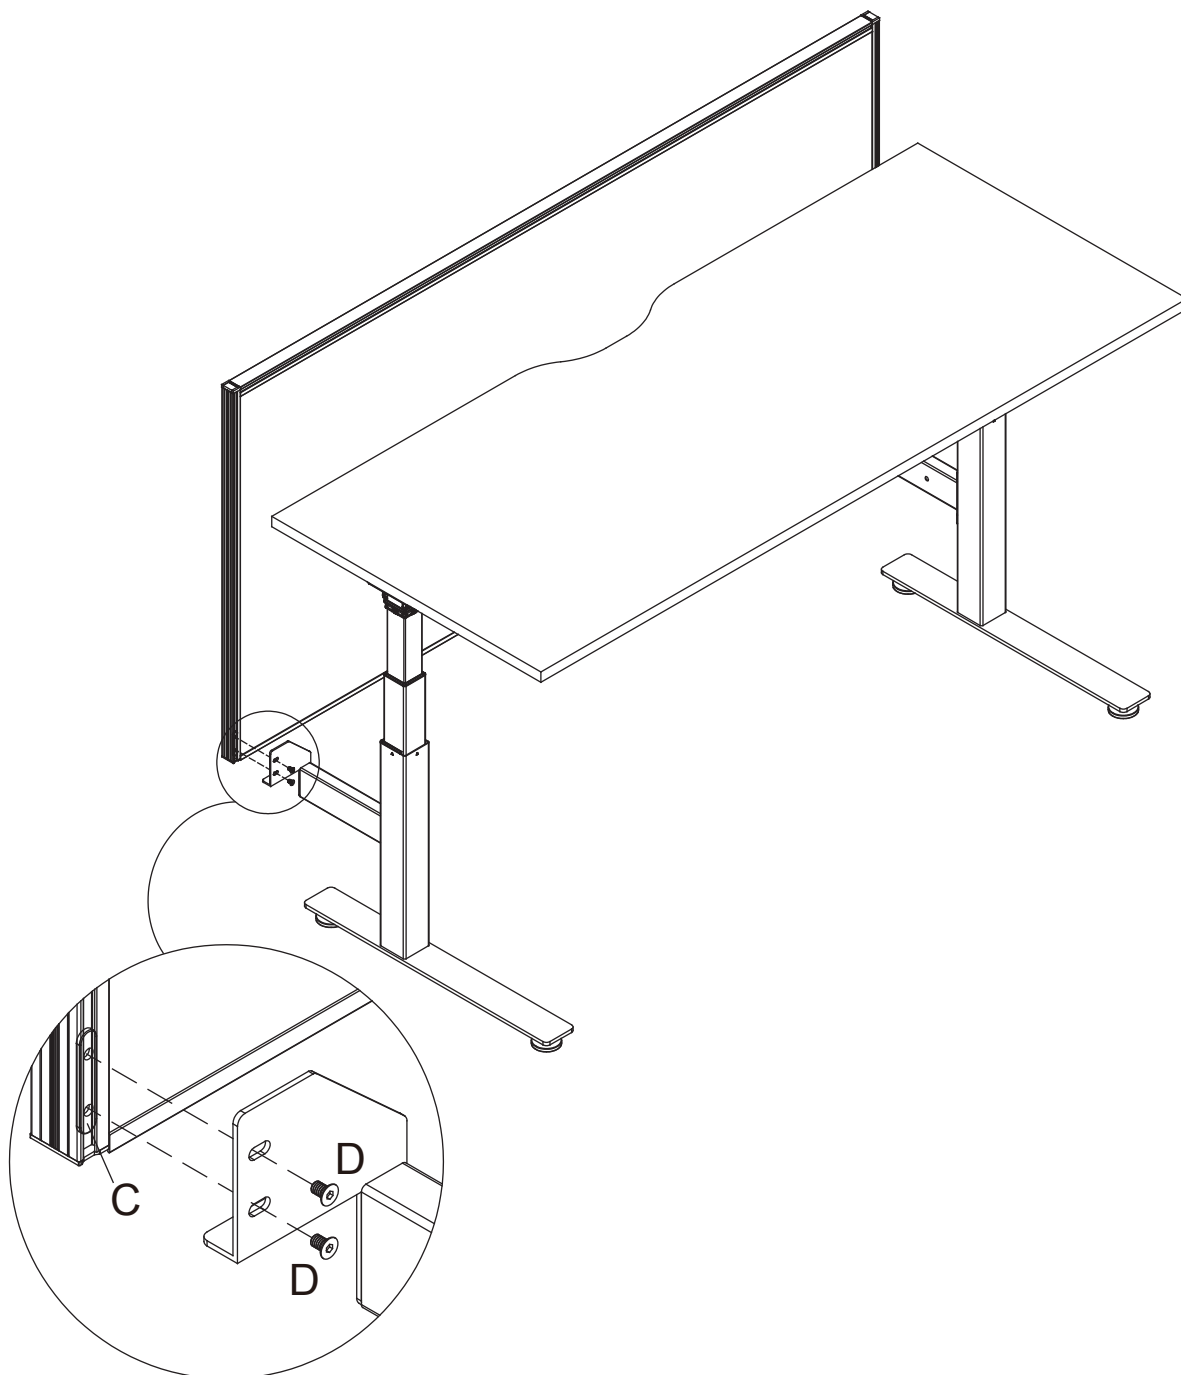

 Step 15

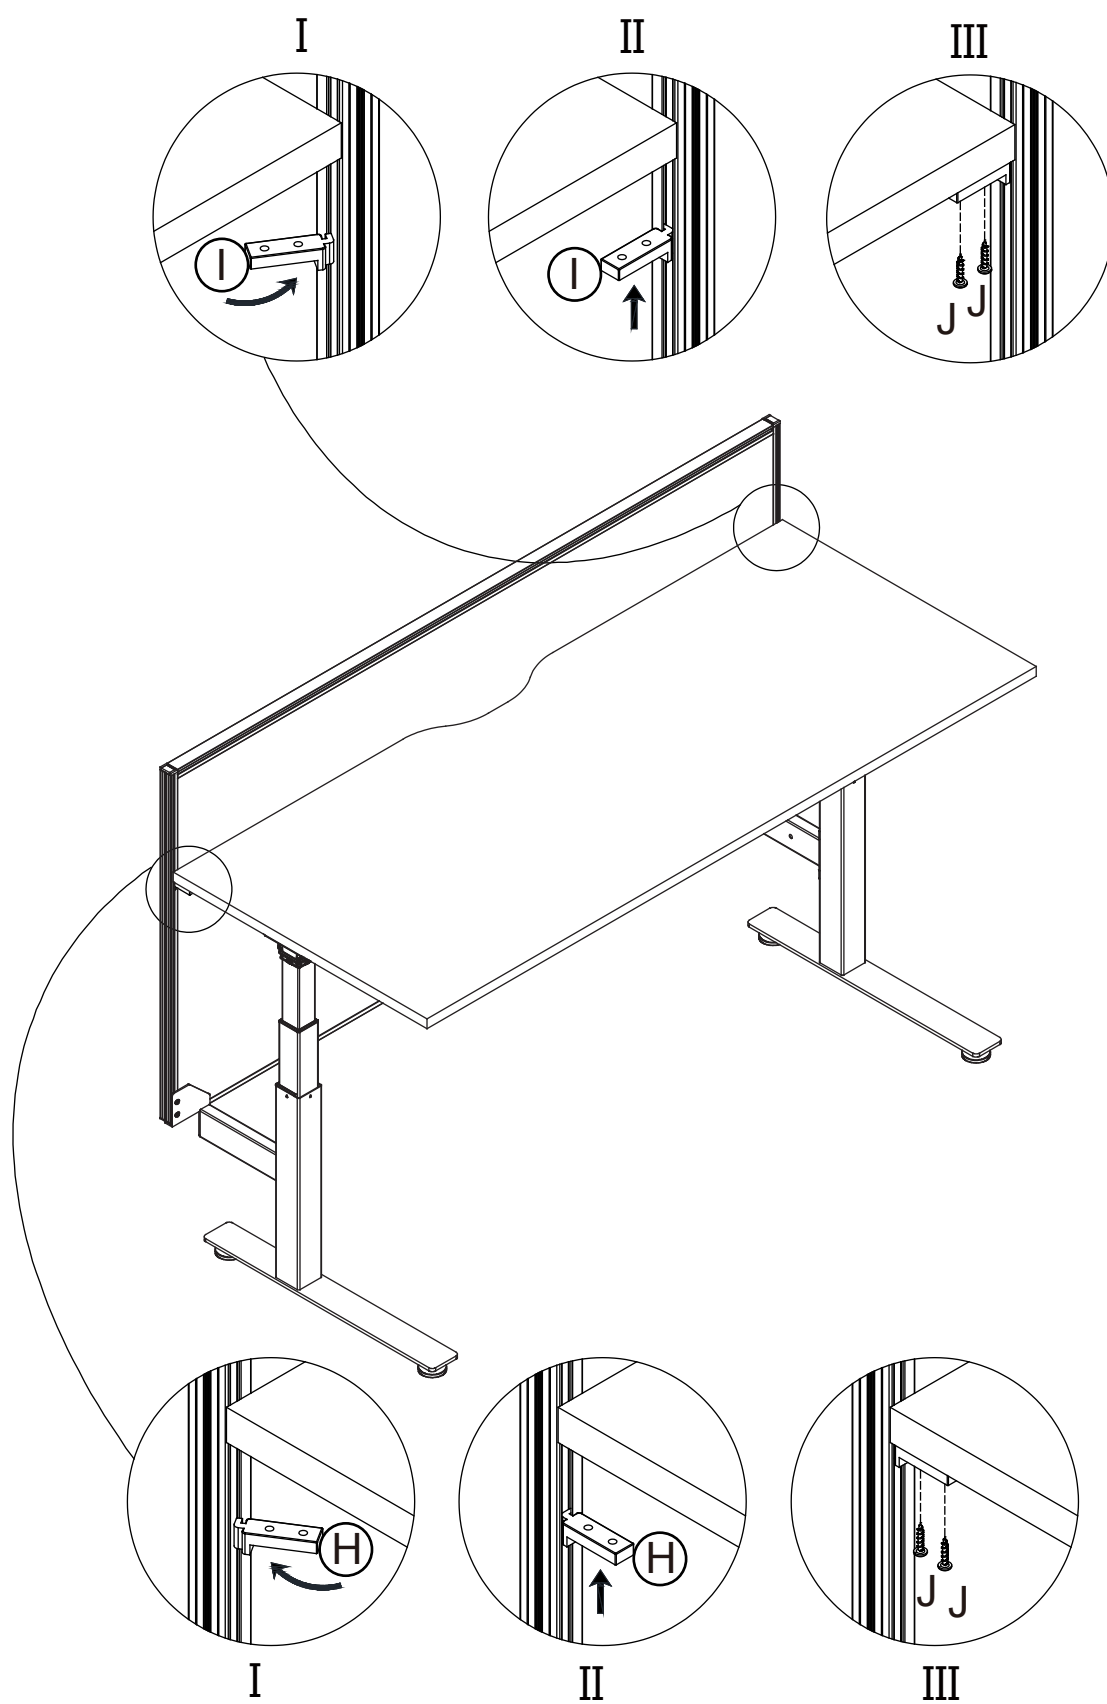

Warranty 15 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 15 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- To cosmetic damage;
 - To damage caused by consumables used in connection with the product (such as cleaning products);
 - Where the product has not been used in accordance with all provided instructions;
 - To damage arising from fair wear and tear;
 - Where the product has not been subject to reasonable use;
 - Where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty. If you'd like to know more about Officeworks' furniture product, please visit www.officeworks.com.au.