 




Typhoon

ASSEMBLY INSTRUCTIONS

1500/1800mm TYPHOON PRIME GAMING DESK
JBTYPE15BK, JBTYPE15BE, JBTYPE15RD, JBTYPE15WE
JBTYPE18BK

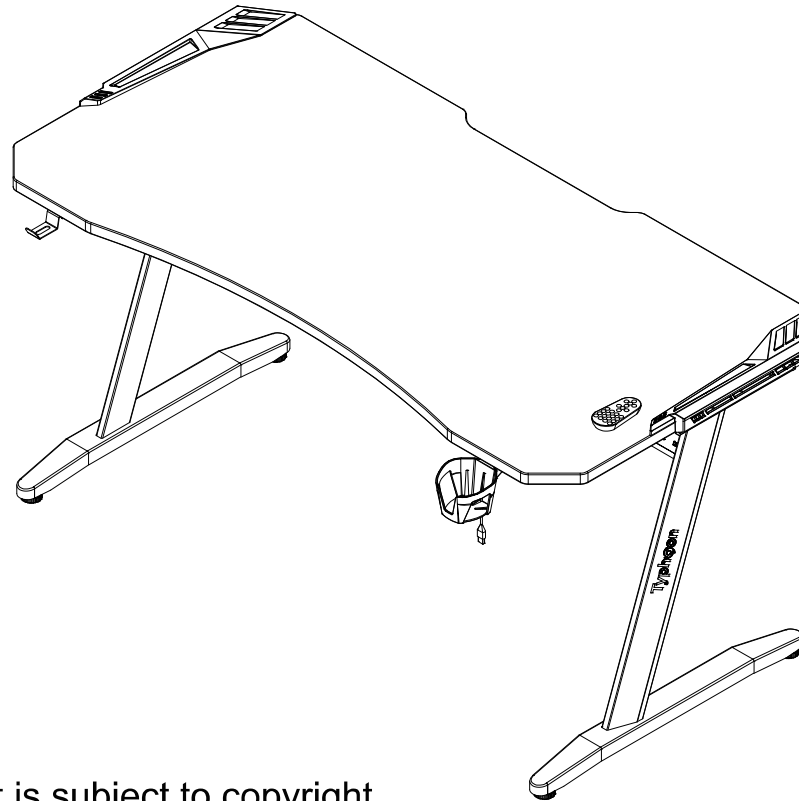

WEIGHT
CAPACITY



1 Carton

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

For spare parts or hardware call 1300 OFFICE (1300 633 423). 1/14

Customer Service Contact Details



Spare Parts & Hardware

1300 OFFICE (1300 633 423).

People Required



General Advice



Tools Required



CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact 1300 OFFICE (1300 633 423).
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts and screws are firmly secured.
- Check that all bolts and screws are securely tightened at least every 4 months.

WARNING

 
 
 
 
 
 




- Follow the user instructions for correct operation of the LED light.
- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

DANGER

- CHILDREN MUST BE SUPERVISED.

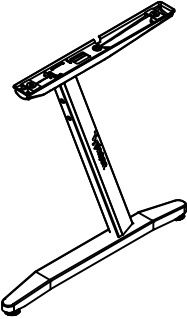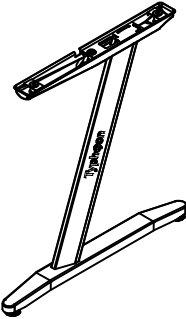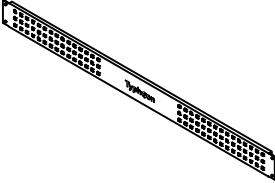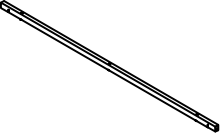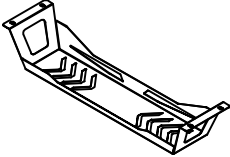 
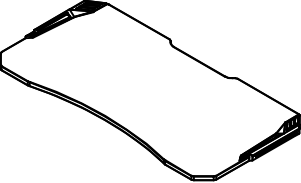 

This Assembly instruction covers both 1500mm and 1800mm sizes

Parts List

 
				
① x1	② x1	③ x1	④ x1	⑤ x1
				
⑥ x1	⑦ x1	⑧ x1	⑨ x1	⑩ x2

Hardware List

Hardware Spare Parts Number - HWTYPE1518

 
		
A x17(M6x16)	B x6(M6x16)	C x1 (4mm)

Hardware Spare Parts Number - HWTYPE15LE / HWTYPE18LE

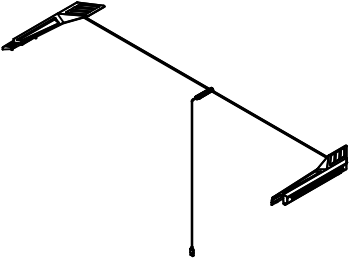


1 Set

Assembly

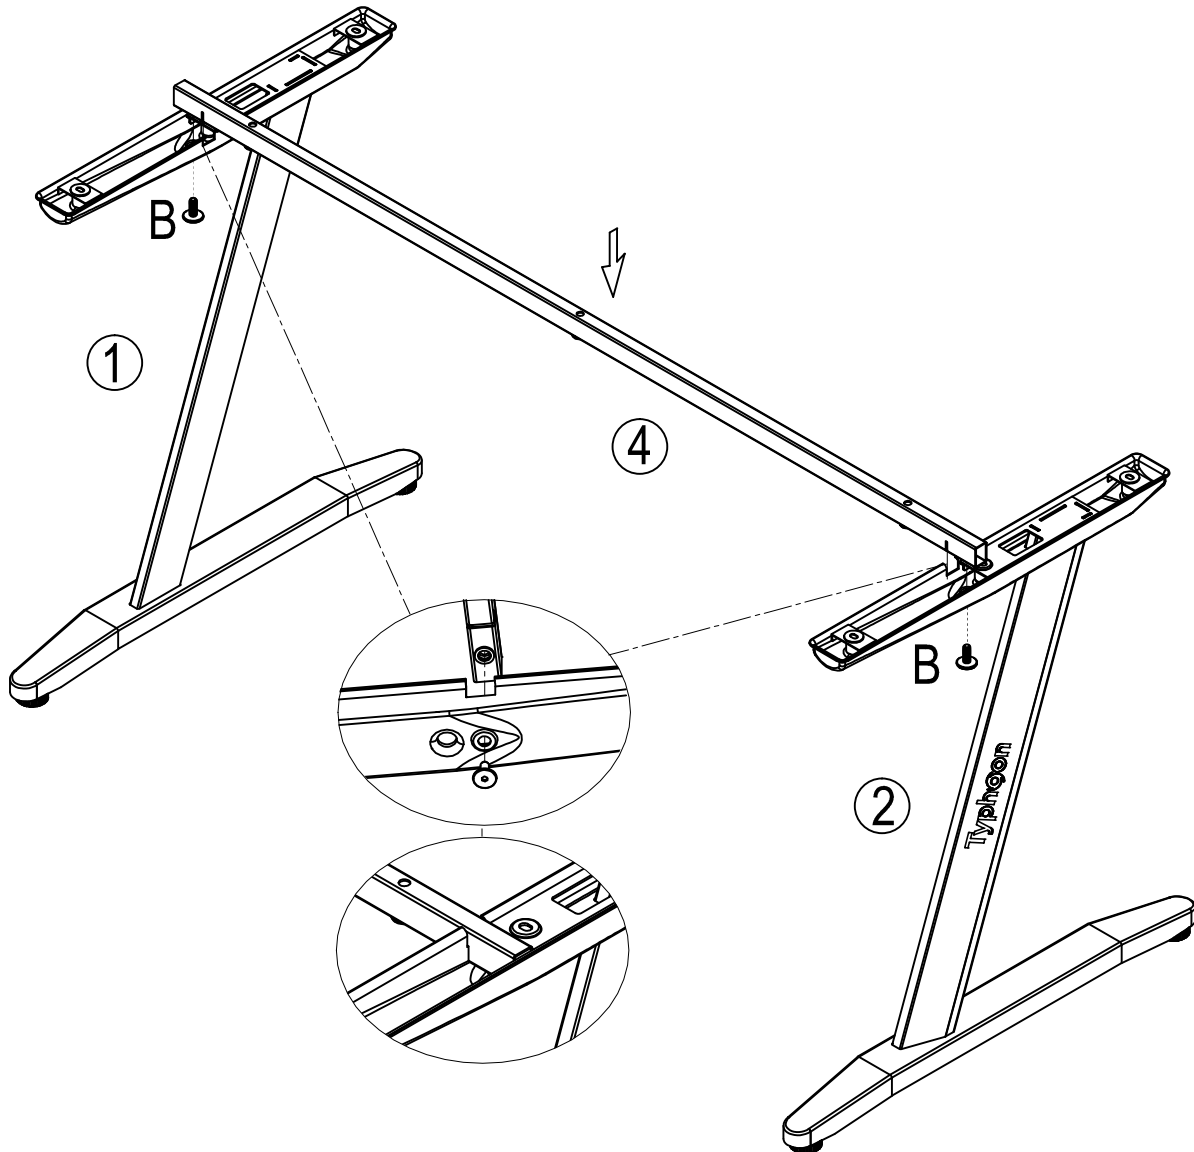 
Step 1

 



Connect the beam 4 with the legs 1 and 2

 
 
	
B x2	C x1

Step 2

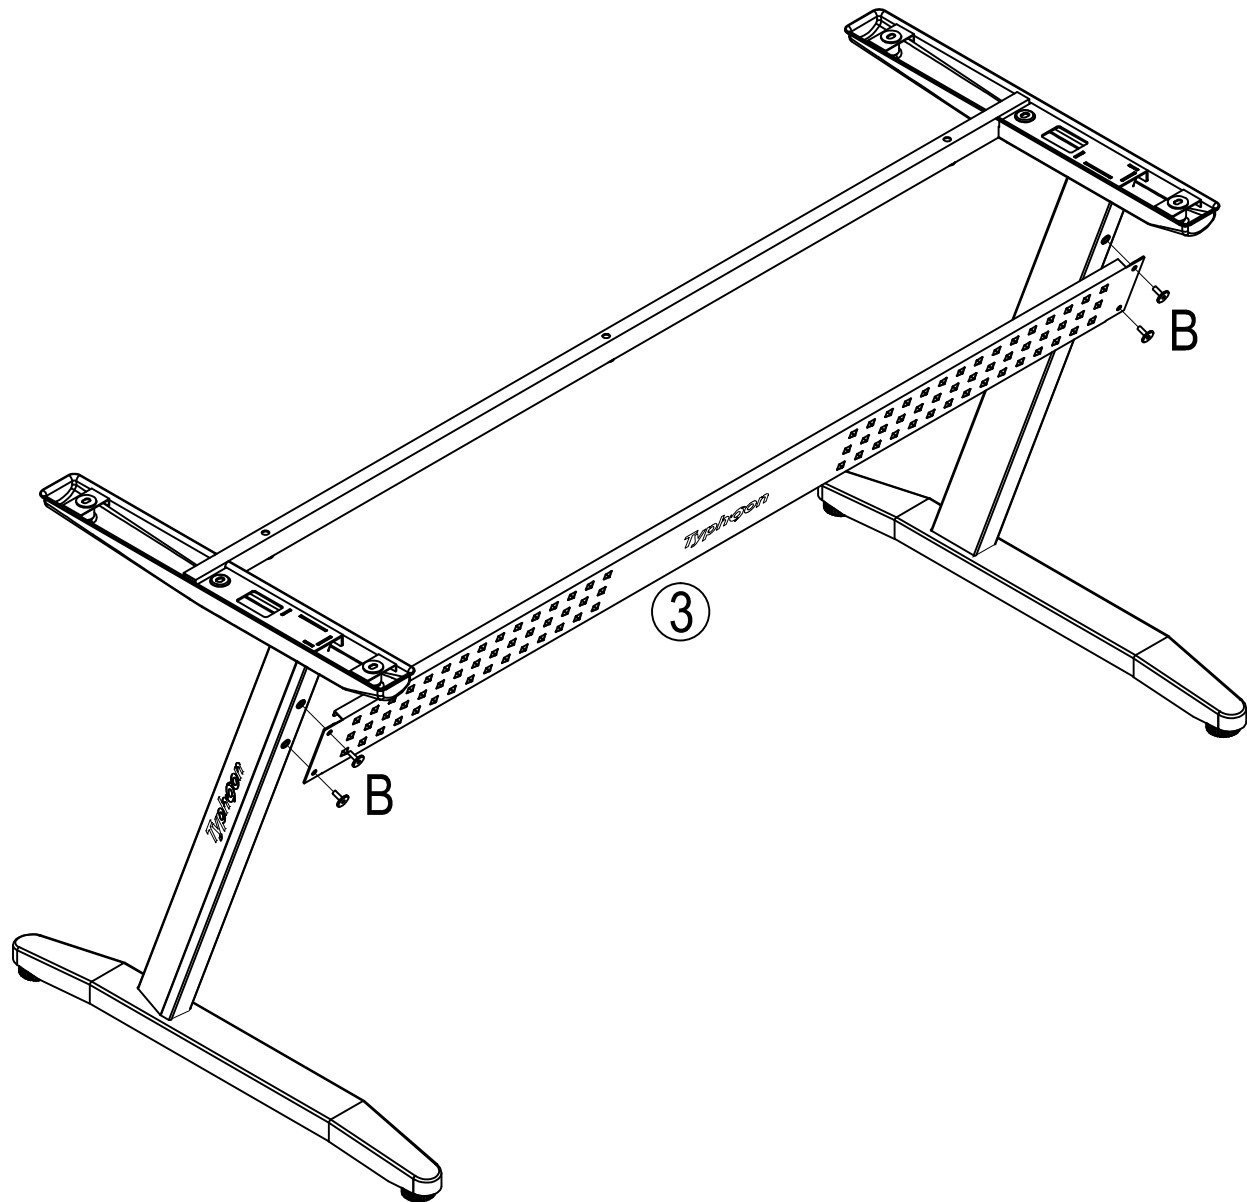 


	
B x4	C x1


Step 3

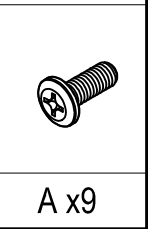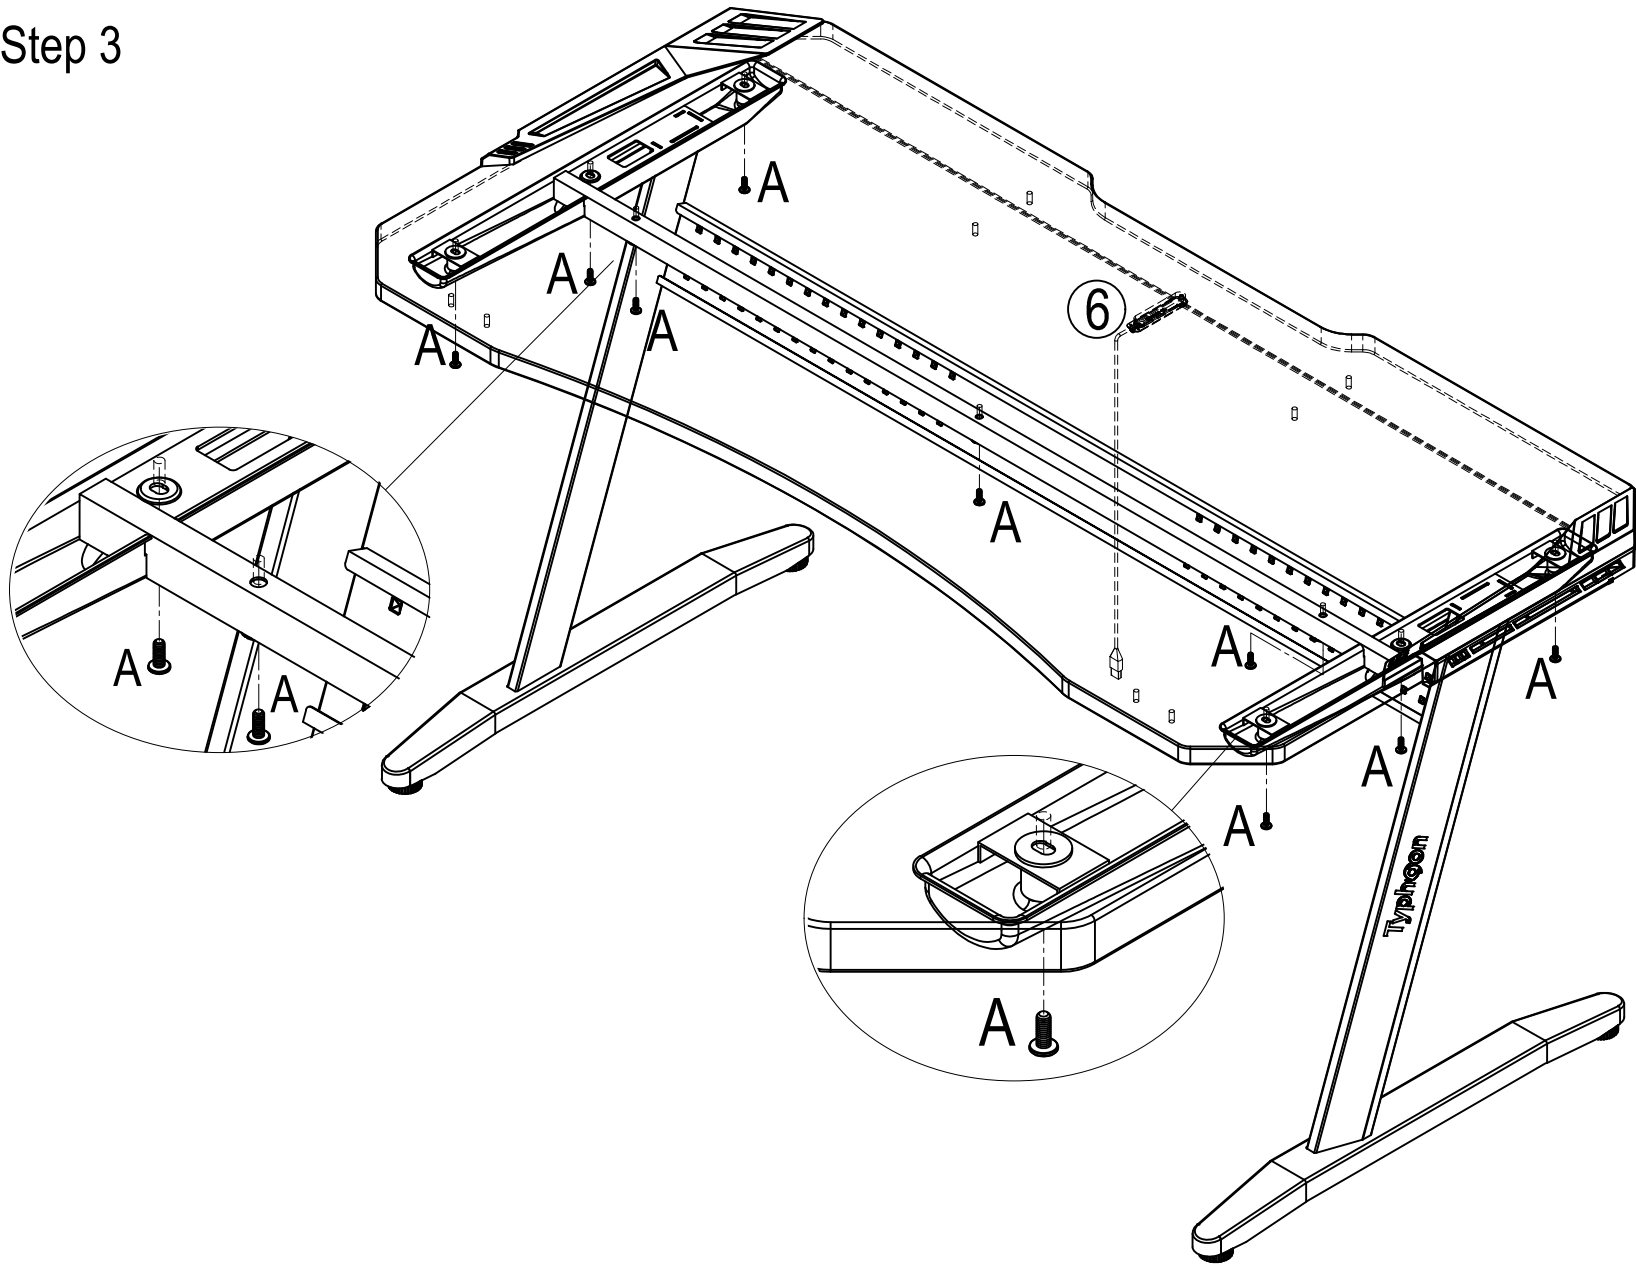

Step 4

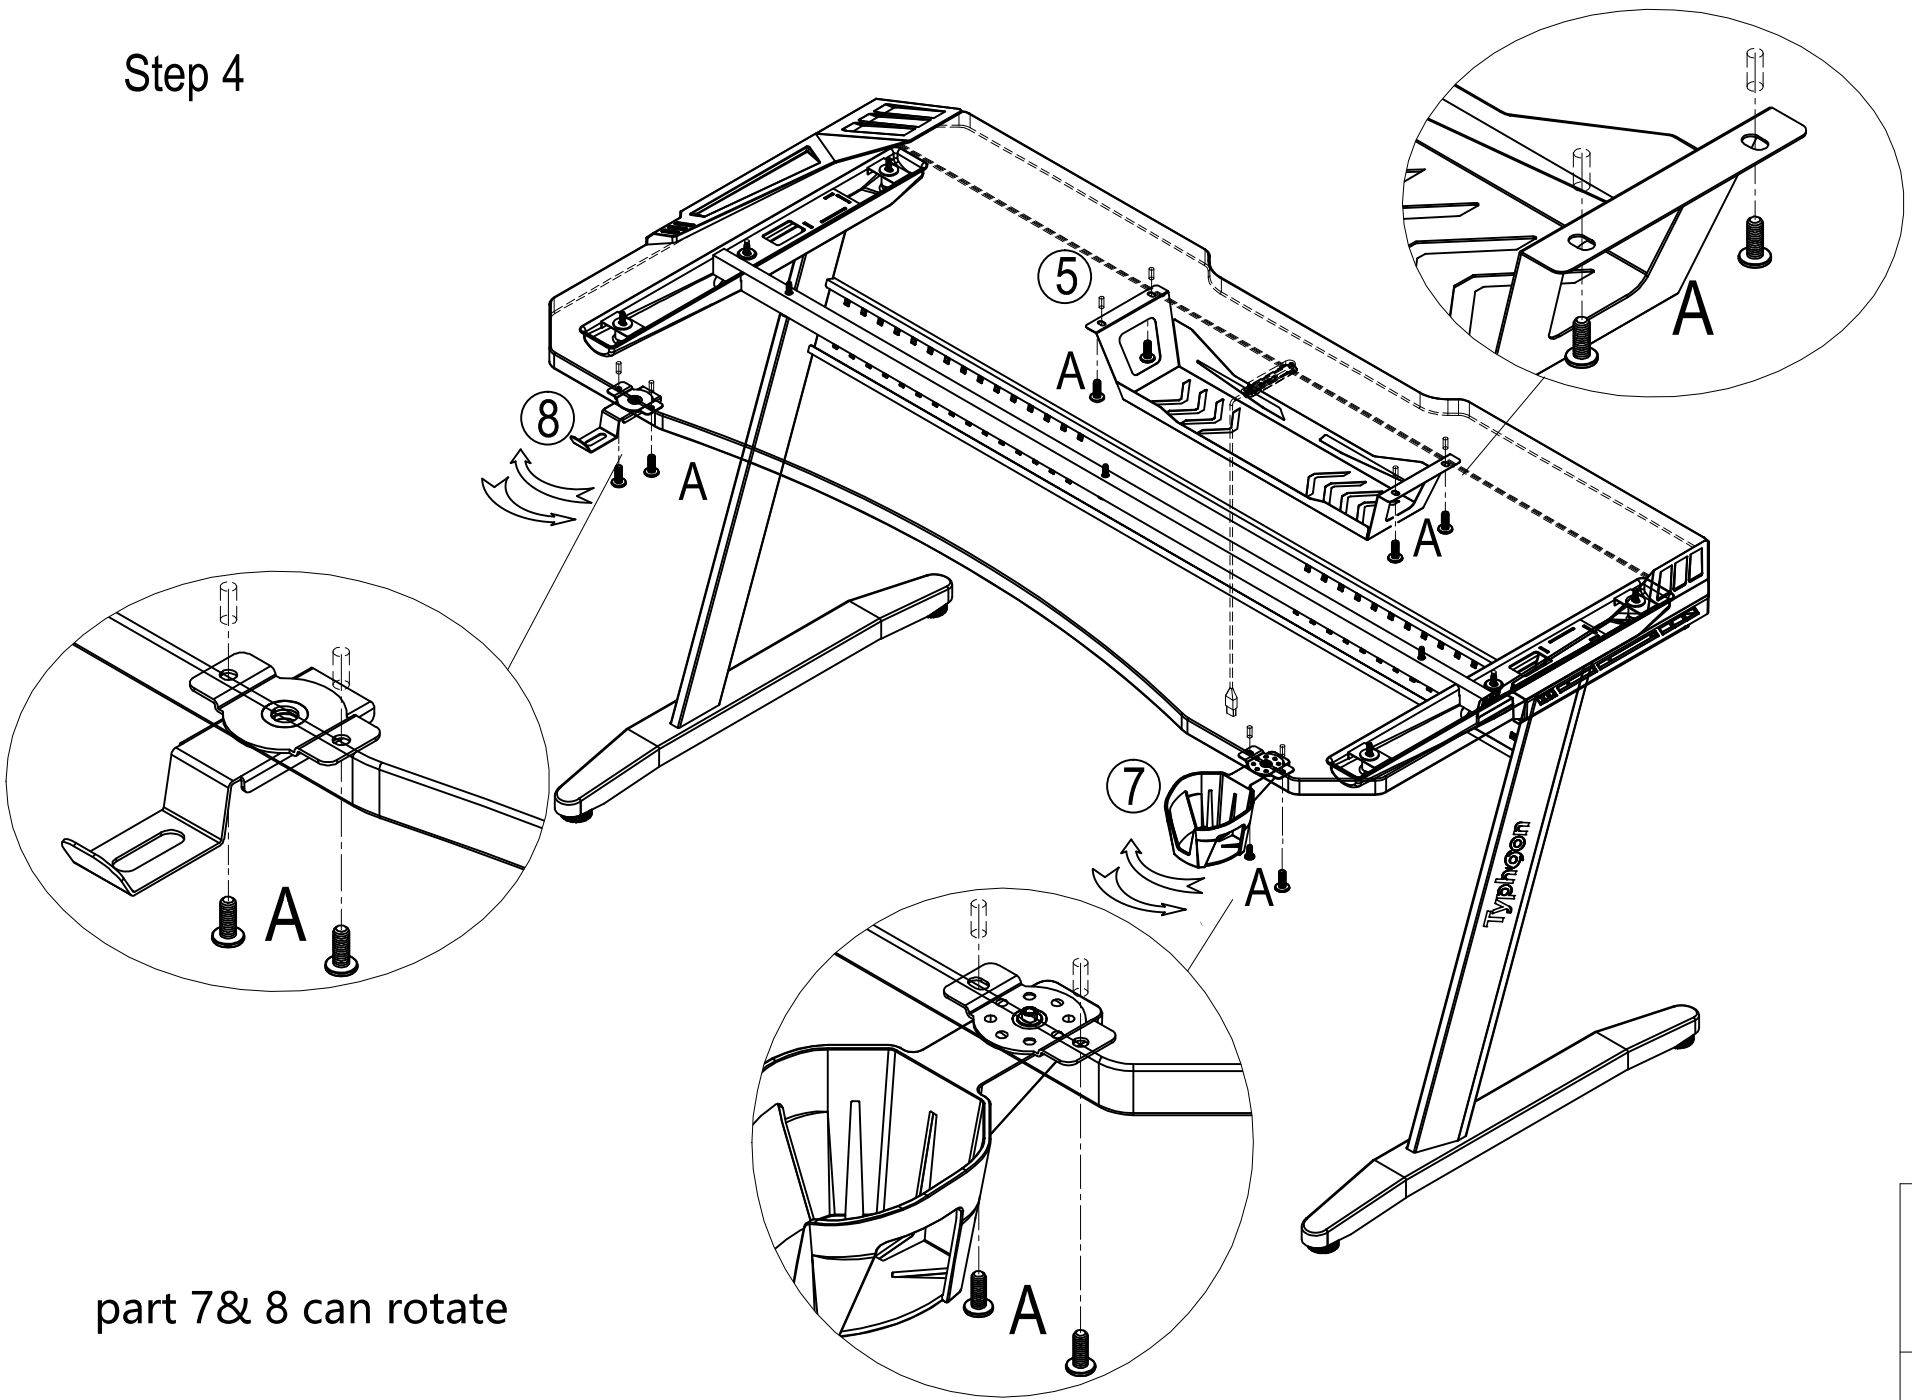 


part 7& 8 can rotate

 


A x8



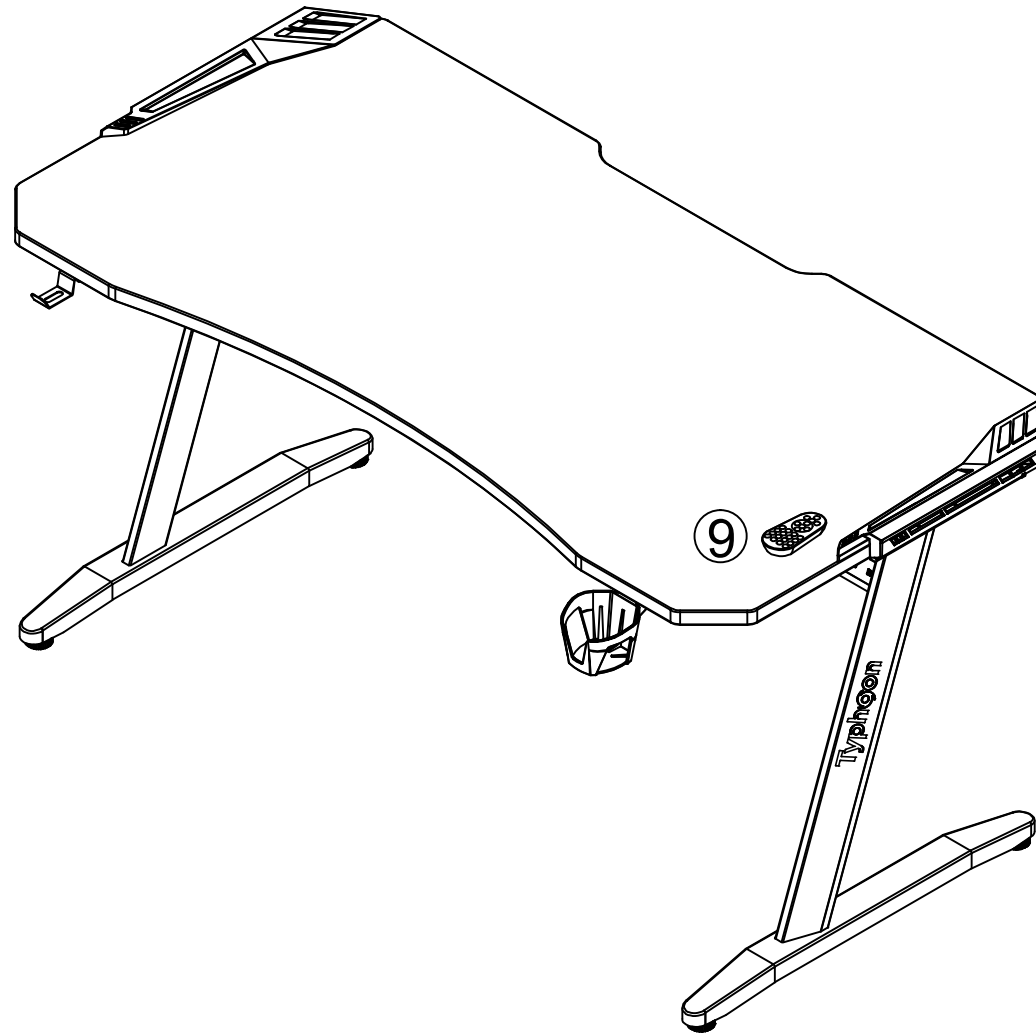



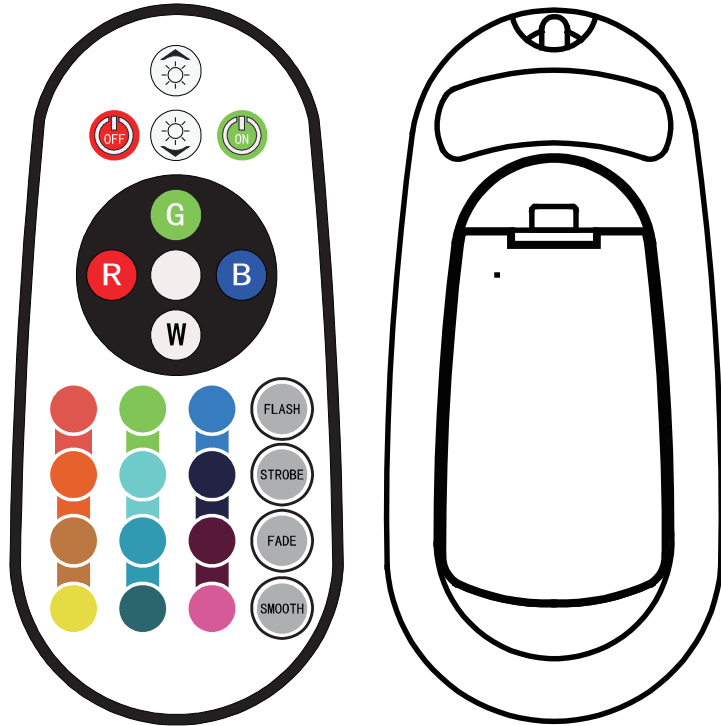

















Step 5



 
Remote Control



 
Function description of remote control key:

Symbol	Key Name	Functional description	
 	ON / OFF	Turn on or turn off the LED remote	
 	BRT+ / BRT-	Adjust static colour brightness. Press BRIGHT + to increase brightness and press BRIGHT- to decrease.	
 Red	 Green	 Blue	 White
 Orange	 Light Green	 Sky Blue	 Three colour Jump
 Dark Yellow	 Cyan	 Dark Blue	 Three colour Fade
 Yellow	 Light Blue	 Purple	 Seven colour Fade
 Light Yellow	 Lake Blue	 Pink	 Seven colour Jump

① How To Replace Batteries

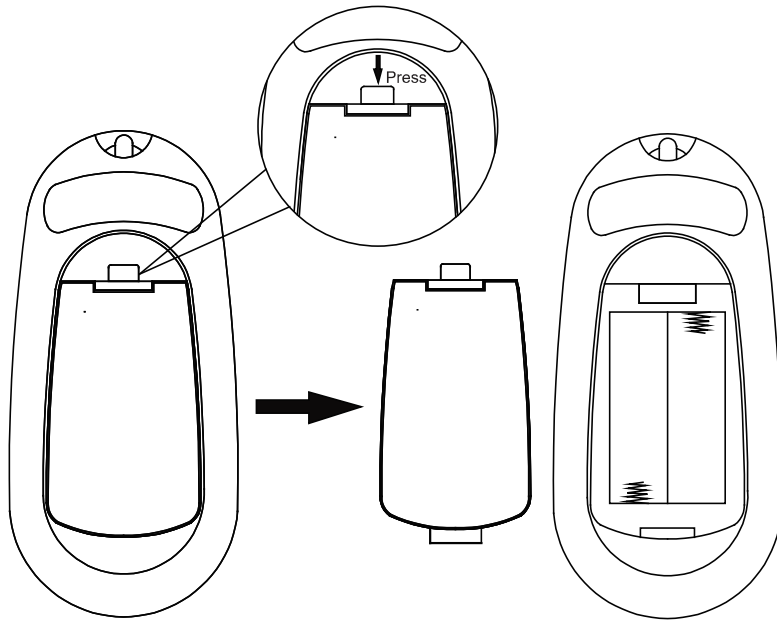

②

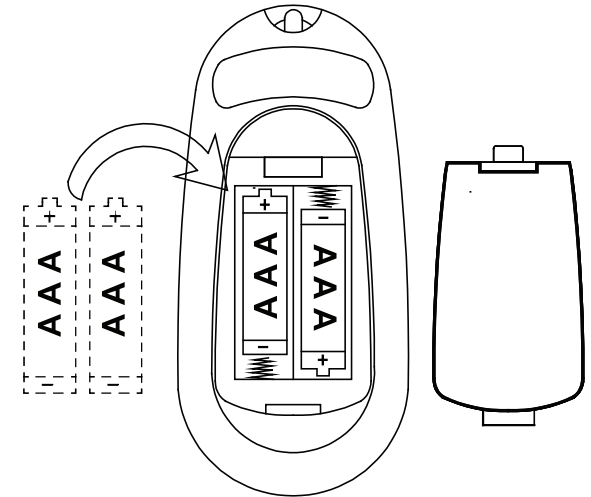 


Please use the AAA batteries to replace!

 **CAUTION**

1. WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN.
2. Do not throw into open fire!
3. Batteries supplied with the remote control are not rechargeable.
4. Never allow children to replace batteries of any device.
5. Dispose of used batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.

Disposal Considerations

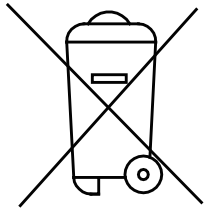

The symbol on the battery indicates that this battery may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

Your product contains batteries which cannot be disposed of with normal household waste. Please check local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Warranty 8 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 8 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- To cosmetic damage;
- To damage caused by consumables used in connection with the product (such as cleaning products);
- Where the product has not been used in accordance with all provided instructions;
- To damage arising from fair wear and tear;
- Where the product has not been subject to reasonable use;
- Where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.

If you would like to know more about our furniture products, please visit www.officeworks.com.au