

 
J.BURROWS

• • • • •

ASSEMBLY INSTRUCTIONS

TYPHOON PRO GAMING DESK 1200MM
WITH LED

JBTYPP12RD / JBTYPP12BE
JBTYPP12BK / JBTYPP12WE

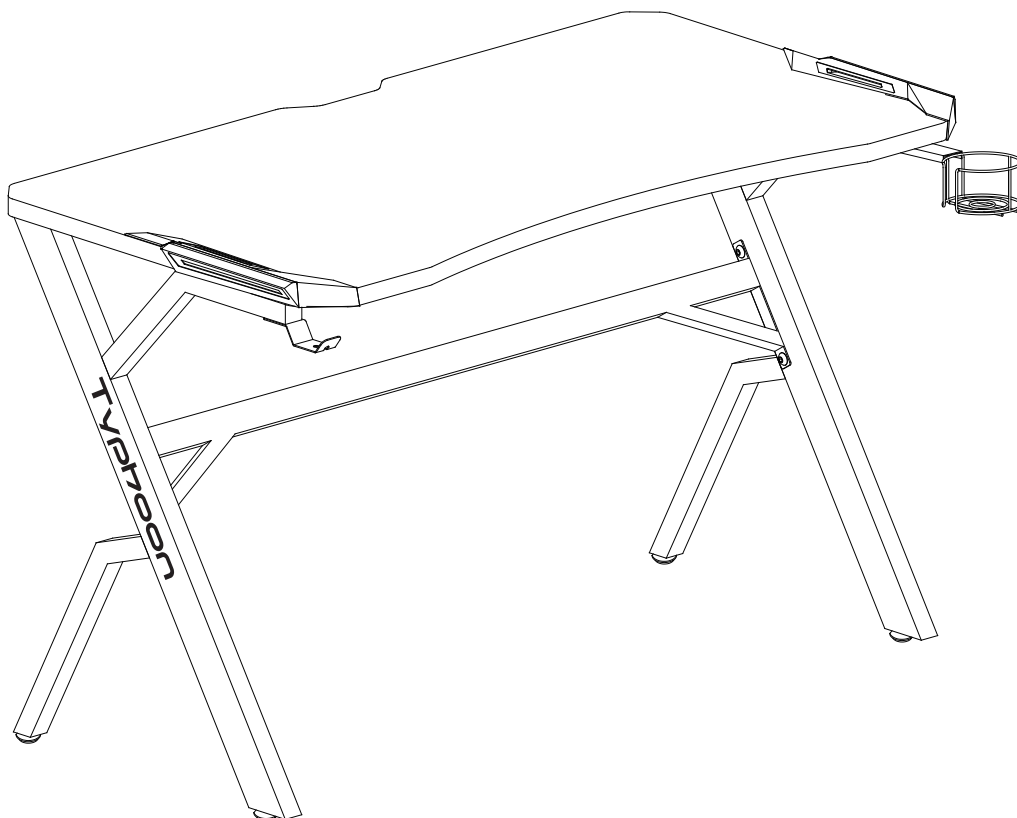

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

1 Carton

For spare parts or hardware call (03) 9310 3011 or email hardware@kyvas.com.au

Important

Estimated Assemble Time: 50min

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



People Required



More Than One Person Is Required
To Safely Assemble The Item

Customer Service Contact Details



 
Spare Parts & Hardware
(03) 9310 3011

General Advice



Assemble On A Clear Flat
Surface

Tools Required

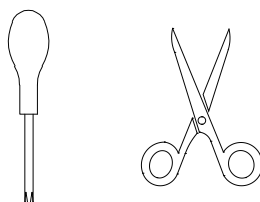

CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au
- Please ensure you have the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Keep children and animals away from the assembly area.
This furniture contains small parts that could cause choking if swallowed.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- This item is not for outdoor use – unless stated otherwise.
- Failure to follow these warnings could result in serious injury.

DANGER

- CHILDREN MUST BE SUPERVISED.


Part Overview

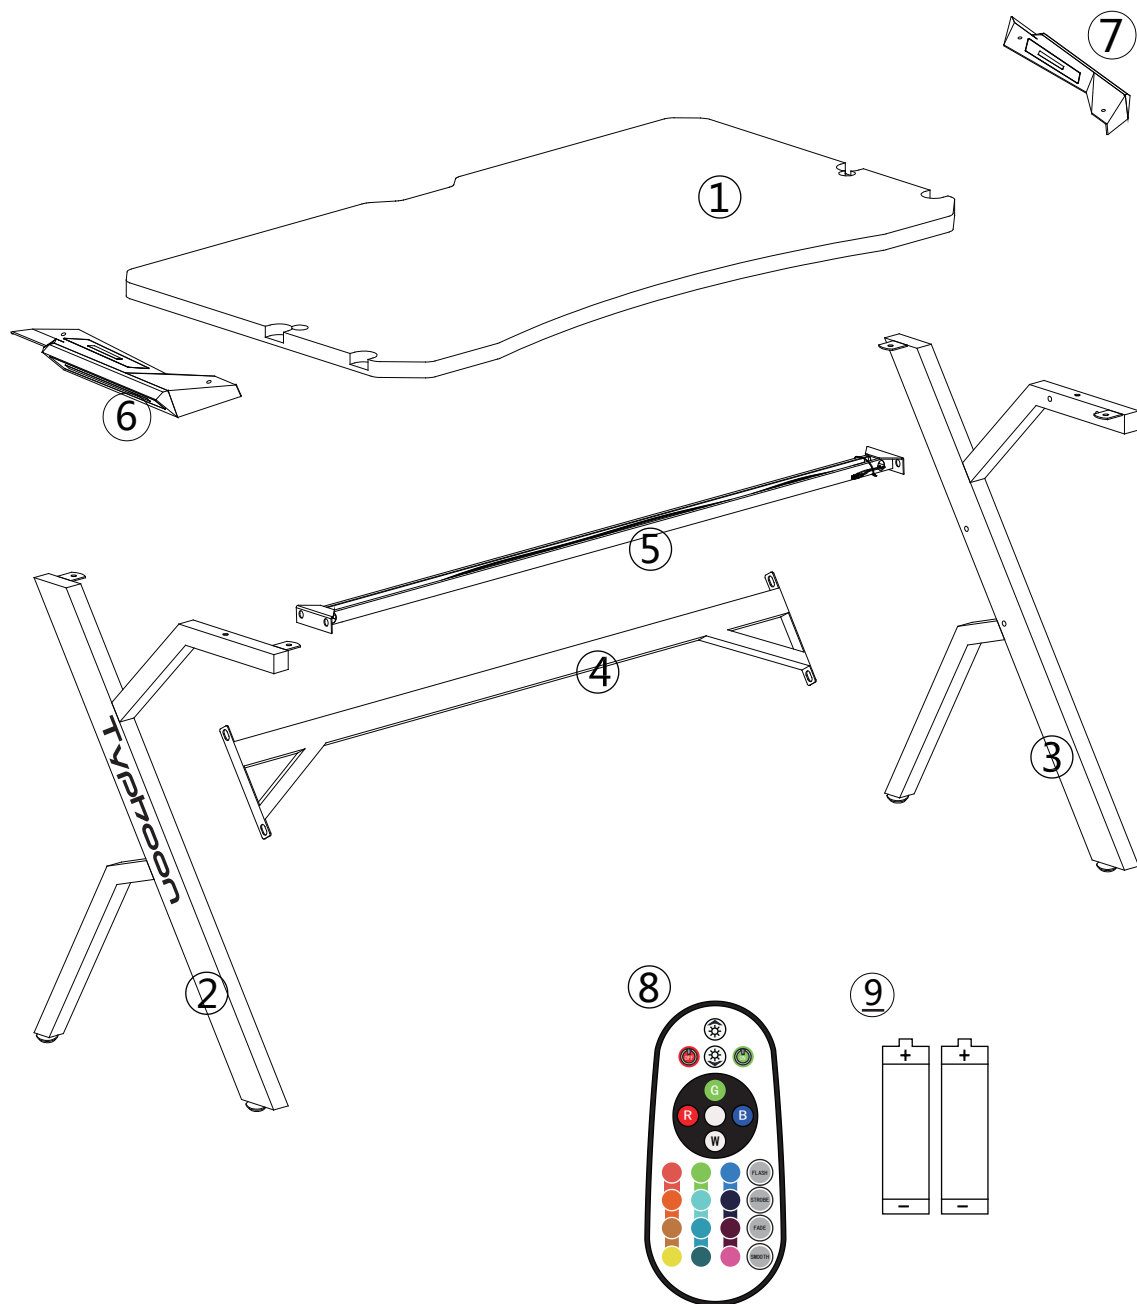

Part List


Parts located in Carton - JBTYPP12RD / JBTYPP12BE / JBTYPP12BK / JBTYPP12WE

 ①




X1 pc

 ②

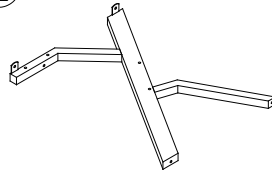


X1 pc

 ③

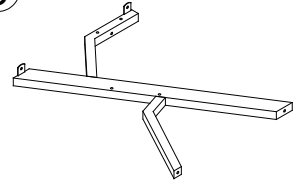

X1 pc

 ④

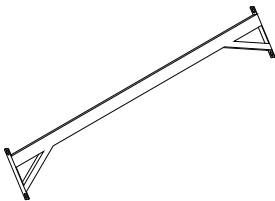


X1 pc

⑤




X1 pc

 ⑥

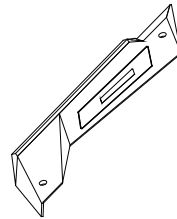

X1 pc

 ⑦

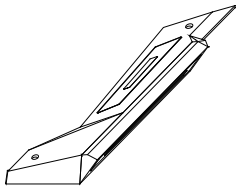


X1 pc

⑧



 X1 pc

 
 

 

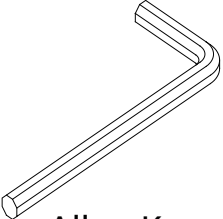 
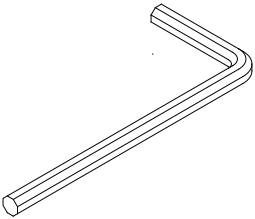 
 
 
⑨






X1 pc

Hardware List

Hardware Pack located in Carton - JBTYPP12RD / JBTYPP12BE / JBTYPP12BK / JBTYPP12WE
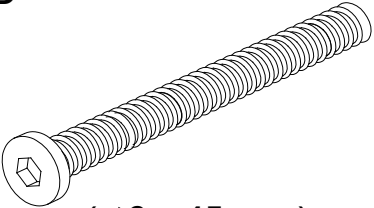
<p>A</p>  <p>(Ø8 x 16 mm) X 12pcs</p>	<p>B</p>  <p>(Ø8 x 45 mm) X 2pcs</p>	<p>C</p>  <p>(Ø4 x 14 mm) X 4pcs</p>
<p>D</p>  <p>X 1pc</p>	<p>E</p>  <p>(Ø4 x 14 mm) X 1pc</p>	<p>I</p>  <p>Allen Key M8-size X 1pc</p>
<p>J</p>  <p>Allen Key M6-size X 1pc</p>	<p>K</p>  <p>Washer X 2pcs</p>	<p>L</p>  <p>(Ø6 x 15 mm) X 2pcs</p>

  
 
Other hardware located in Carton - JBTYPP12RD / JBTYPP12BE / JBTYPP12BK / JBTYPP12WE
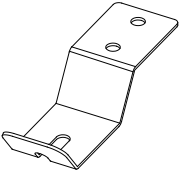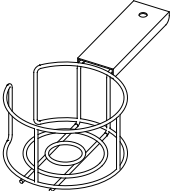
<p>F</p>  <p>Adjust Feet X 4pcs</p>	<p>G</p>  <p>Headset Holder X 1pc</p>	<p>H</p>  <p>Cup Holder X 1pc</p>
---	---	---



For missing hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au

Assembly

  
Step 1

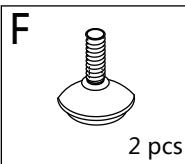
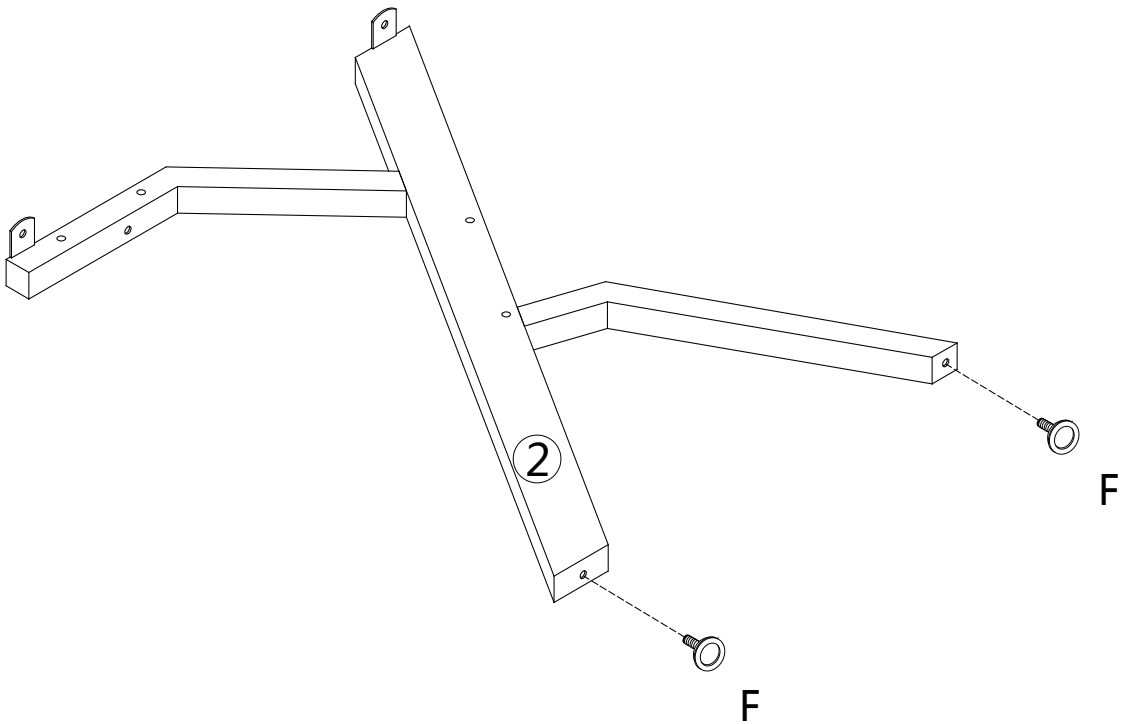


  Step 2

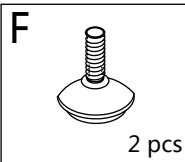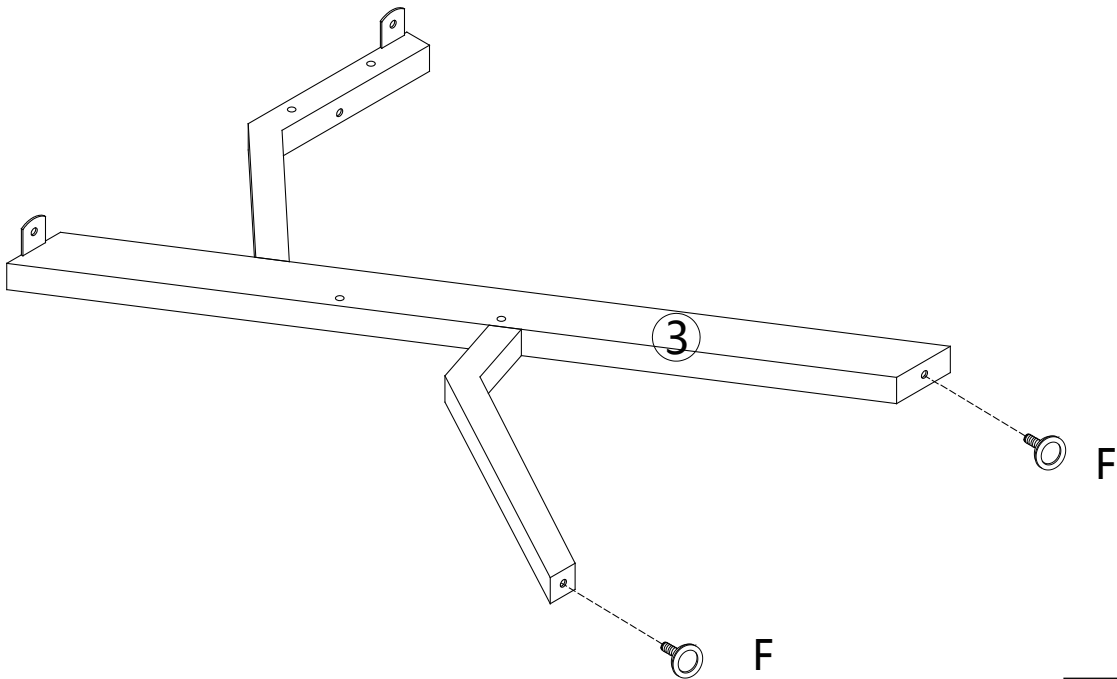


  
 
Step 3

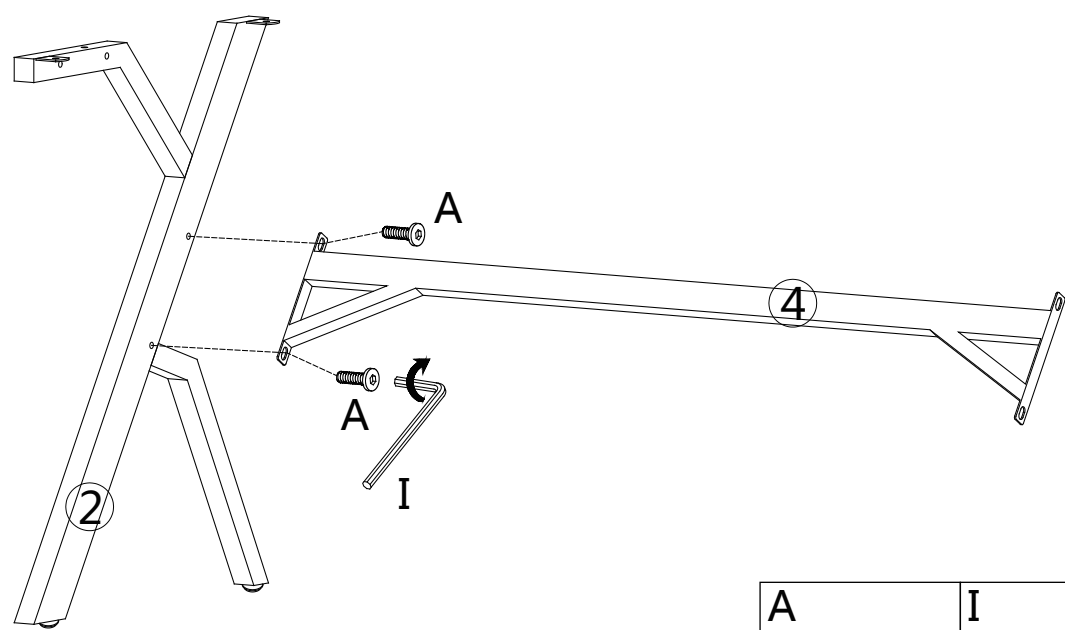


A	I
	
2 pcs	1 pc

  
 
Step 4

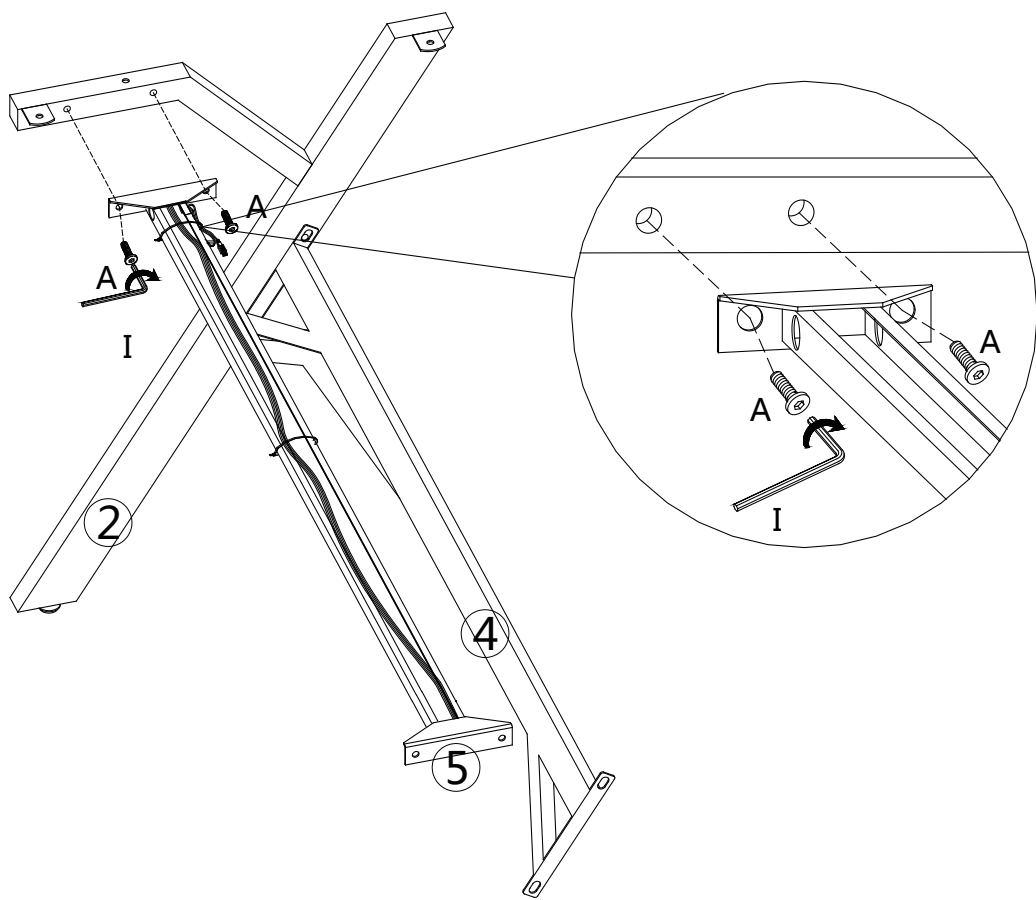


A	I
	
2 pcs	1 pc

   Step 5

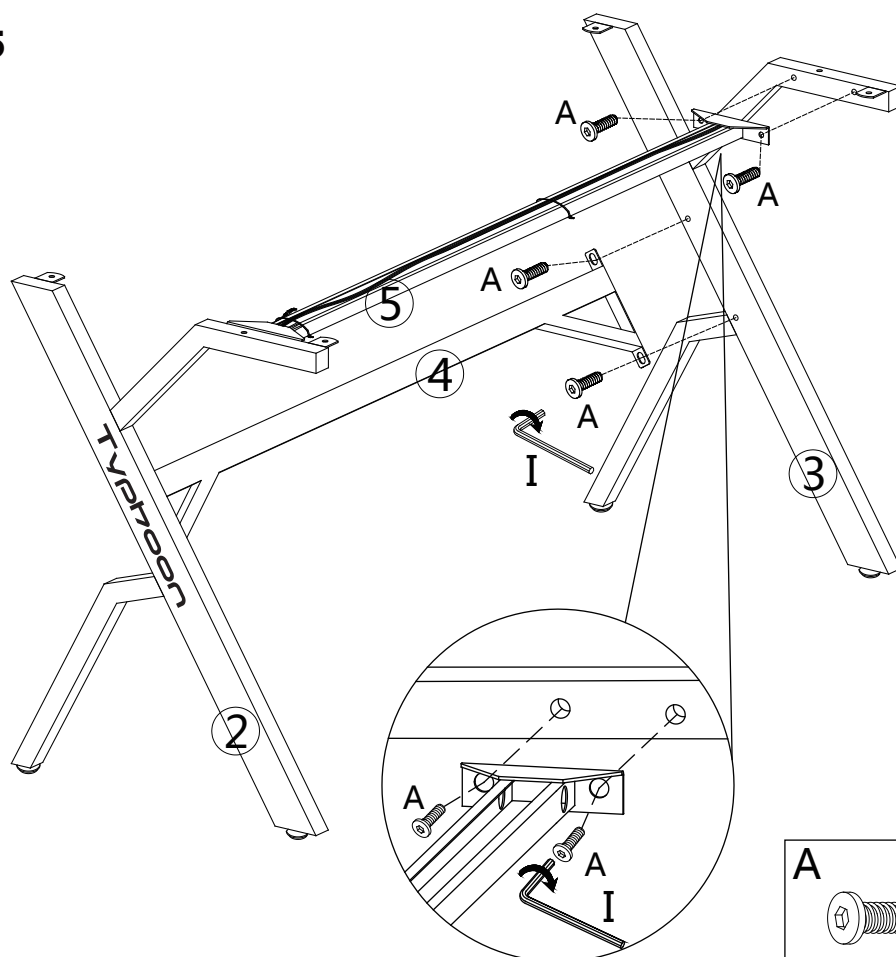


<p>A</p>  <p>4 pcs</p>	<p>I</p>  <p>1 pc</p>
--	---

 
Step 6

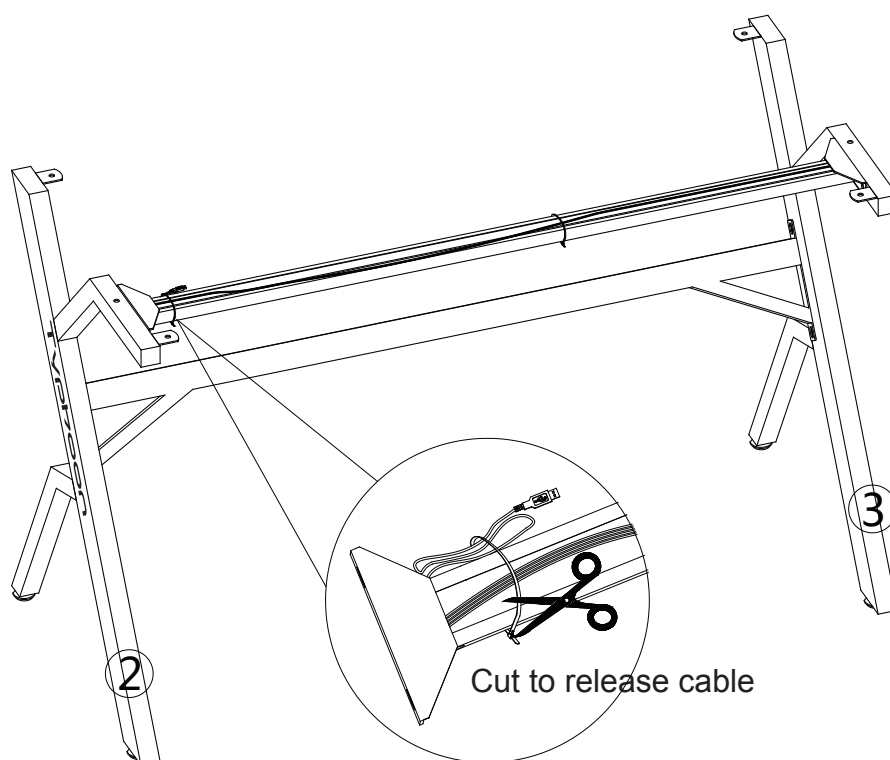

 
Step 7

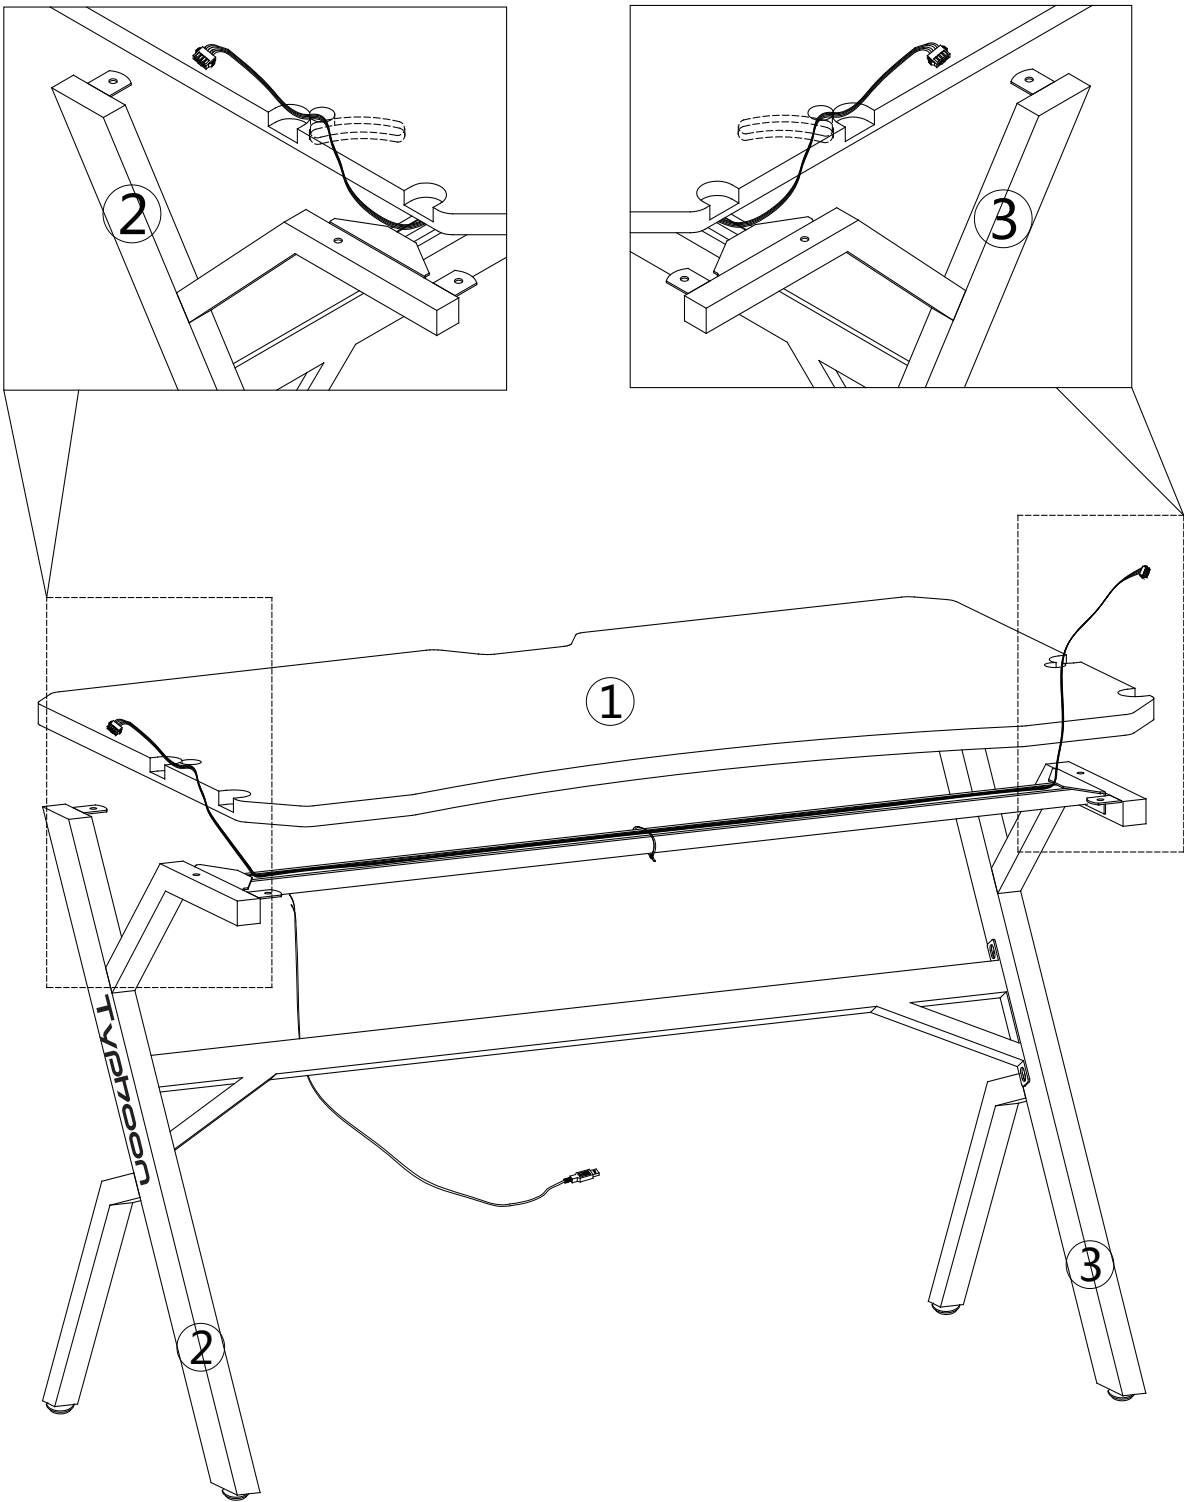

 
Step 8

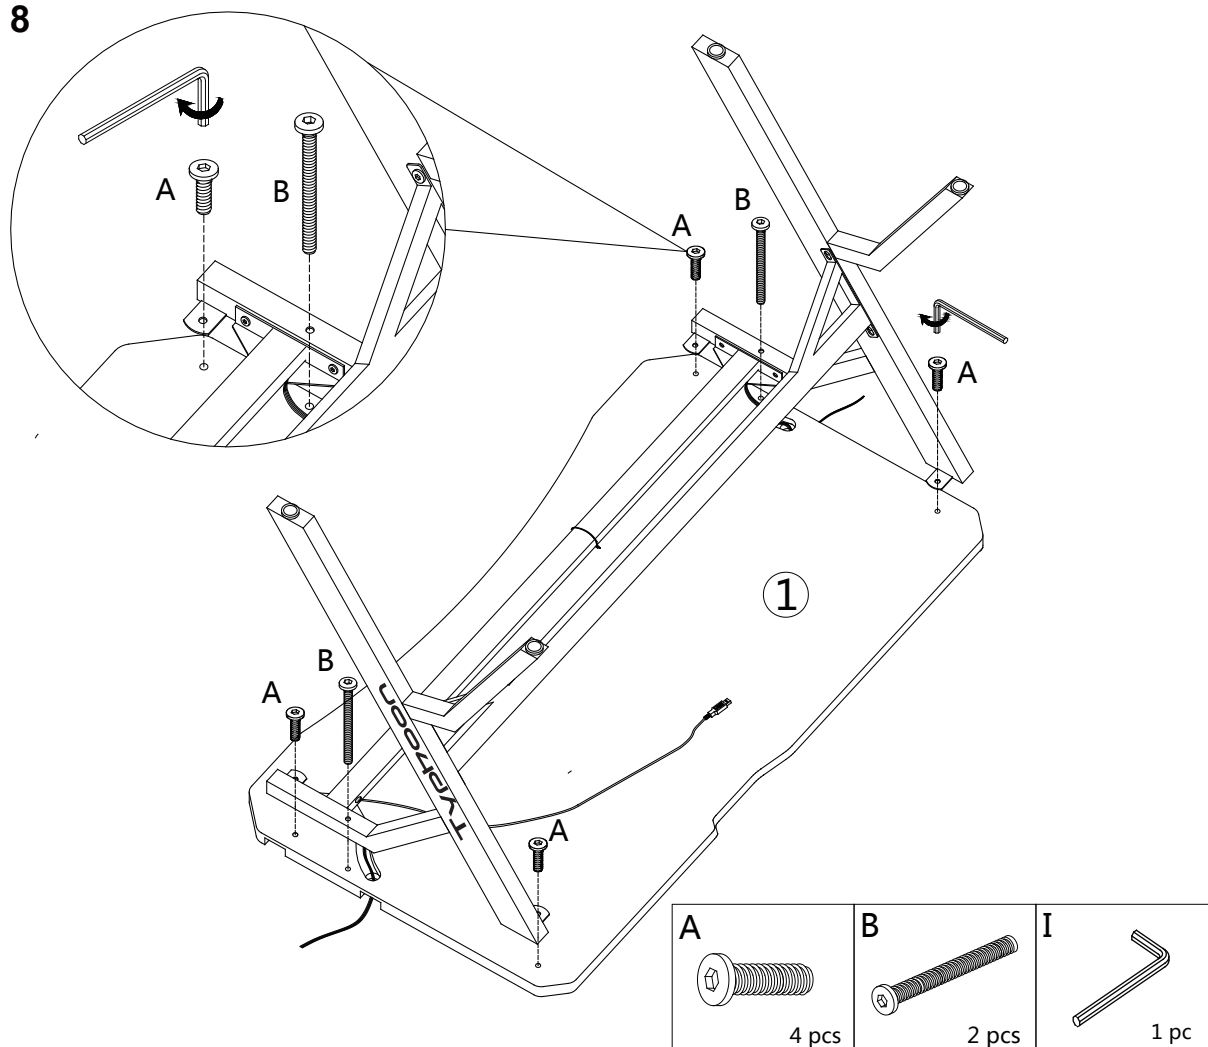


 
Step 9

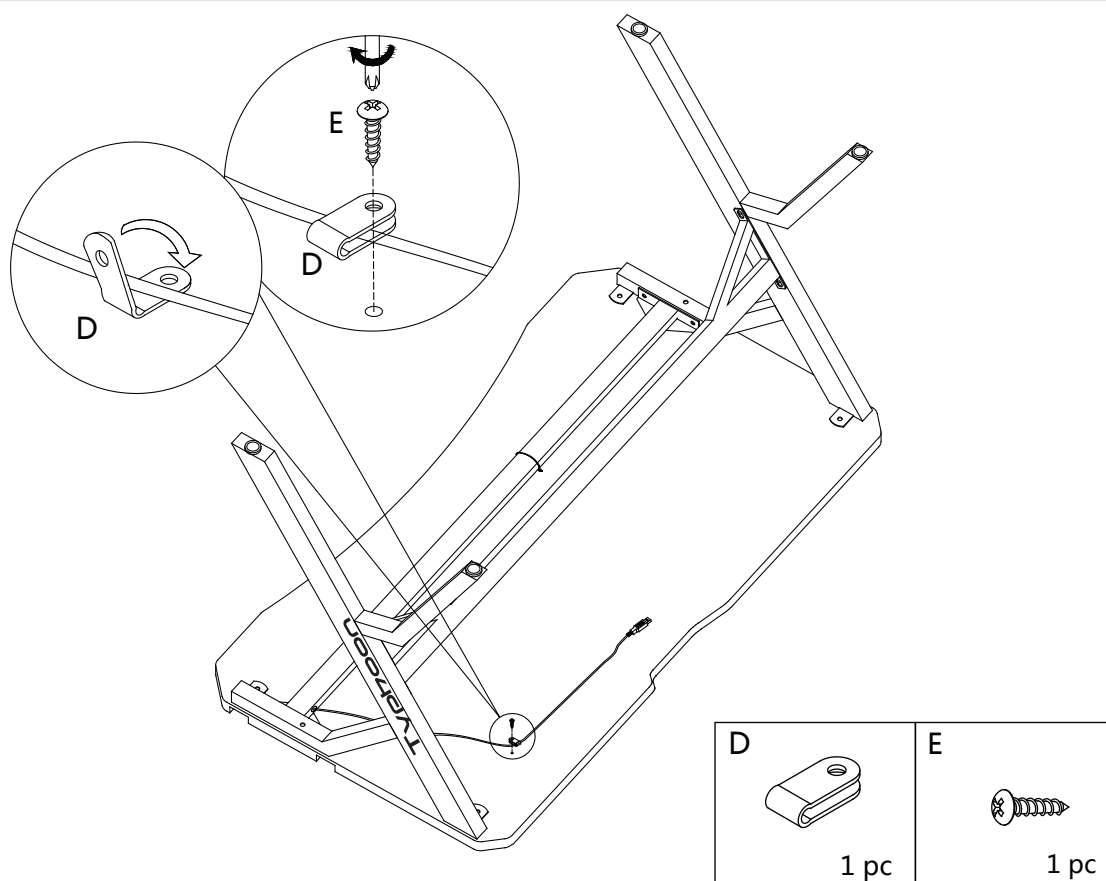

 
Step 10

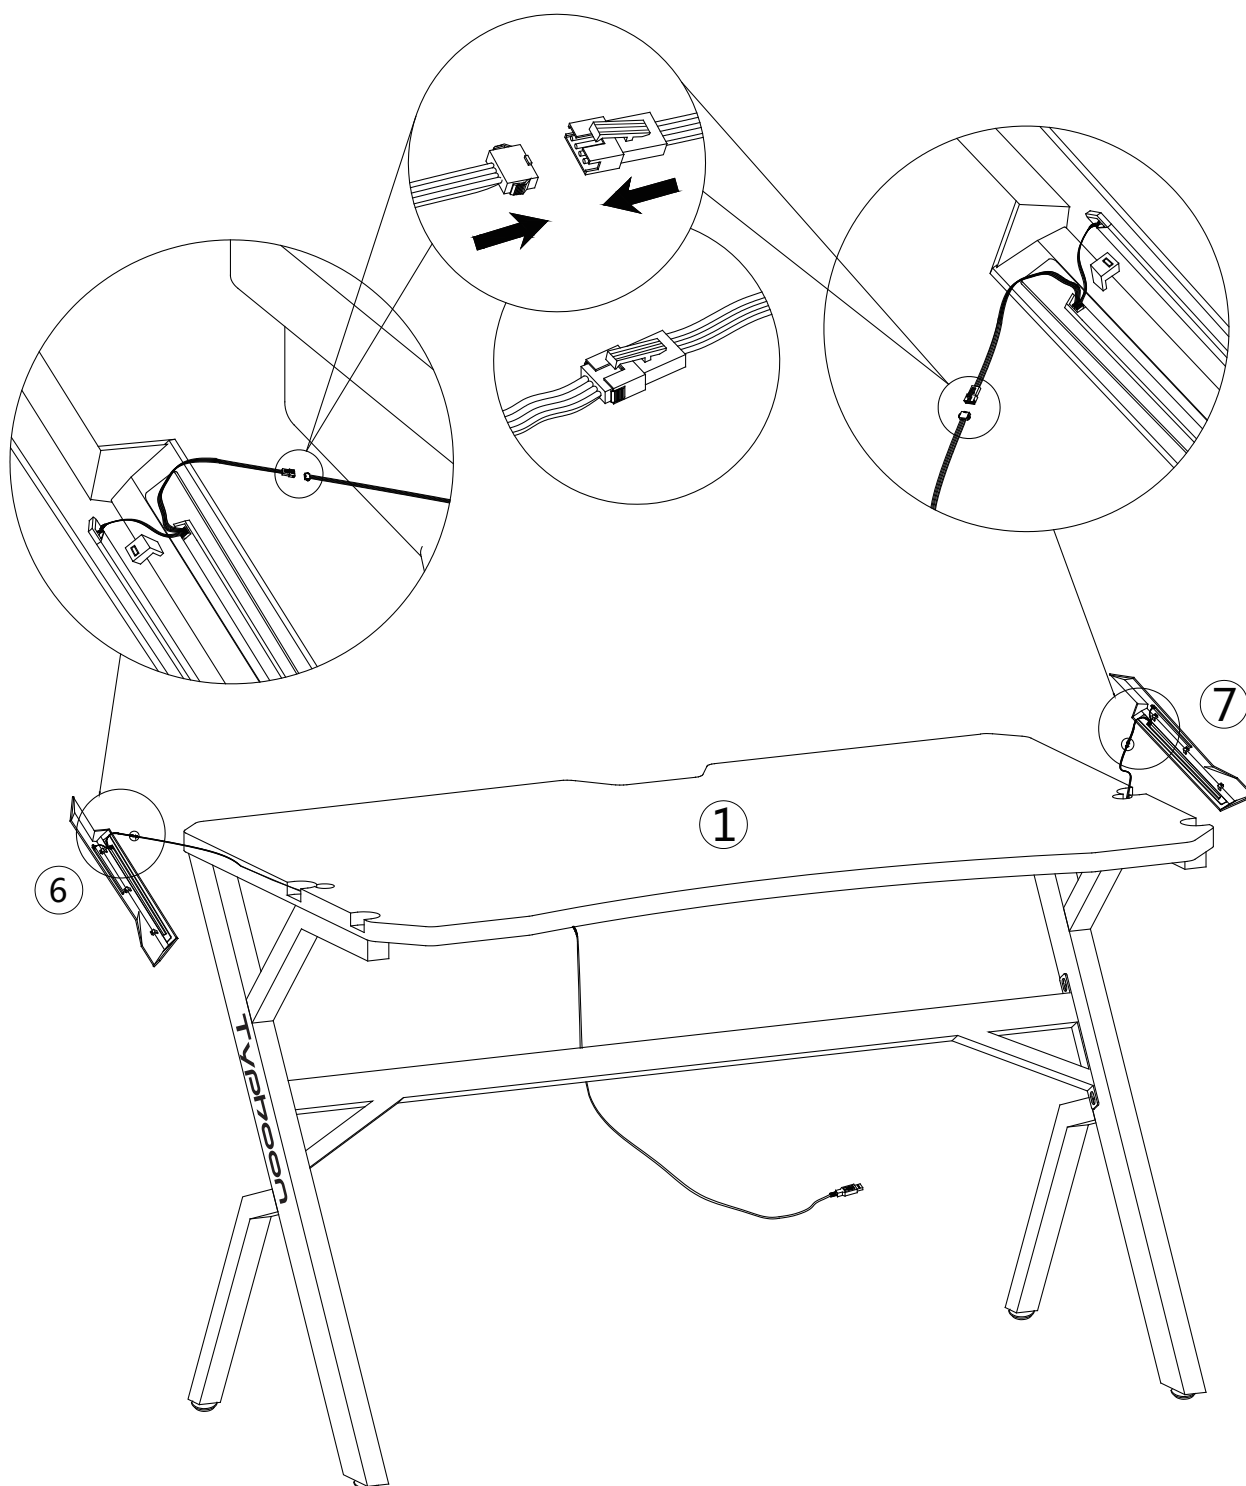

  Step 11

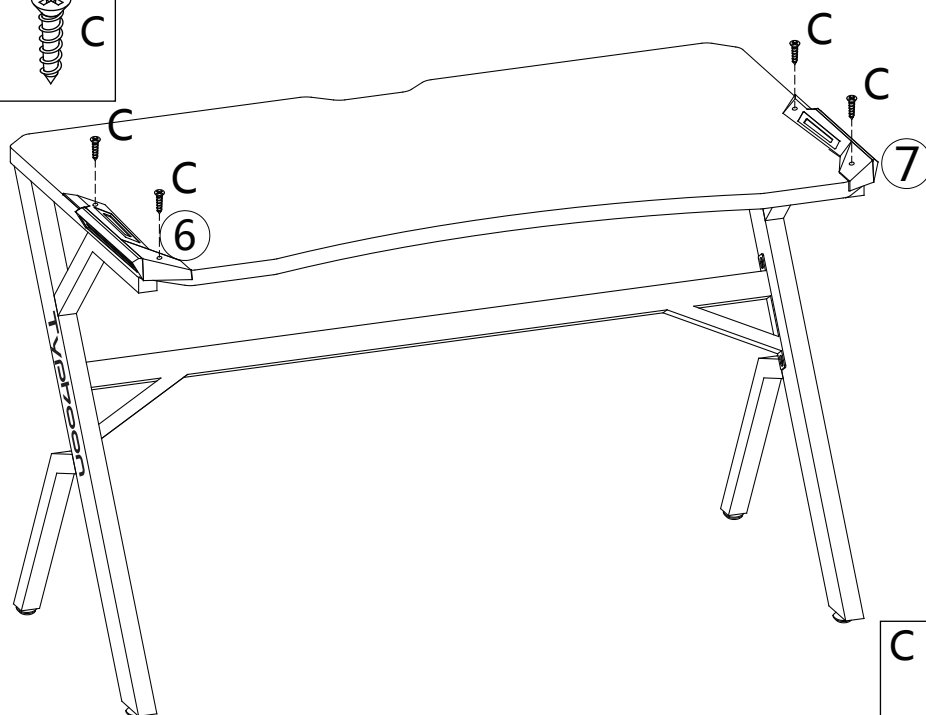
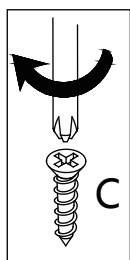


C

 


4 pcs

  Step 12

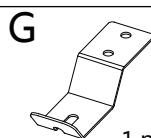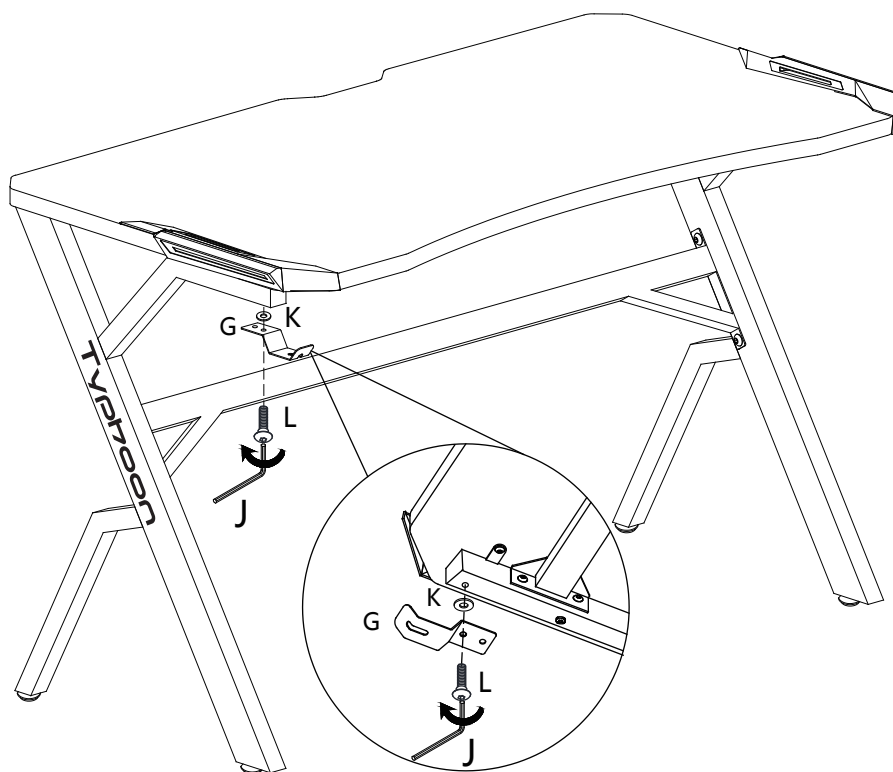


1 pc

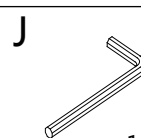 

1 pc





 1 pc




1 pc

  Step 13

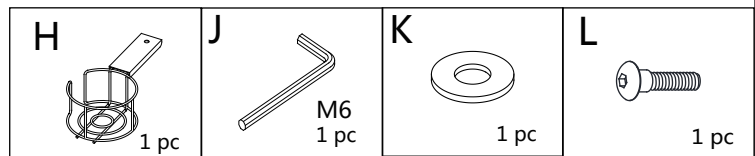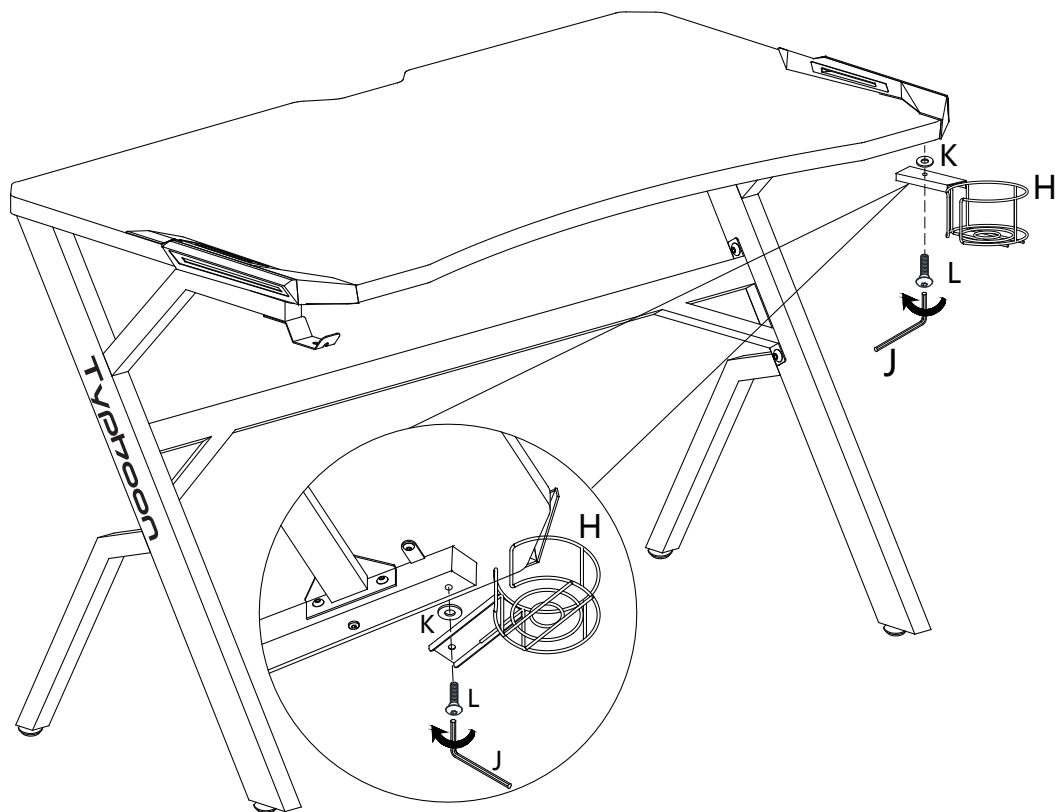


  Maximum Load Capacity:
Desk Top - 40 kg
Headset Holder - 2 kg
Cup Holder - 2 kg

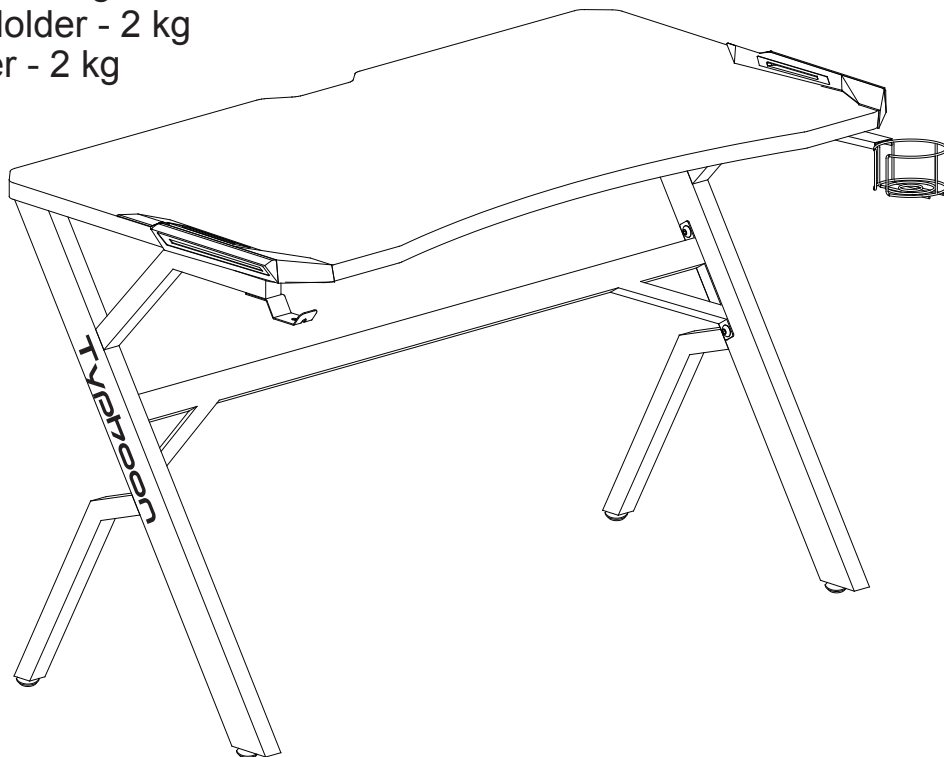





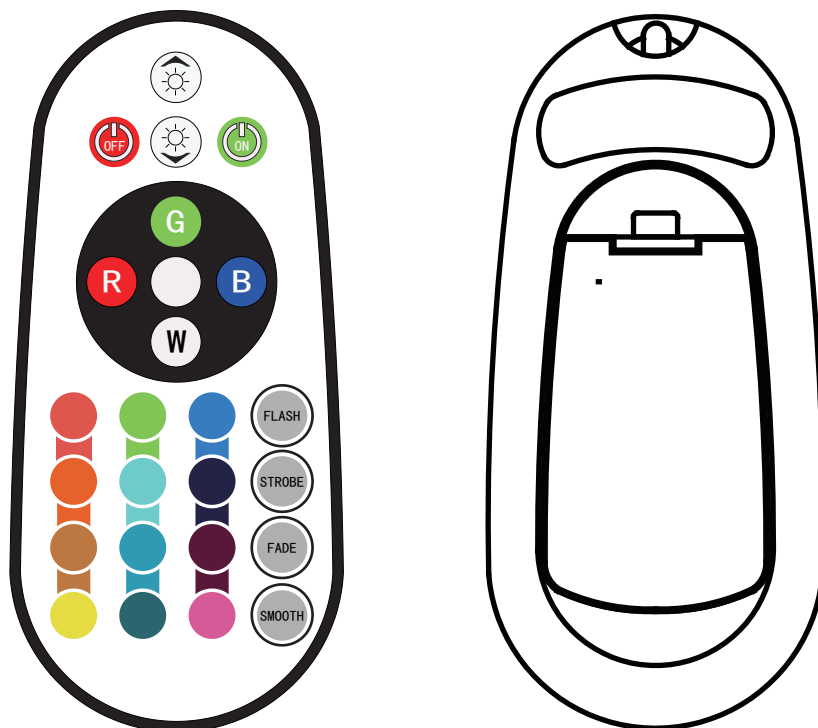



















 Your TYPHOON PRO GAMING DESK 1200MM WITH LED is now complete and ready for use!


Remote Control

 

Function description of remote control key:

Symbol		Key Name		Functional description			
 		ON / OFF		Turn on or turn off the LED remote			
 		BRT+ / BRT-		Adjust static colour brightness. Press BRIGHT + to increase brightness and press BRIGHT- to decrease.			
	Red		Green		Blue		White
	Orange		Light Green		Sky Blue		Three color Jump
	Dark Yellow		Cyan		Dark Blue		Three color Fade
	Yellow		Light Blue		Purple		Seven color Fade
	Light Yellow		Lake Blue		Pink		Seven color Jump

 How To Replace Batteries

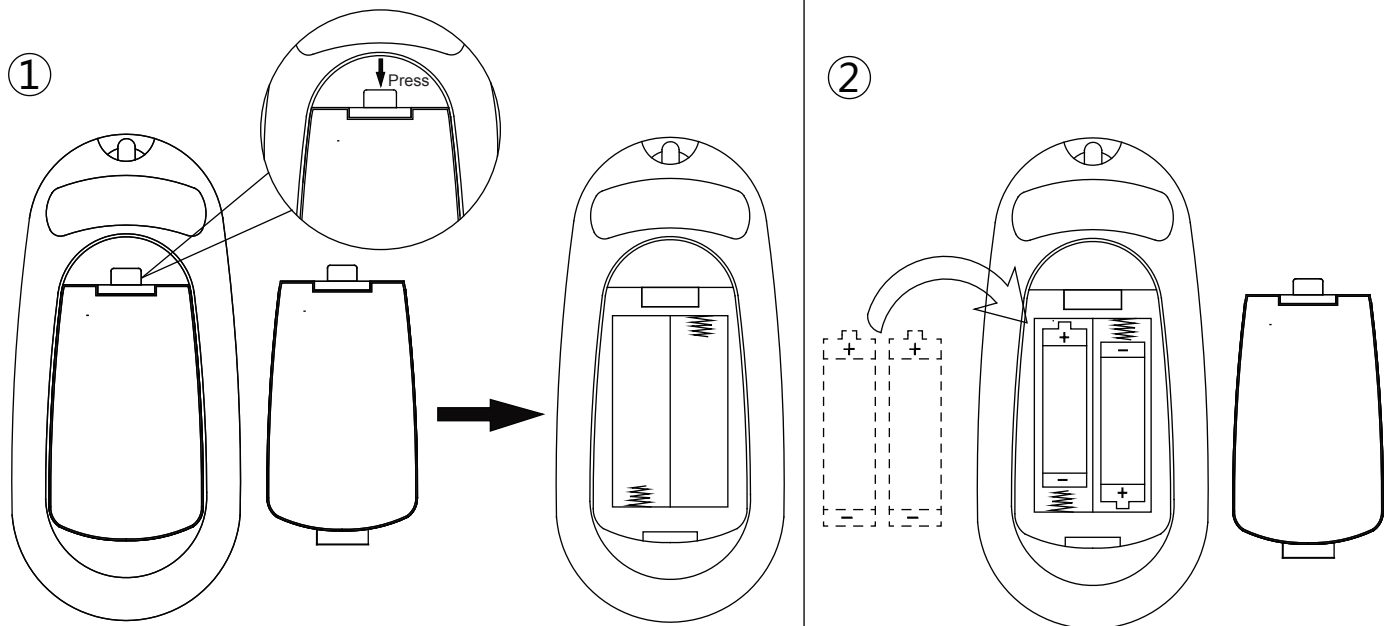


Please use the AAA batteries to replace!



1. WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN.
2. Do not throw in fire! Not rechargeable!
3. Never allow children to replace batteries of any device. If you suspect your child has swallowed or inserted a battery immediately call the 24-hour Poisons information centre on 13 11 26 for fast, expert advice.
4. Dispose of used batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.

 Disposal Considerations

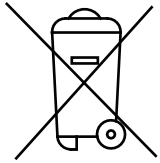

The symbol on the battery indicates that this battery may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

Your product contains batteries which cannot be disposed of with normal household waste. Please check local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Care Advice

Care Instructions - Melamine Finish Desk

- Keep away and protect from direct sunlight and heat.
- Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- Clean, check and tighten all parts regularly.

Safety Warning

- WARNING – Follow the user instructions for correct operation of the LED light.



- WARNING – This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

Warranty 8 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 8 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au