



Assembly Instructions

 
Velocity Oak Desk



CPVEL15DOA
CPVEL12DOA
CPVEL10DOA

10 YEAR
WARRANTY

TOOLS REQUIRED FOR ASSEMBLY



Hardware Included

8x 45mm Screws

WARNING

Please check you have all hardware before assembling, please contact the store of purchase if you think any are missing. Please retain your proof of purchase to validate warranty.

Ensure all screws are tightened prior to use. At least every 4 month, check all screws and cam-locks are firmly secured.

If parts are missing, broken or damaged, stop use of product until repairs are made.

Failure to follow these warnings could result in serious injury.

1 Fix screws into pre-drilled holes on end and modesty panels using your screwdriver

2 Fix end panels to modesty by inserting screws into cam-lock and tighten cam-lock by rotating screwdriver clockwise. You must ensure the "INSIDE" sticker is facing to the front of the desk to be able to tighten cam-lock.

3 Fix end and modesty panels to top by inserting screws into cam-lock and tighten cam-lock by rotating screwdriver clockwise

