



Assembly Instructions
Velocity Bookcase
900 High
2 CARTONS



NOTE: The Velocity Bookcase converts to a Storage Cupboard by adding doors (box 3). If you have ordered a Storage Cupboard additional instructions and hardware are located in box 3.



MANUFACTURER CODE: VBC99
OW CODES: CPVELBCWH, CPVELBC90B,
CPVELBCGB, CPVELBCGR, CPVELBC90W

manufactured by designtec
www.designtec.com.au

10 YEAR
WARRANTY

NOTE

Please check you have all hardware before assembling.

If you are missing any hardware, please contact the store of purchase.

Please ensure you have the name of the item, required hardware part and quantity.

Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

Do not tighten screws before all screws are in the right place.

Do not use this product unless all bolts, screw and knobs are firmly secured.

Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
WARNING

If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.

Failure to follow these warnings could result in serious injury.

TOOLS REQUIRED FOR ASSEMBLY

1 x Philips Head Screwdriver



HARDWARE INCLUDED

Note - Individual hardware images are not to scale.

A & B - TWO PART FOOT



C - PIN



D - 16mm SCREW



E - CONFIRMAT SCREW

 


F - SHELF SUPPORT



PRE-INSERTED HARDWARE

CAM HOUSING




STEP 1

Unscrew the two part foot to separate PART (A) from PART (B).

Fix PART (A) of two part foot to the bookcase base using SCREW (D).


PART (B) of the two part foot can now be attached to PART (A) by placing it on top and rotating clockwise.

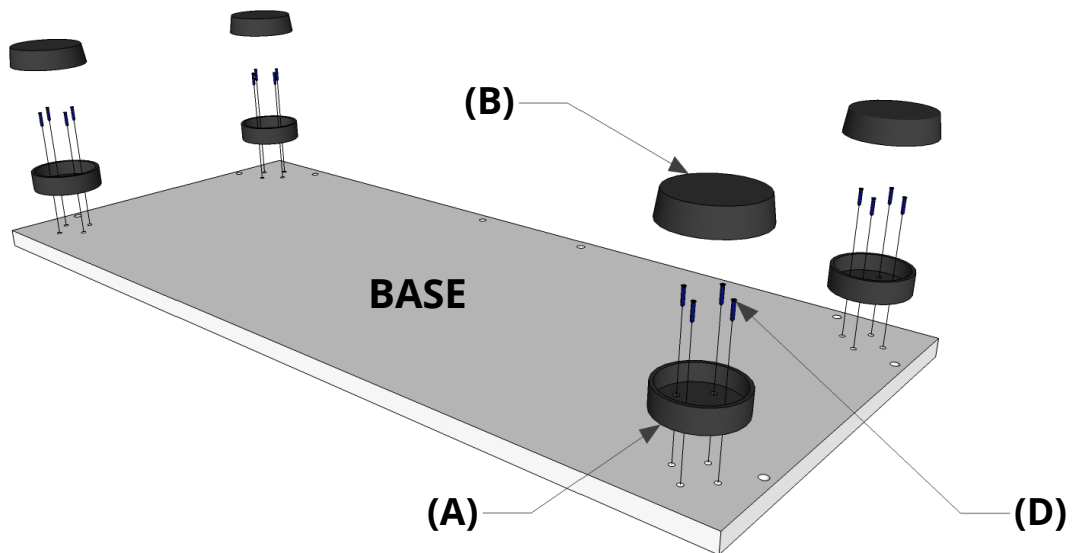

STEP 2

Fix four (4) PINS (C) into the outer pre-drilled holes on the end panels with your screwdriver.


NOTE: these pre-drilled holes are slightly offset to the edge.

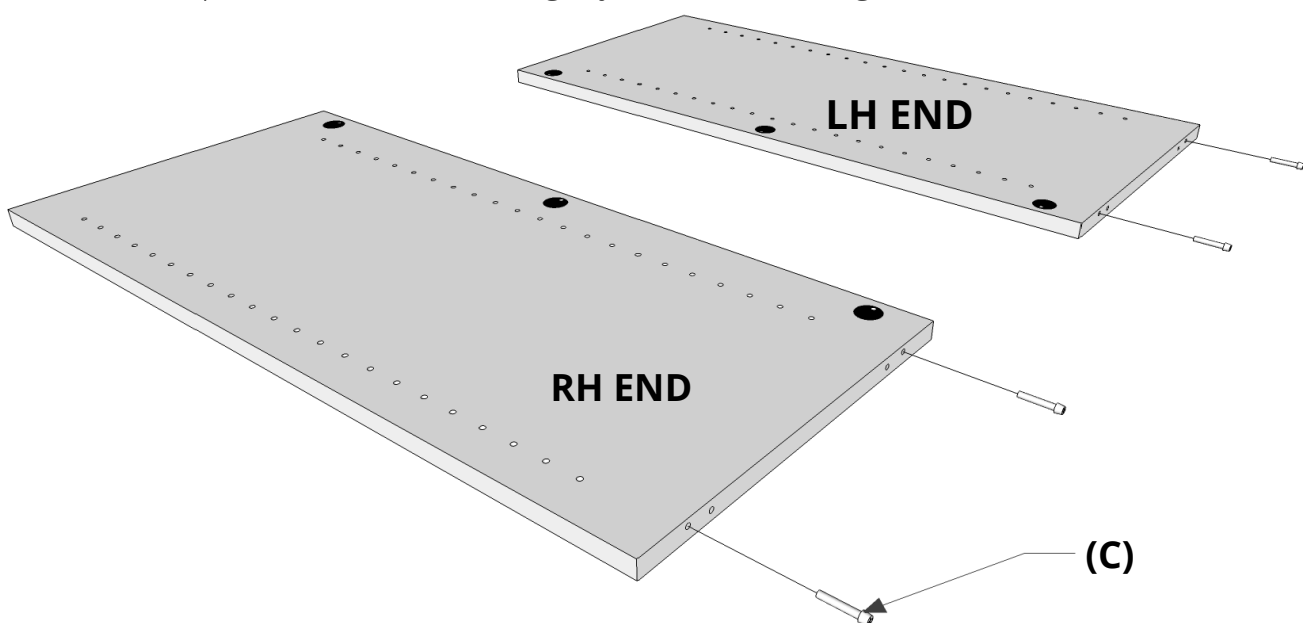

STEP 3



Fix ten (10) PINS (C) into back panel as shown below.

NOTE: all pre-drilled holes for the PINS (C) are offset to the edge of the panel.
Ensure to leave all central pre-drilled holes empty.

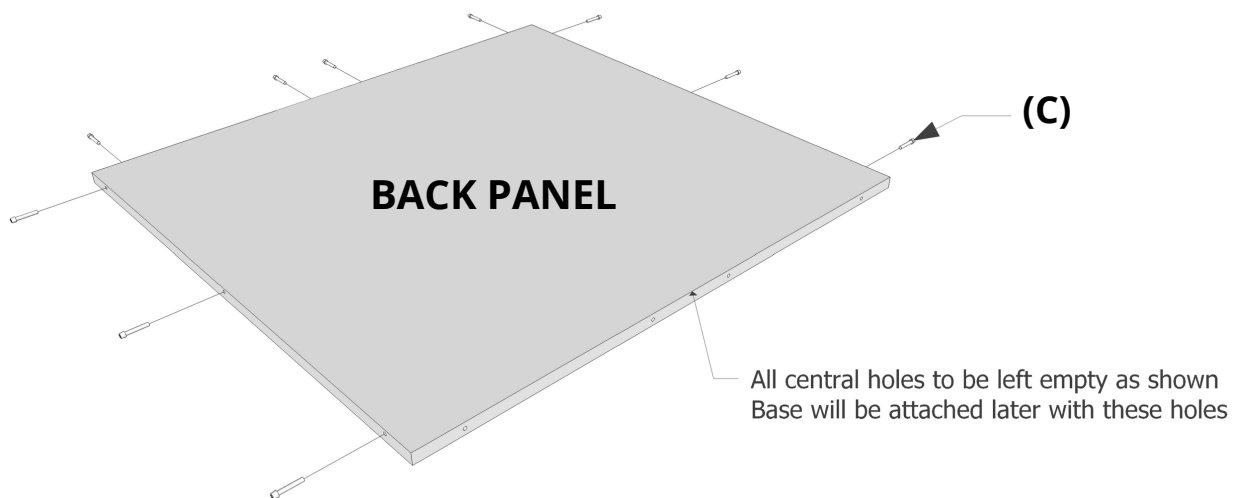

STEP 4

Attach the end panels to the back panel by aligning the PINS (C) with the pre-inserted CAM HOUSING. To tighten, use your screw-driver and rotate the screw on the CAM HOUSING to the right.

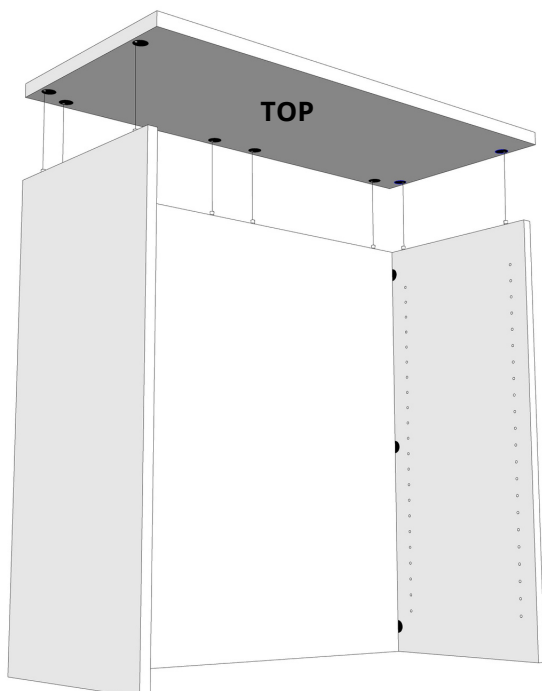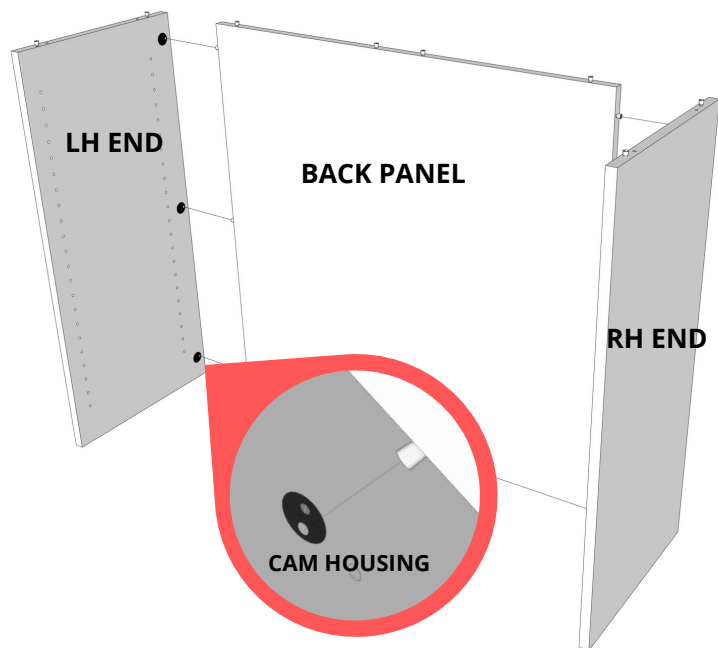


STEP 5

Fix the bookcase top to the back & ends by aligning the PINS (C) with the pre-inserted CAM HOUSING and tighten by rotating the CAM HOUSING screw to the right using your screwdriver.

STEP 6


Take your bookcase base and align with the back, top and sides of your bookcase. Place eight (8) CONFIRMAT SCREWS (E) through the pre-drilled holes on the underside of the base. Using your screw driver, tighten all CONFIRMAT SCREWS (E) until base is secure.

TIP: On un-even floor the two part foot can be adjusted out to level the bookcase.

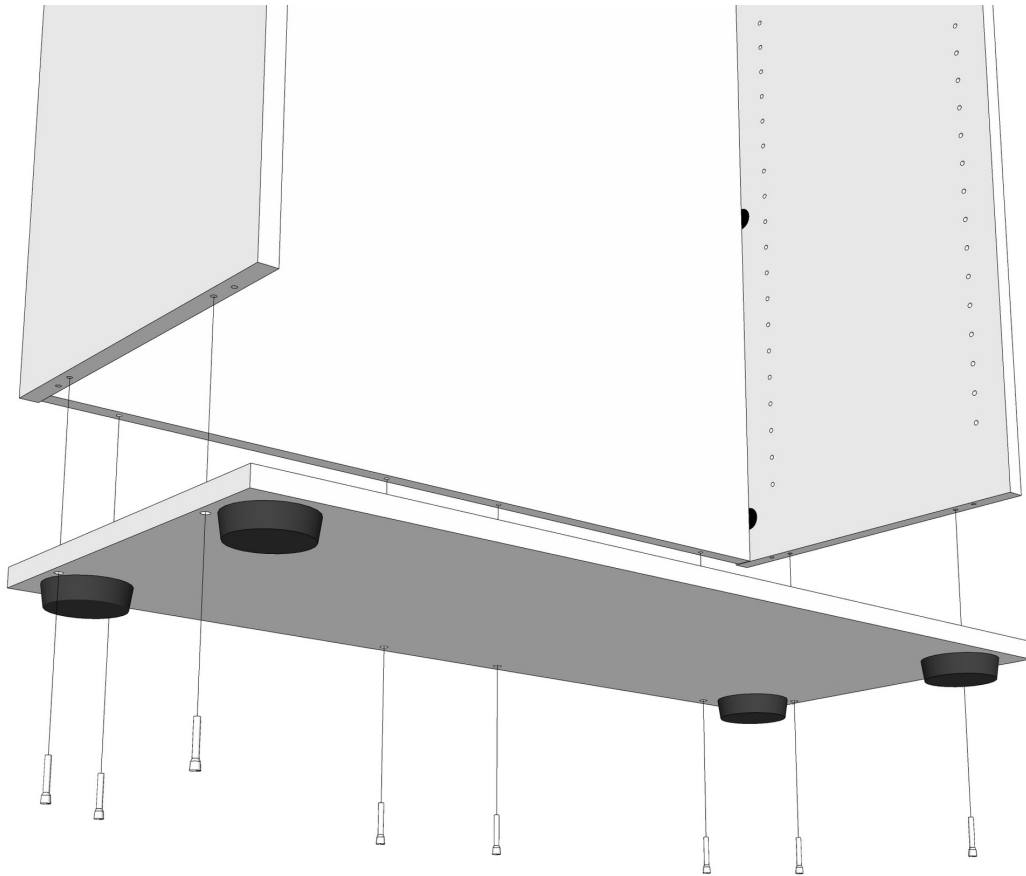

STEP 7

To insert shelves, place your SHELF SUPPORTS (F) in the holes on the end panels at the desired shelf height and the shelf sits on top

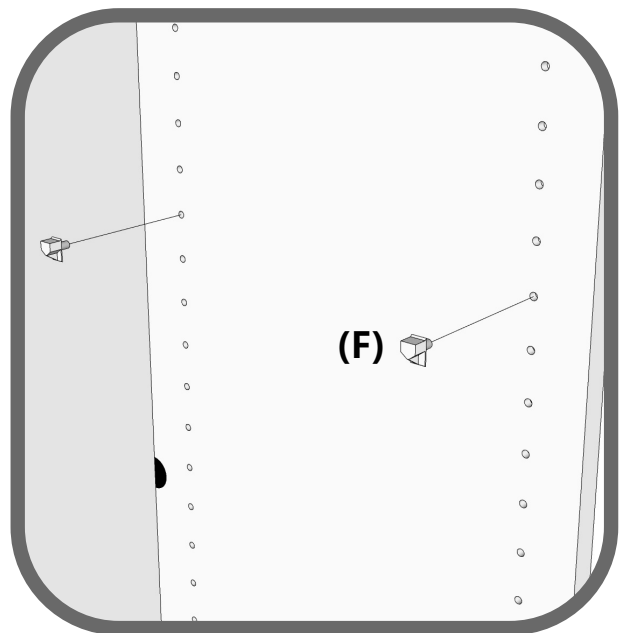

NOTE: IF YOU HAVE ORDERED A STORAGE CUPBOARD, HARDWARE AND INSTRUCTIONS FOR THE ATTACHMENT OF DOORS ARE IN BOX 3 OF 3.