 


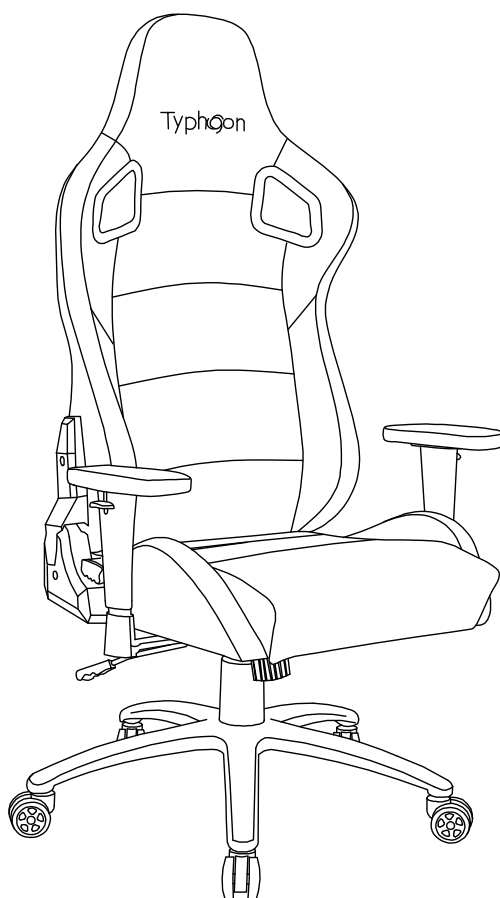

ASSEMBLY INSTRUCTIONS

VIPER GAMING CHAIR PU/
VIPER GAMING CHAIR FABRIC
TYVIPERBK/TYVIPERBE
TYVIPERGN/TYVIPERFAB



Weight capacity: 120kg

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

1 CTN

For spare parts or hardware call 1300 OFFICE (1300 633 423)

Estimated Assembly Time:30minutes

Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



 
Customer Service Contact Details



Spare Parts & Hardware

1300 OFFICE (1300 633 423)

People Required

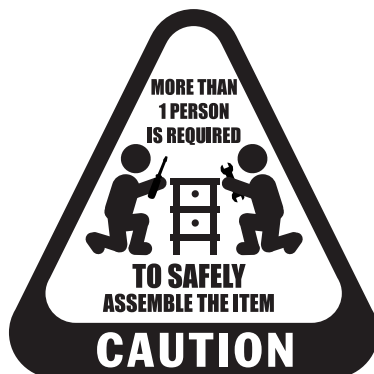

General Advice



NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact 1300 OFFICE (1300 633 423).
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts and screws are firmly secured.
- Check that all bolts and screws are securely tightened at least every 4 months.




 
 

 




WARNING

- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.







DANGER

    - CHILDREN MUST BE SUPERVISED.








Parts List

<div><div>A</div><div></div><div>X5</div></div>	<div><div>B</div><div></div><div>X1</div></div>	<div><div>C</div><div></div><div>X1</div></div>	<div><div>D</div><div></div><div>X1</div></div>
<div><div>E</div><div></div><div>X1</div></div>	<div><div>F</div><div></div><div>X1</div></div>	<div><div>G</div><div></div><div>(L&R) X1</div></div>	<div><div>H</div><div></div><div>(R) X1</div></div>
<div><div>I</div><div></div><div>(L) X1</div></div>	<div><div>J</div><div></div><div>(R) X1</div></div>	<div><div>K</div><div></div><div>(L) X1</div></div>	


Hardware List-
Hardware Spare Parts number - HWVIPERHW & HWVIPXLHW

<p>L (5/16x22mm)</p>  <p>X4</p>	<p>M (1/4x28mm)</p>  <p>X8</p>	<p>N(5/16x25mm)</p>  <p>X8</p>
<p>O (M5x10mm)</p>  <p>X4</p>	<p>P</p>  <p>X4</p>	<p>Q (M5)</p>  <p>X1</p>

   Hardware Spare Parts number -
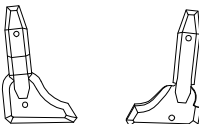
<p>HWVIPERCA</p>  <p>X5</p>	<p>HWVIPERBS</p>  <p>X1</p>	<p>HWVIPERGL</p>  <p>X1</p>
<p>HWVIPERME</p>  <p>X1</p>	<p>HWVIPERAR</p>  <p>(L&R) X1</p>	<p>HWVIPERBK</p>  <p>(R) (L) X1</p>
<p>HWVIPERCV</p>  <p>(R) (L) X1</p>		

 
Step 1

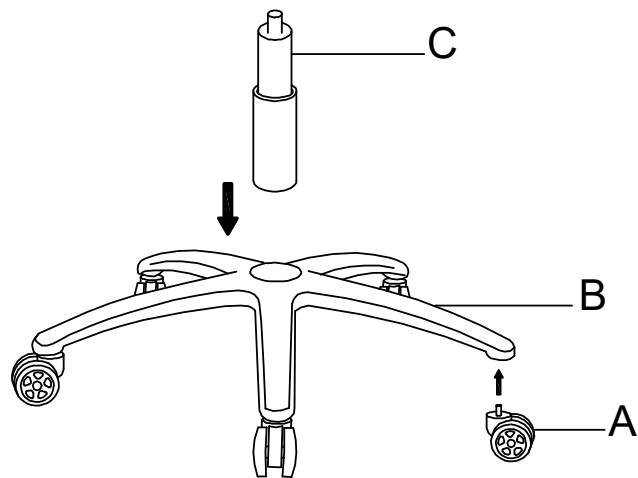


Step 2



 E

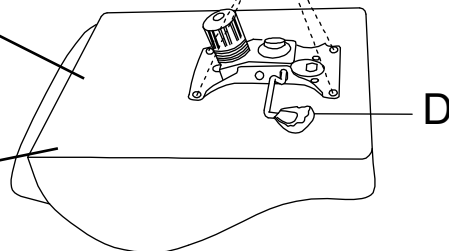

Lx4 (5/16x22mm)

 


Qx1(M5)




Note :
Tighten 80% with hex key (Q).
DO NOT fully tighten.

 Step 3

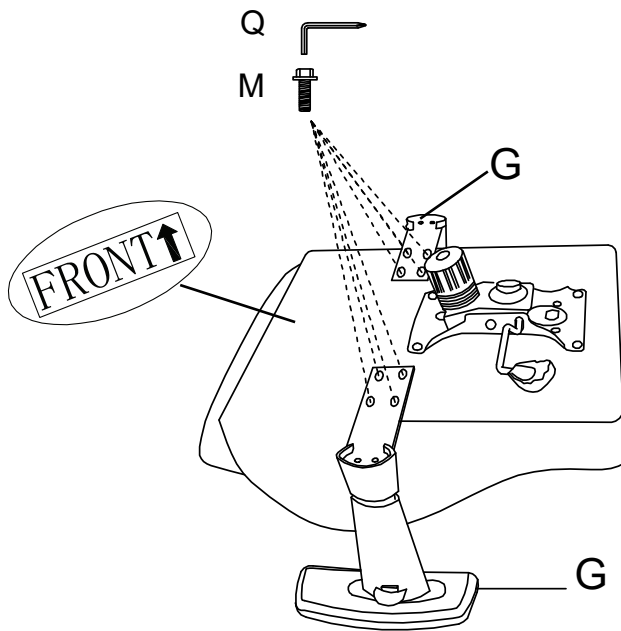

Mx8 (1/4x28mm)

 


Qx1(M5)




Note :
Tighten 80% with hex key (Q).
DO NOT fully tighten.

 
Step 4

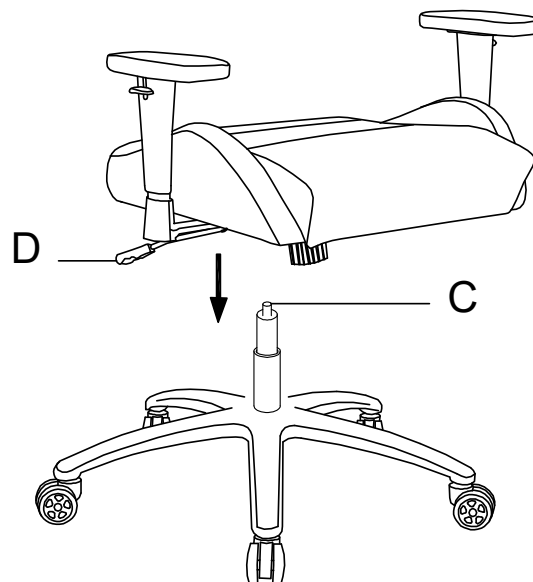

 Step 5

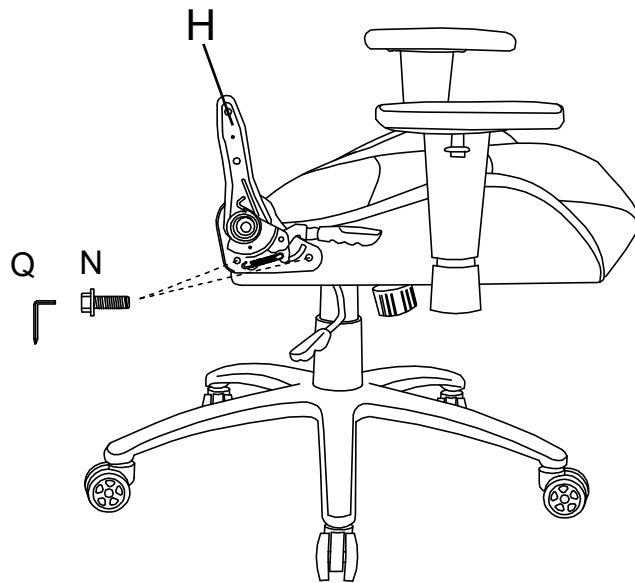

Nx2 (5/16x25mm)

 


Qx1(M5)




Note :
Tighten 80% with hex key (Q).
DO NOT fully tighten.

 Step 6

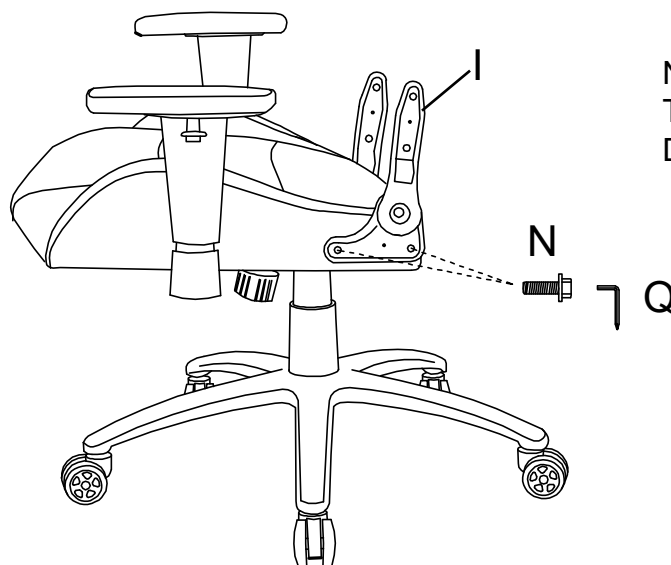

Nx2 (5/16x25mm)

 


Qx1(M5)




Note :
Tighten 80% with hex key (Q).
DO NOT fully tighten.

 Step 7

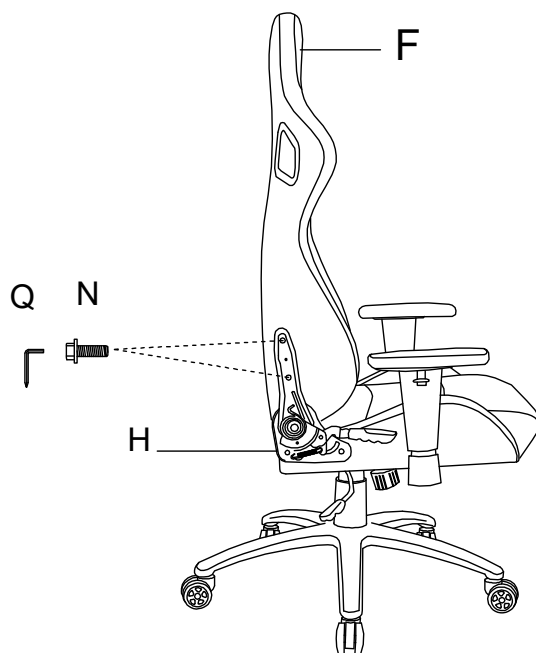

Nx2 (5/16x25mm)

 


Qx1(M5)




Note :
Tighten 80% with hex key (Q).
DO NOT fully tighten.

 Step 8

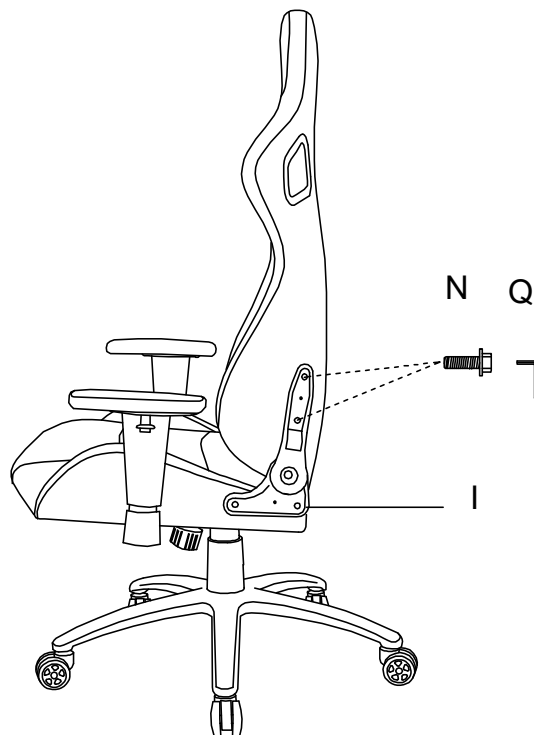

Nx2 (5/16x25mm)

 

Qx1(M5)



 
Note:
Please tighten all screws
before use this chair.

Step 9

Ox2 (M5x10mm)



Qx1(M5)

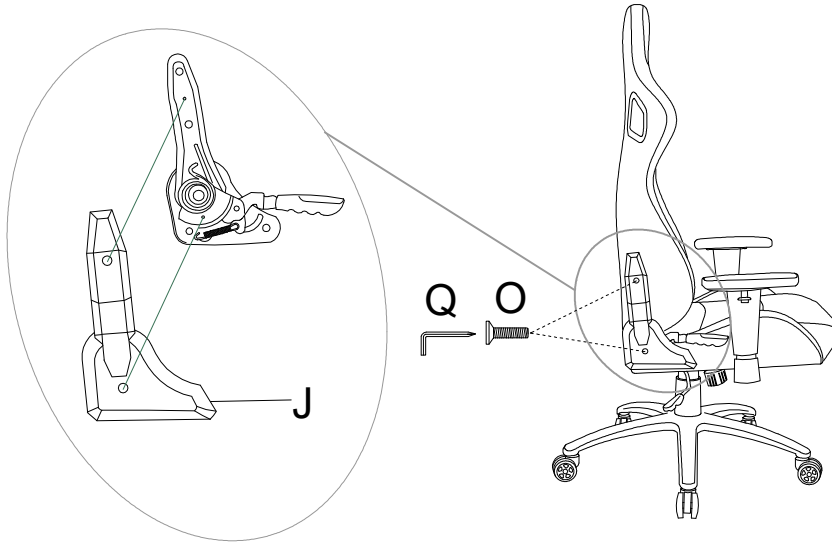


Step 10

Ox2 (M5x10mm)




 Qx1(M5)

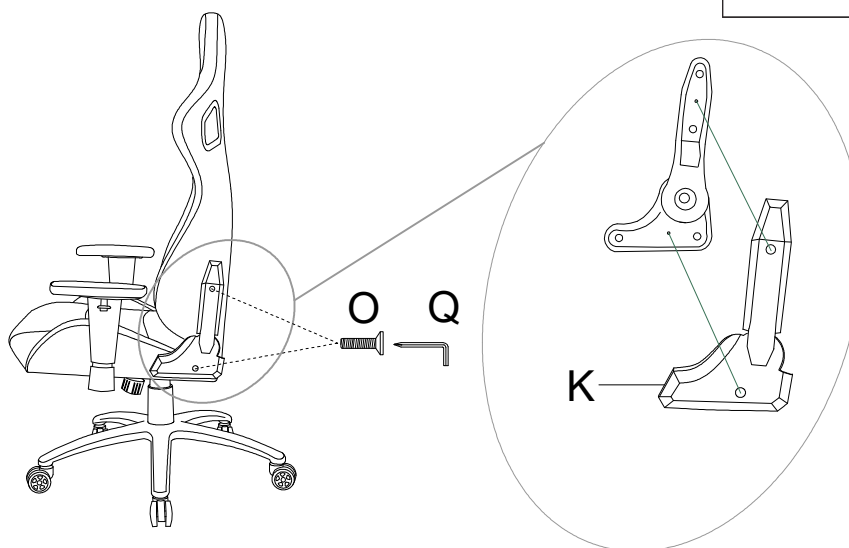


Step 11

 Px4

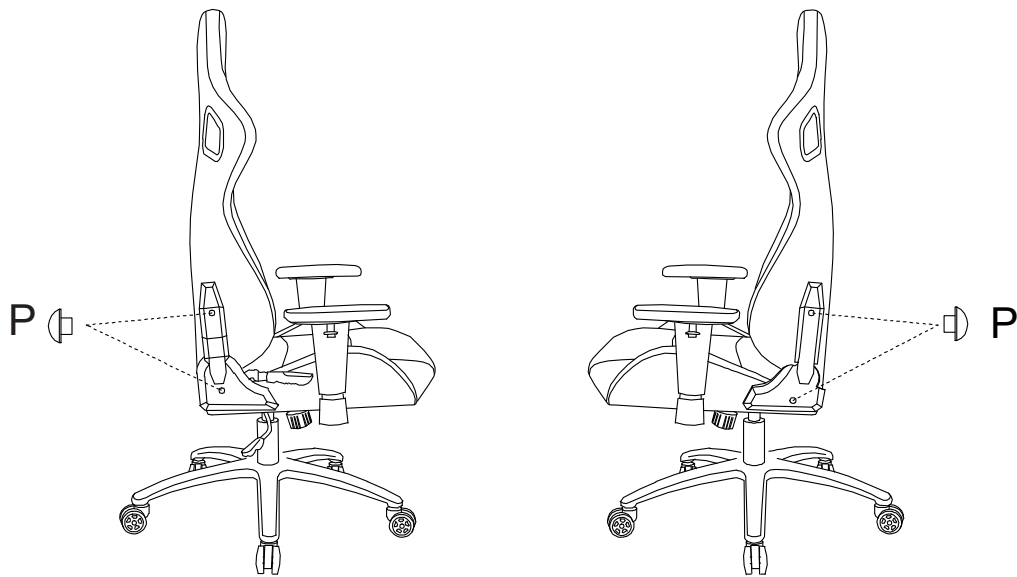

 Step 12

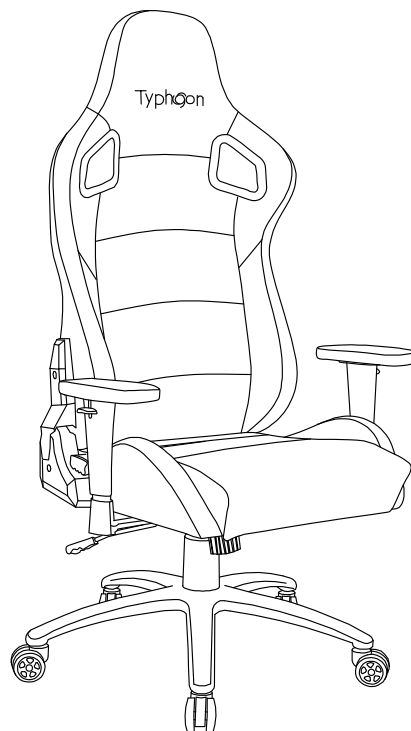

Note:
Please tighten all screws
before use this chair.

Back Tilt Adjustment

- Pull up the reclining controller to allow chair back moving backward or forward
- Release the reclining controller to lock the chair back at your desired position.

Armrest Height Adjustment

 
- Pull up the armrest button moving the armrest up or down
- Release the armrest button at your desired height.

Chair Height Adjustment

- To raise the seat: lean slightly forward while seated to relieve the pressure on the tilt mechanism.
- To lower the seat: remain seated and lift the handle upwards until the chair lowers to your desired height.

Chair Tilt Tension Adjustment

- Grasp the round cylinder knob under the front center of the seat.
- For firmer/stiffer--turn clockwise.
- For softer/looser--turn counter clockwise.

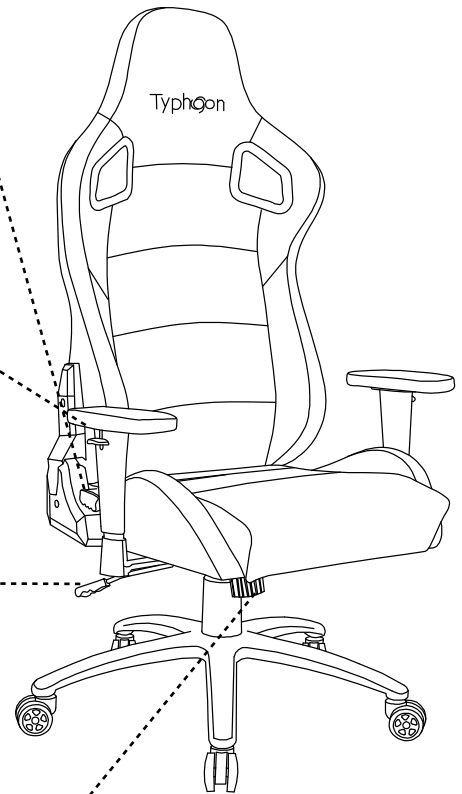

Care Instructions - PU Chairs

- Wipe with a damp cloth & mild soap. Wipe dry immediately with an absorbent drycloth. Treat spills immediately with an absorbent cloth by blotting the spill.
 - Do not use detergents, solvents or abrasive cleaners.
 - Avoid contact with skin, in particular during high temperatures & humidity.
- Clean, check & tighten all parts regularly.

Care Instructions-Fabric Chairs

- Dust & vacuum chair fabric to remove dust & dirt.
- Wipe over surfaces with damp cloth.
- If any stains persist, use a water based cleaner. Ensure a spot test is completed first to ensure it does not affect the fabric colour.
- Do not use harsh detergents, solvents or abrasive cleaners.
- Clean,check & tighten all parts regularly.

Warranty 3 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- To cosmetic damage;
- To damage caused by consumables used in connection with the product (such as cleaning products);
- Where the product has not been used in accordance with all provided instructions;
- To damage arising from fair wear and tear;
- Where the product has not been subject to reasonable use;
- Where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.

If you would like to know more about our furniture products, please visit www.officeworks.com.au