

ASSEMBLY INSTRUCTIONS

TYPHOON VIPER GAME DESK 1200MM ITEM CODE: TYPVIPBK12 / TYPVIPGG12 / TYPVIPWE12



This design and instruction booklet is subject to copyright www.officeworks.com.au

1 Carton

For spare parts or hardware email hardware@kyvas.com.au

Important

Estimated Assembly Time: 45min

Assembly Video

- To view an assembly video, go to https://www.officeworks.com.au/
- Search the product by item code or name:



Click on the icon to watch the video.

 








Tools Required



CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- Missing hardware, please contact Kyvas on 0456 456 547 or hardware@kyvas.com.au
- Please ensure you have the item name, batch number, required part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION


- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Keep children and animals away from the assembly area. This furniture contains small parts that could cause choking if swallowed.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- This item is not for outdoor use unless stated otherwise.
- Failure to follow these warnings could result in serious injury.


DANGER


• CHILDREN MUST BE SUPERVISED.

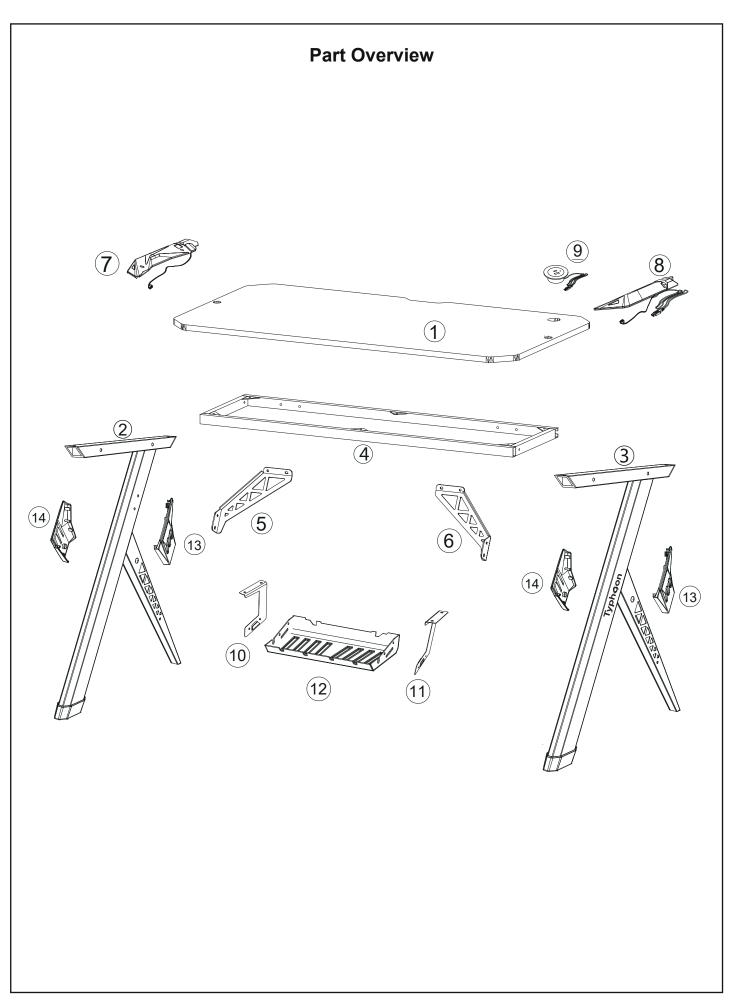



Part List


Parts located in Carton - TYPVIPBK12 / TYPVIPGG12 / TYPVIPWE12

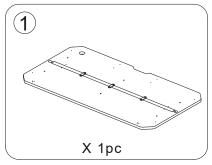


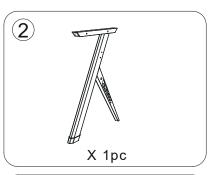


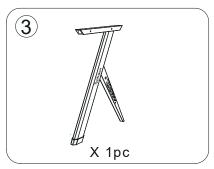


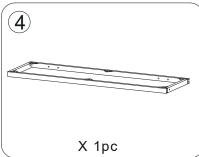


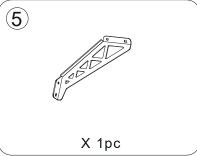


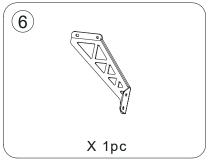


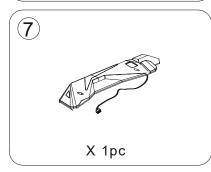


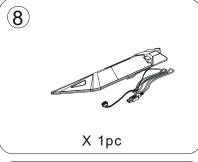


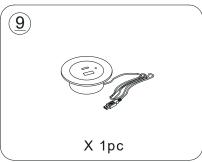


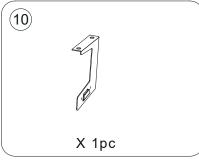

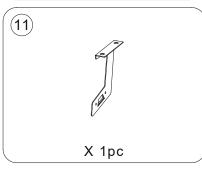

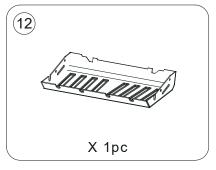


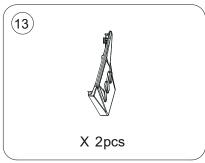

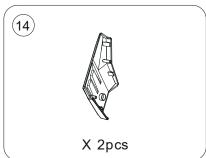


Hardware List


Hardware Pack located in Carton - TYPVIPBK12 / TYPVIPGG12 / TYPVIPWE12

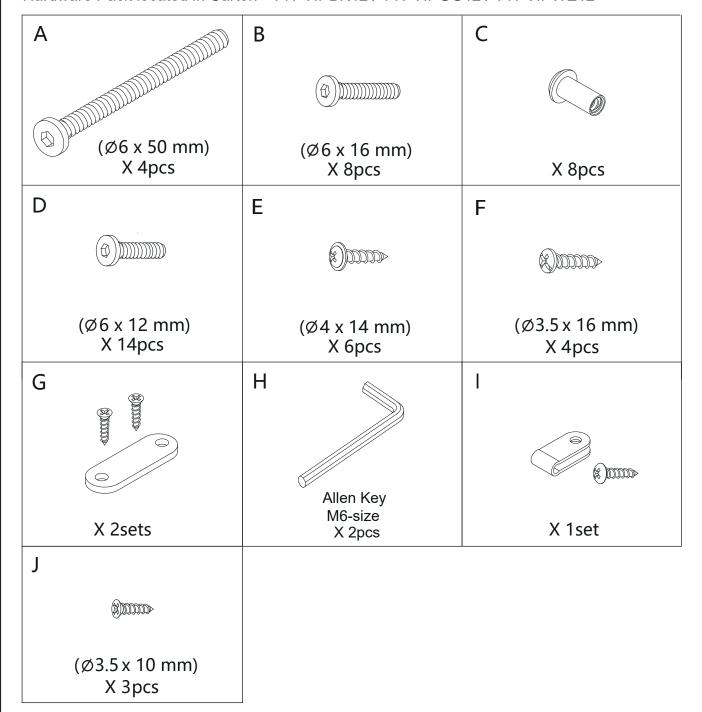



Other hardware located in Carton - TYPVIPBK12 / TYPVIPGG12 / TYPVIPWE12

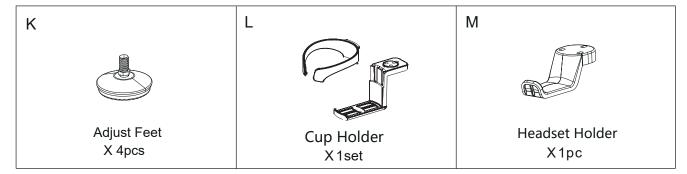



If you are missing hardware, please contact Kyvas at hardware@kyvas.com.au

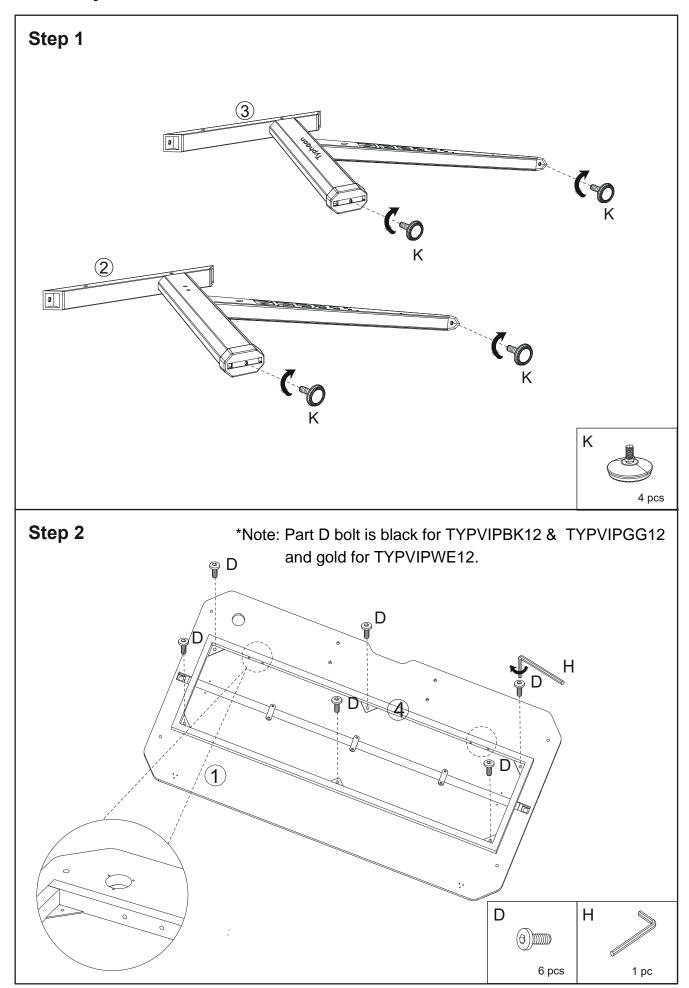


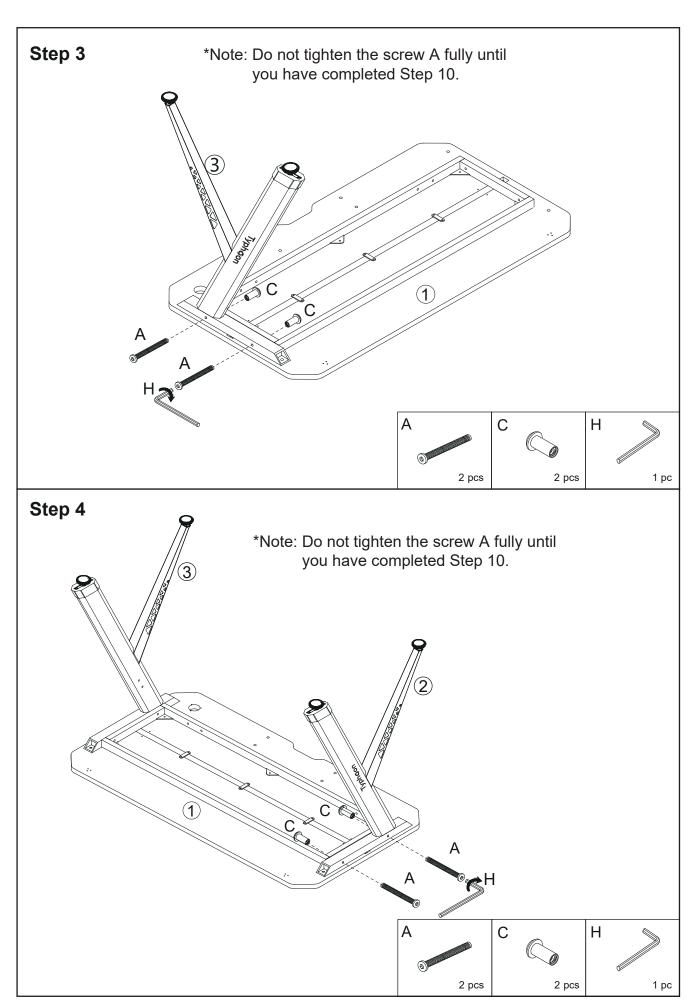


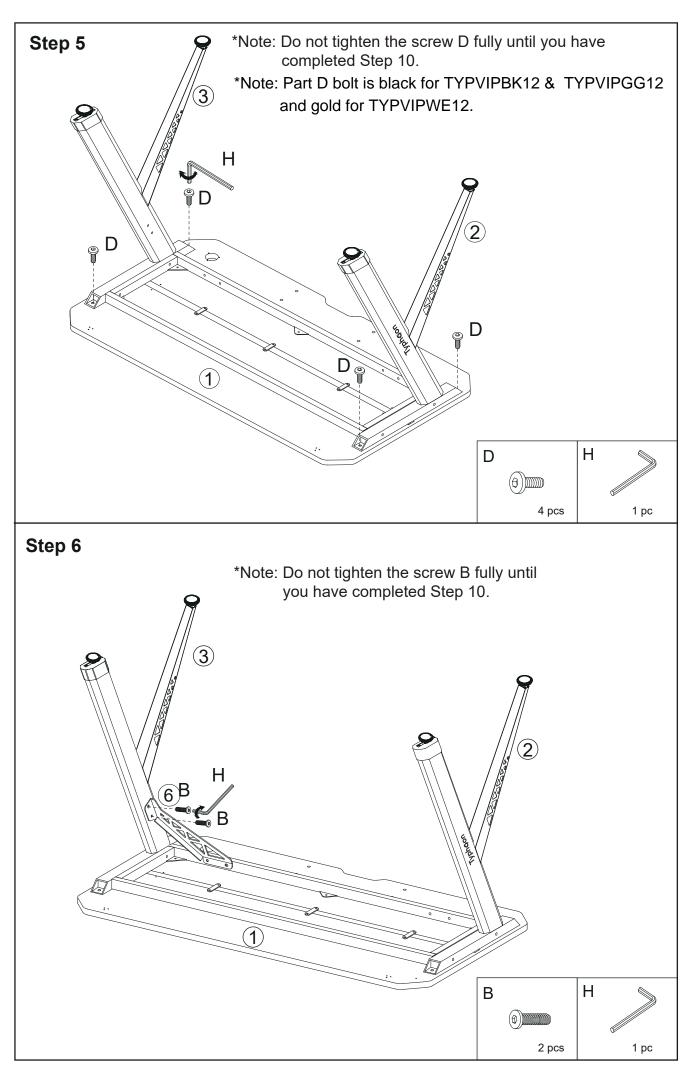


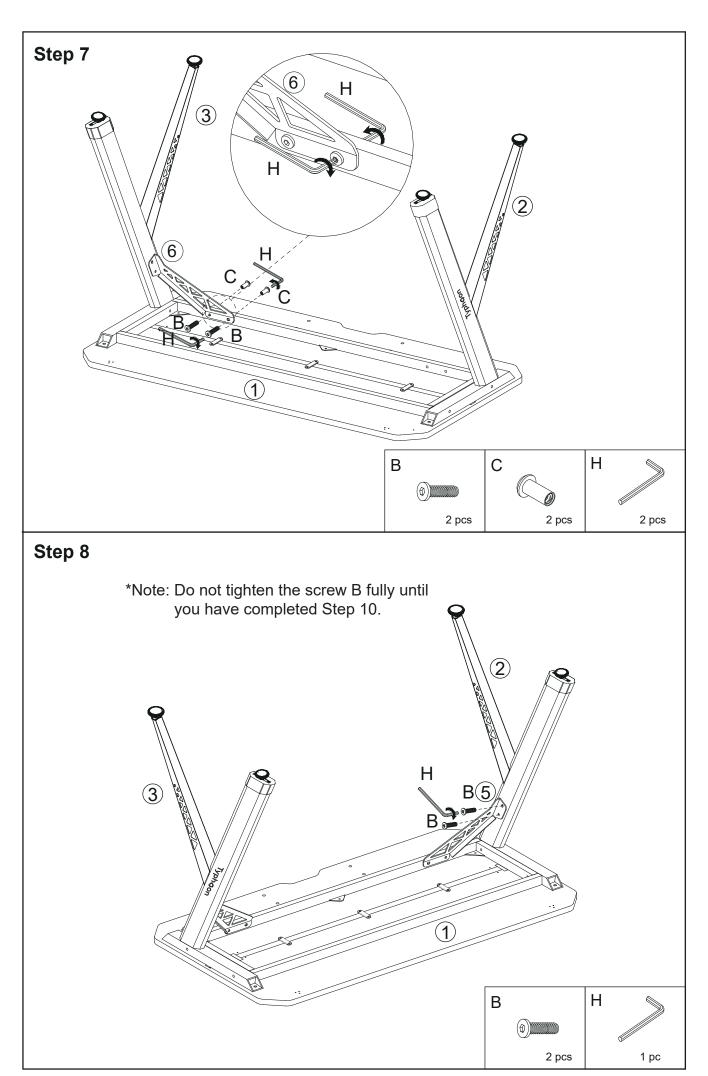


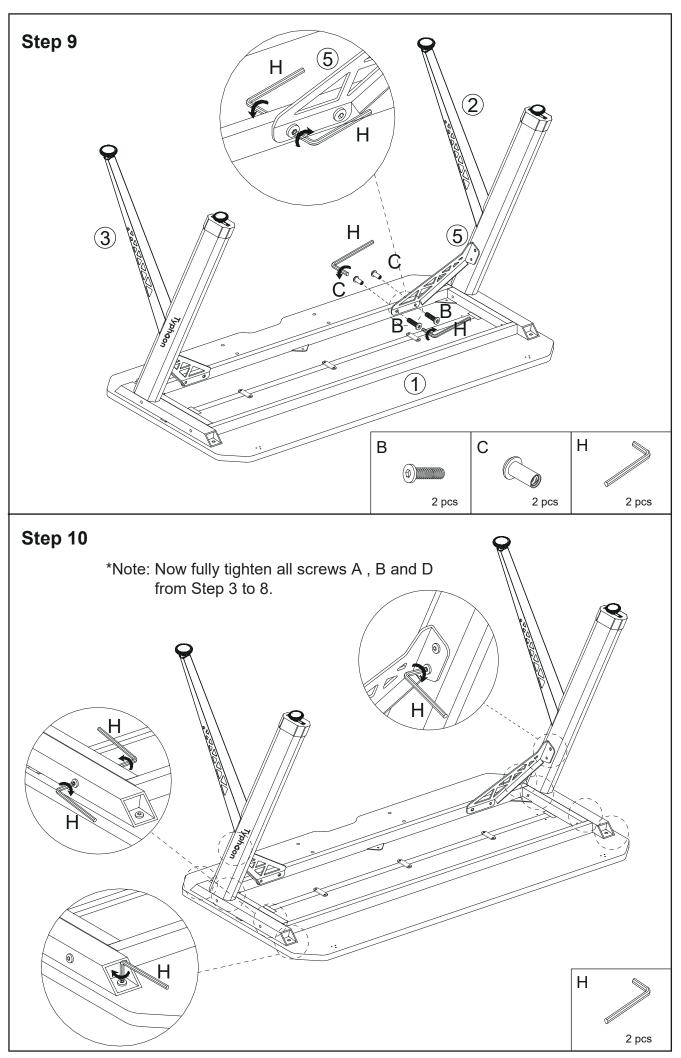


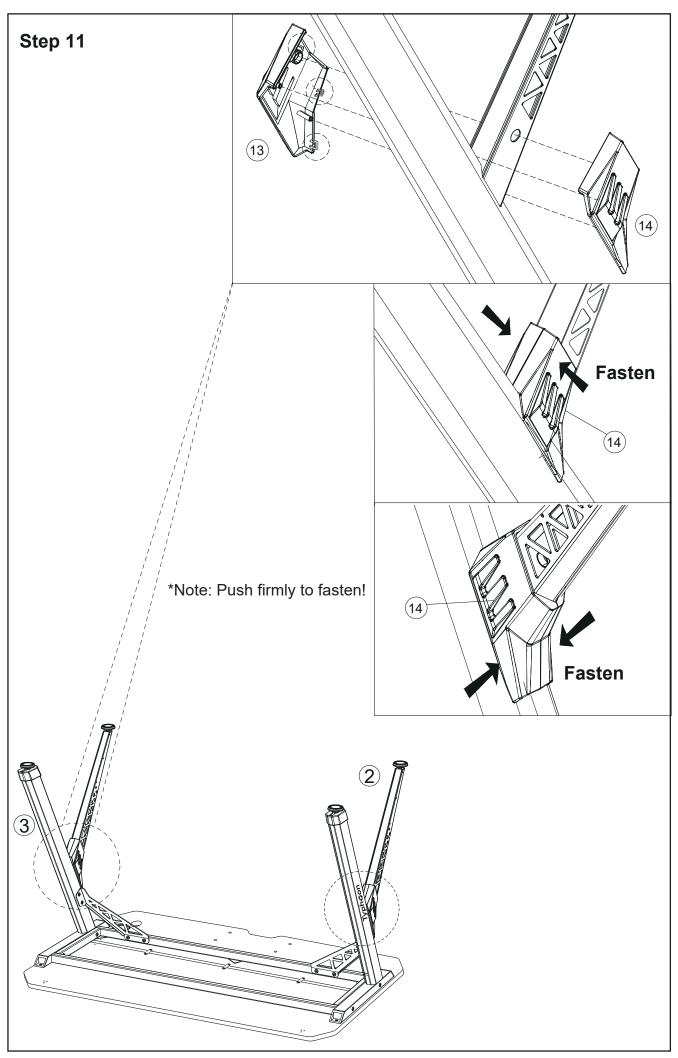

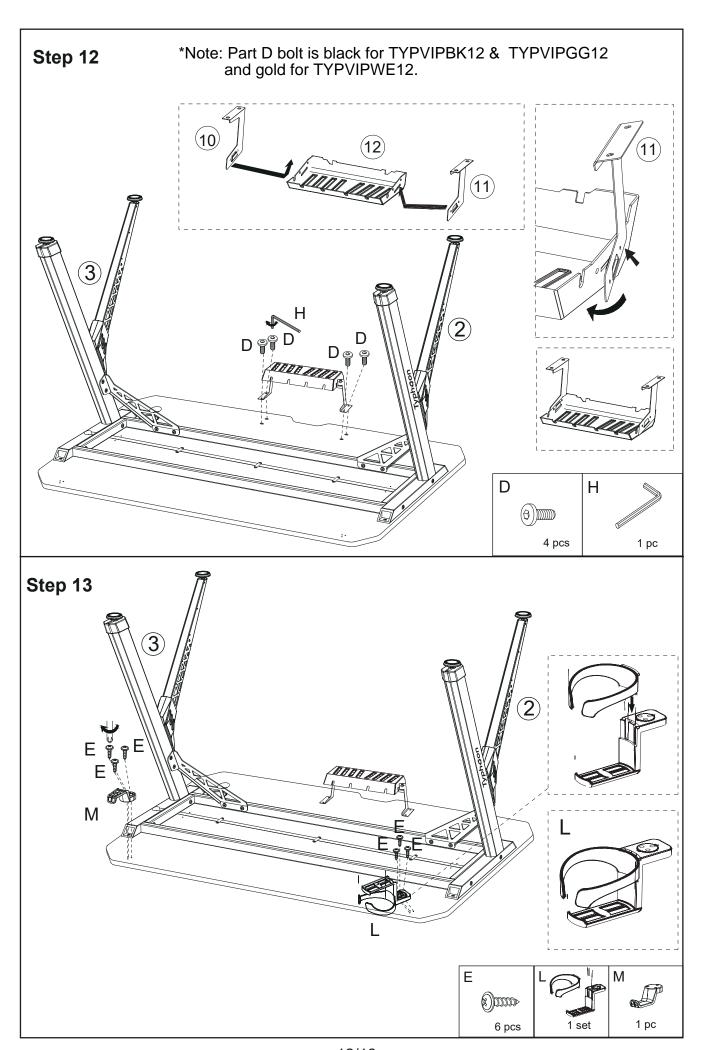

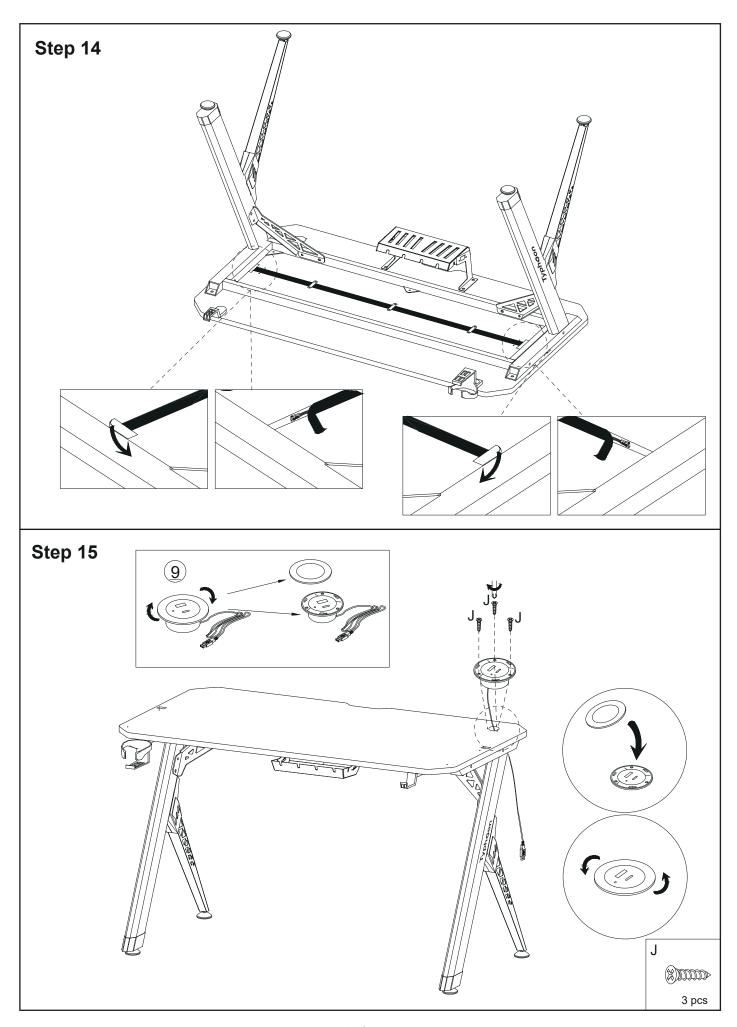

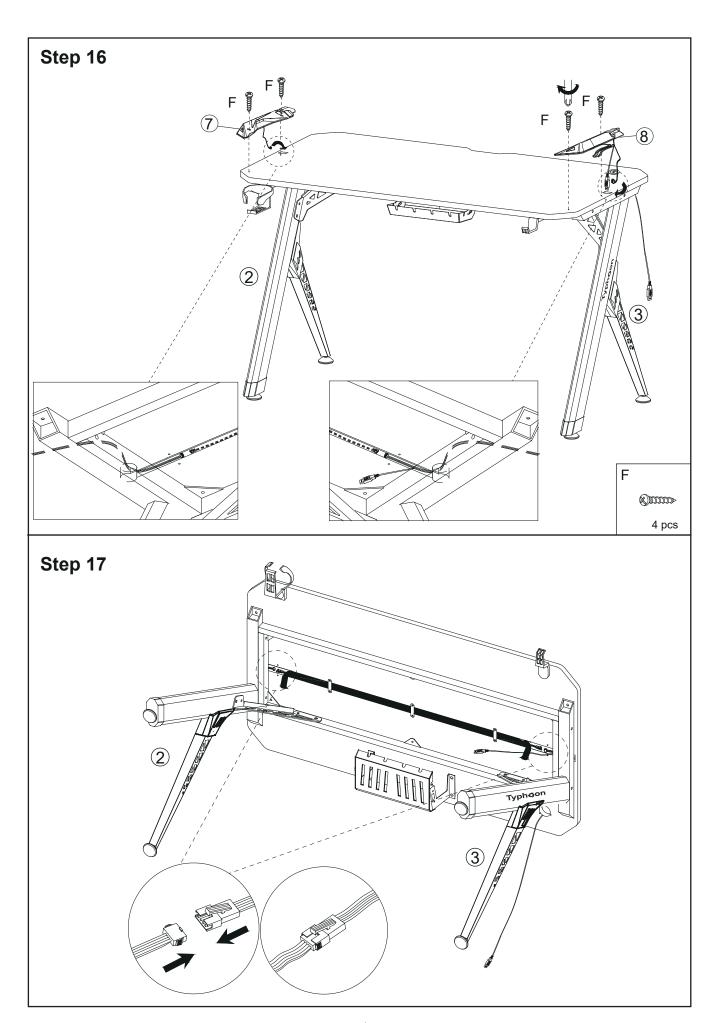

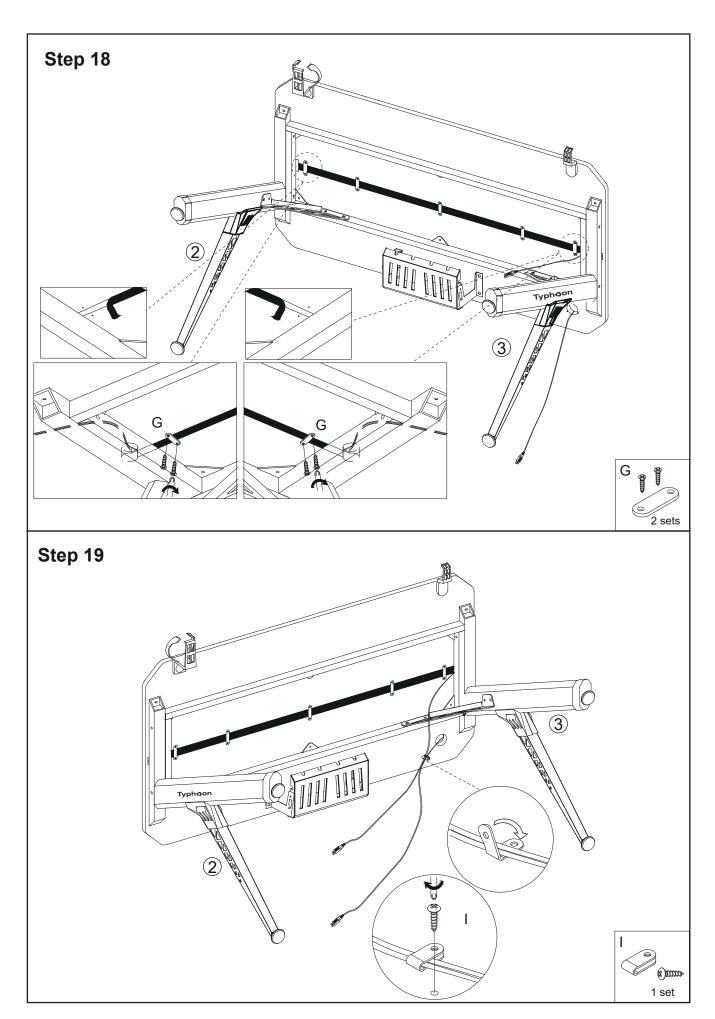

Maximum Load Capacity:

Desk Top - 40 kg

Headset Holder - 2 kg

Cup Holder - 2 kg

Cable Tray - 2 kg



Your TYPHOON VIPER GAME DESK 1200MM is now complete and ready for use!

Remote Control



⚠ CAUTION:


This is a tactile switch, not a physical button. Please do not press it too hard, otherwise it will affect the use.

Fuction descripton:

Turn ON: Tactile 1 second Turn OFF: Tactile 3 seconds

There are 8 different lighting models:

- 1. Green
- 2. Blue
- 3. Red
- 4. Cyan
- 5. Purple
- 6. Color Jump
- 7. Color Replace
- 8. Color Fade

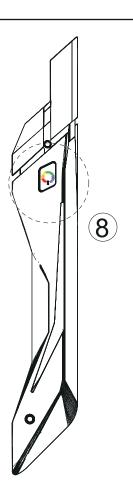

Care Advice

Care Instructions - Melamine Finish Gaming Desk with LED light

- Keep away and protect from direct sunlight and heat.
- Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Disconnect the supply when carrying out maintenance and cleaning.
- Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- Avoid of using corrosive or abrasive cleaner as this will void the product warranty.
- Clean, check and tighten all parts regularly.

Safety Warning

WARNING – Follow the user instructions for correct operation of the LED light.



• **WARNING** – This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

Warranty 3 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.

If you would like to know more about our furniture products, please visit www.officeworks.com.au