

### Parts List

Item	Qty	Part Number	Primera Code
1	1	B200551	Electric Release. AL111AS
2	1	B200554	44mm Door Electric Release - Strike Plate Part B

### Fixings

6 lobe pin-torx anti-tamper stainless steel security screws.

### Maintenance

Lubrication: RS High Performance Dry Lubricant, RS 251-3794

Cleaning: Proprietary baby oil and soft cloth.



### Door Latch Position


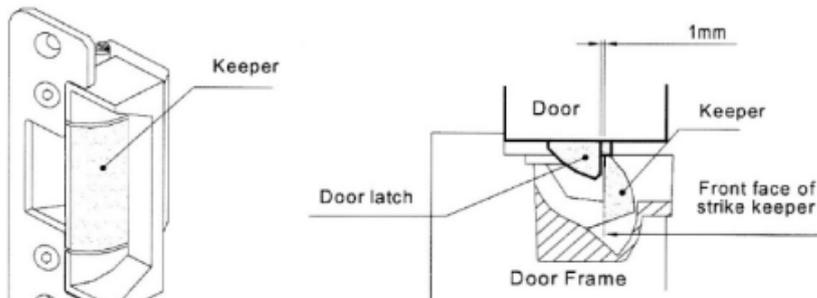


Figure 1


As shown above, there must be a 1mm gap between the door latch and the front face of strike keeper to prevent the door from exerting pressure on the keeper when the door is closed.

### Power Input 12 VDC or 24 VDC Supply:

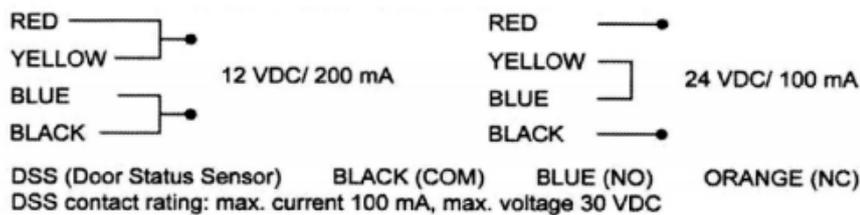

Note: There is no polarity on power input.

### Power Input 12 VDC or 24 VDC Supply:

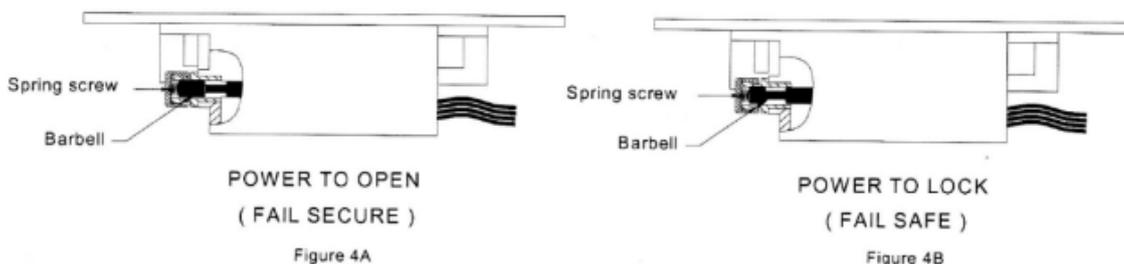

**WARNING: Do not attempt to swivel the keeper while changing the function, this will damage the barbell mechanism.**

#### Procedures to convert Fail Secure (Figure 4A) to Fail Safe (Figure 4B):

- Step 1: Remove the spring screw from the end part of the strike body.
- Step 2: Remove the Barbell to reverse in position with long side in and short side out.
- Step 3: Replace the spring screw

#### Procedures to convert Fail Safe (FIGURE 4 B) to Fail Secure (Figure 4A):

- Step 1: Remove the spring screw from the end part of the strike body.
- Step 2: Remove the Barbell to reverse in position with the short side in and long side out.
- Step 3: Replace the spring screw.