



Caring for your Retractable Blinds and Screens

Care instructions:

- When using blind or screen, always operate from the middle.
- Please use a soft damp cloth to remove any dirt or marks on the blinds.
- To avoid damage, do not have the blind down whilst window is open.
- Please use warm soapy water to clean the frame (no harsh cleaning products).
- Please use a soft brush to clean the screens.
- If you experience any functional issues, please refer to our website: www.screenaway.com.au or call **1800 738 722**.

Please visit www.screenaway.com.au for warranty details.