


J.BURROWS

.....

Assembly Instructions

Bathurst Racer Chair

JBBATHCHRD/JBBATHCHBE/JBBATHCHWH/JBBATHCHBK


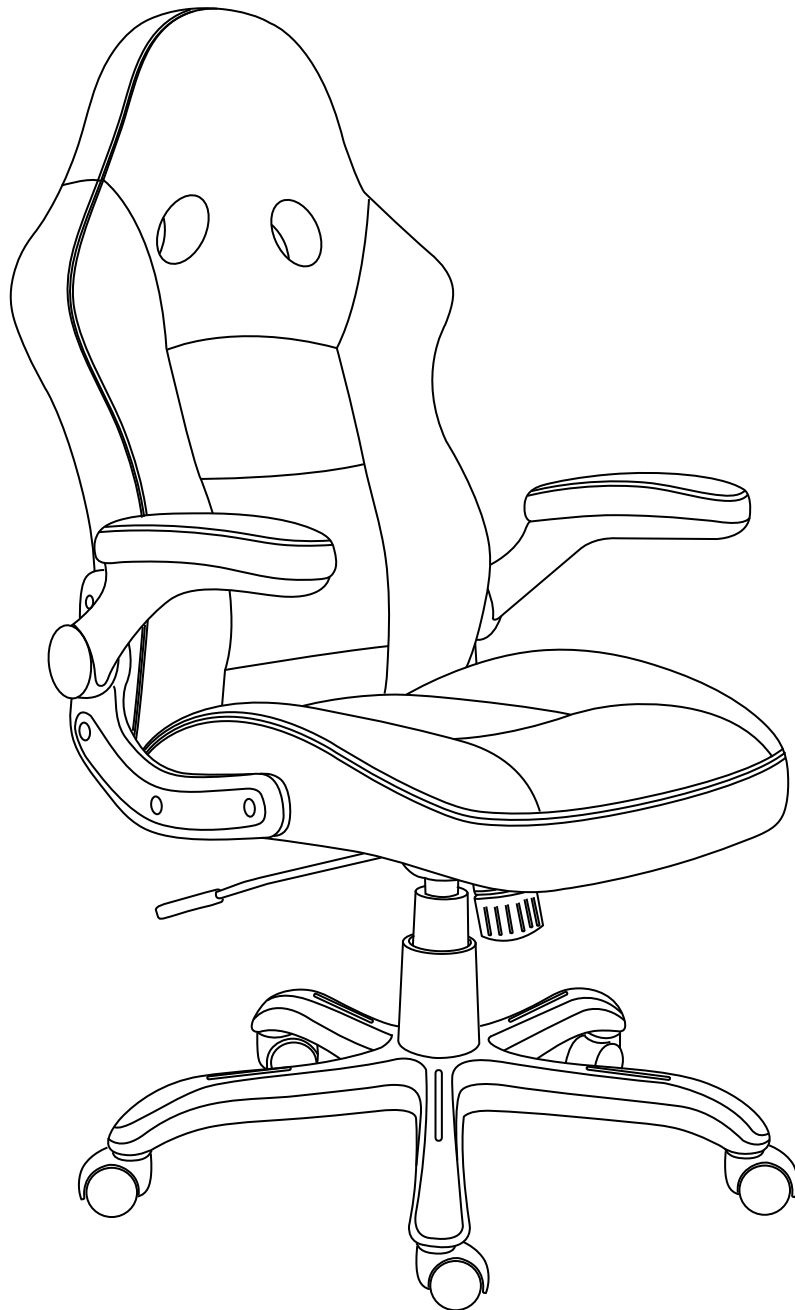


This chair has a load rating of 120kg

Important


Estimated Assembly Time: 30min

Assemble Item On A Clean Flat Surface

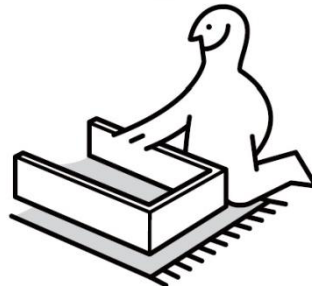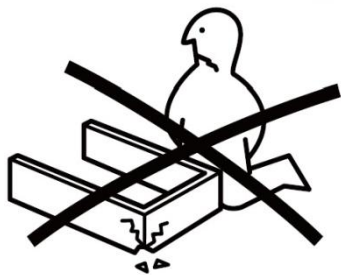


PART LIST

A

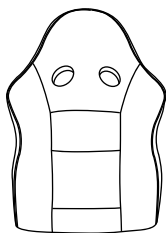


X1

B




X1

C-L / C-R

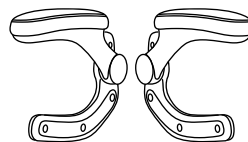


X1

D

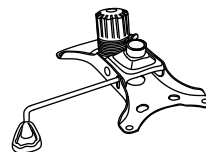


X1

E




X1

F



X1

G



X1

H



X5


HARDWARE LIST

I (1/4" x 3/4")



X2

J (1/4" x 1")



X8

K (1/4" x 7/8")



X2

L



X8

M (5mm)



X1

Please check you have all hardware components before assembling.


If you are missing any hardware components from the Hardware List please contact My Zone on

Tel: (03) 9310 3011 or Email: hardware@myzone.net.au

Please ensure you have the name of the item, store purchased from, hardware part required and quantity.


Please retain your receipt to validate warranty. Enjoy your new purchase!

Step 3

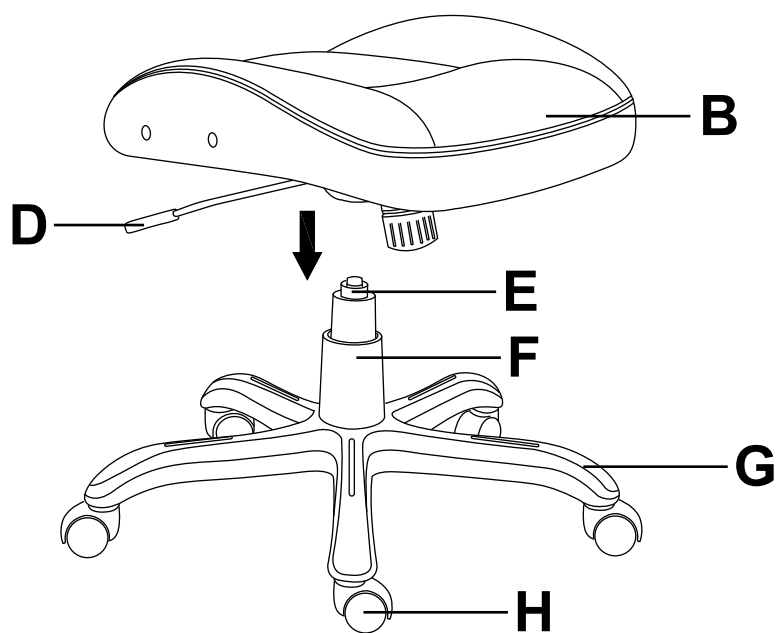


Note: Place assembled seat on the Gas Lift (E). Push down firmly until connection is secure.

Step 4

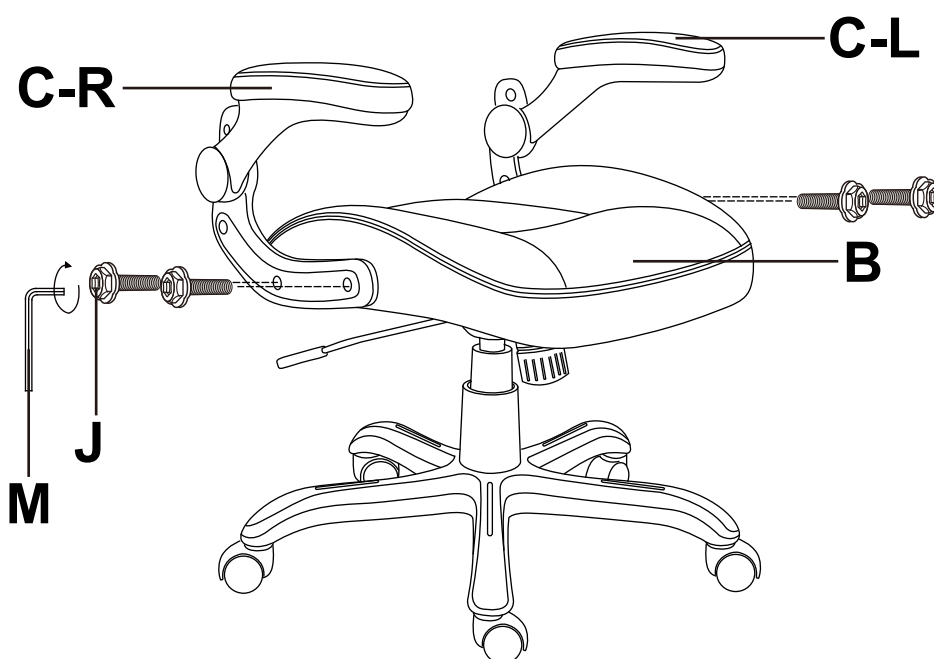


Note: Attach Armrests (C) to the assembled Seat Cushion (B) using 4x Screws (J) with Allen Wrench (M). Do not tighten Screws fully until you have completed assembly.

Step 5

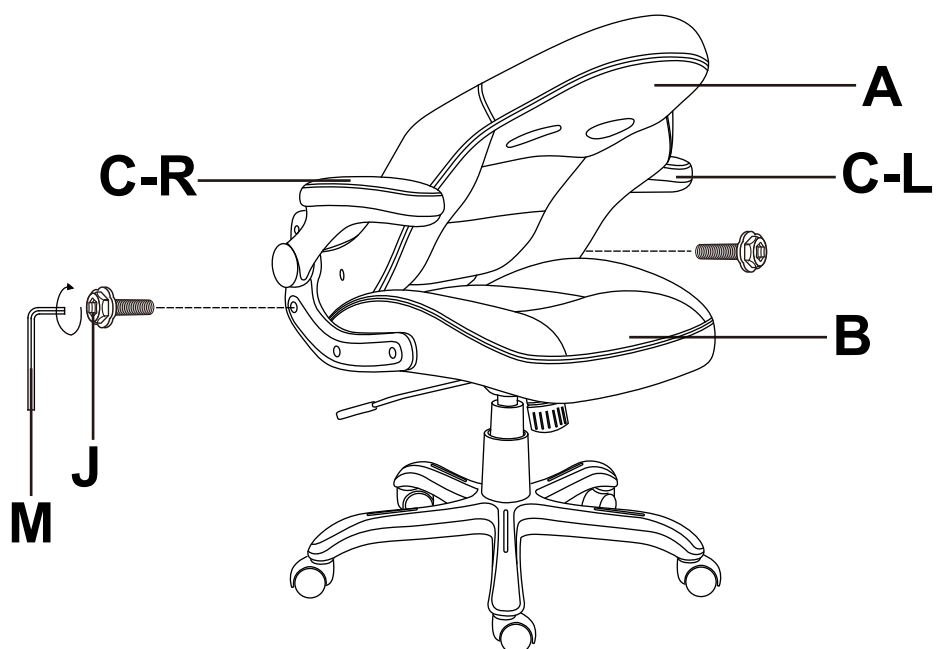


Note: Attach Back Cushion (A) to Armrests (C) by securing 2x Screws (J) to the lower holes of the Back Cushion (A) as shown. Do not tighten Screws fully until Step 7.

Step 6

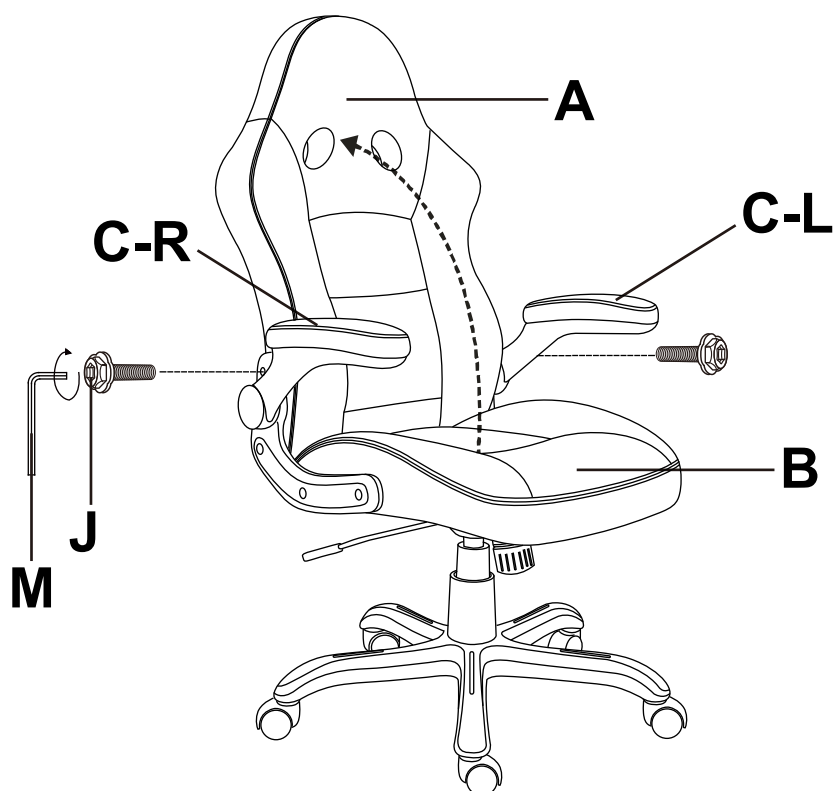


Note: Push the Back Cushion (A) to the upright position. Assemble 2x Screws (J) into the top holes of Back Cushion (A).

Step 7

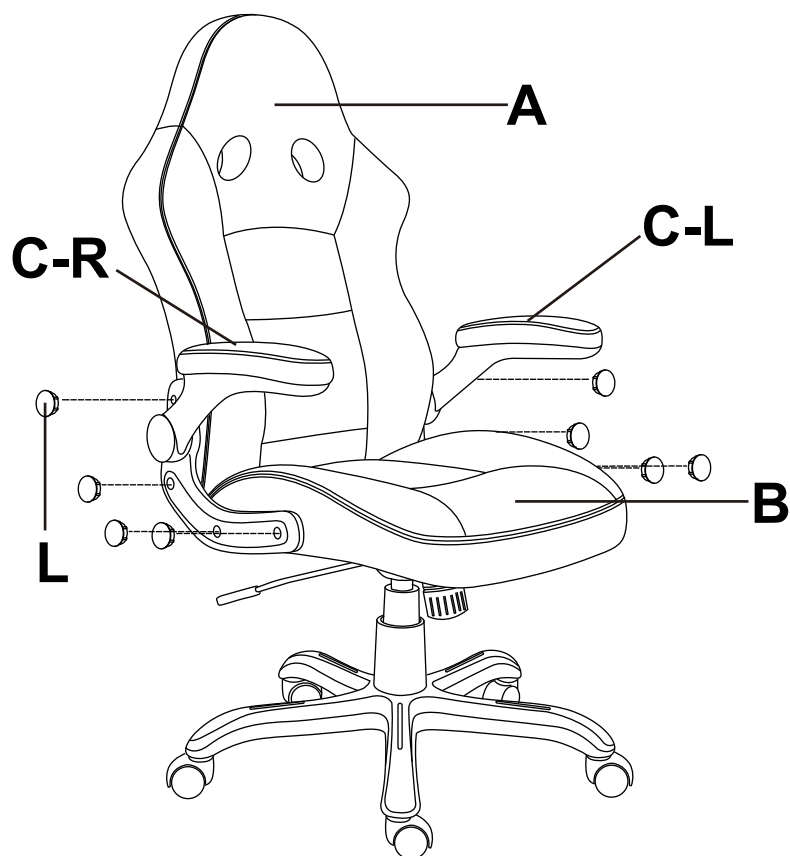

Note: Fully tighten all Screws (J) with Allen Wrench (M). Press the Plastic Caps (L) into the Armrest holes to cover the screws.

Step 8

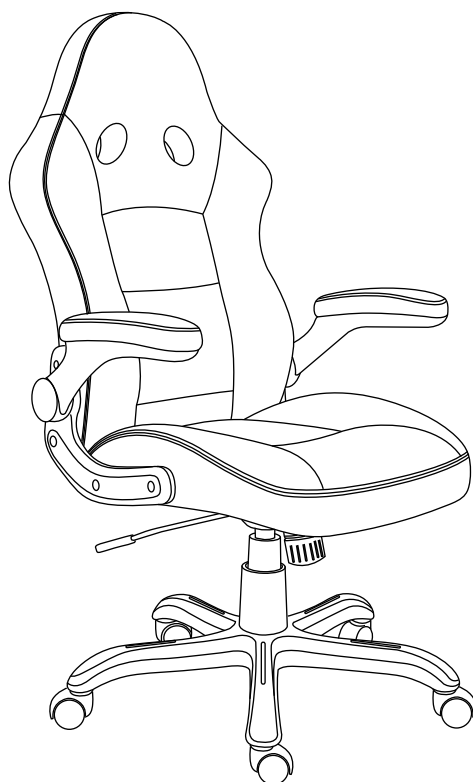

Your Bathurst Racer Chair is now complete and ready for use.
IMPORTANT NOTE: Periodically check and re-tighten screws.

BATHURST RACER CHAIR

FEATURES



* Flip back armrest



* Chair Height Adjustment

- To increase chair height pull lever upward while lifting body weight slightly off the seat.
- Release lever at desired height.
- To lower chair height sit fully into the chair and pull lever upward.
- Release lever at desired height.



* Chair tension function

- Pull lever out to unlock & allow chair to tilt back & forth.
- Push lever to lock. Chair will have slight movement in locked position.



* Adjustable Chair Tension Speed

- Turn continuously to adjust how quickly chair tilts back & forth.

Note: If adjusting while sitting in chair:
Turn knob left to tighten tension.
Turn knob right to loosen tension.

