


ASSEMBLY INSTRUCTIONS



AERO BOARDROOM TABLE (3 CTNS)

JBAEROBRDT



EAN: 9341694242408

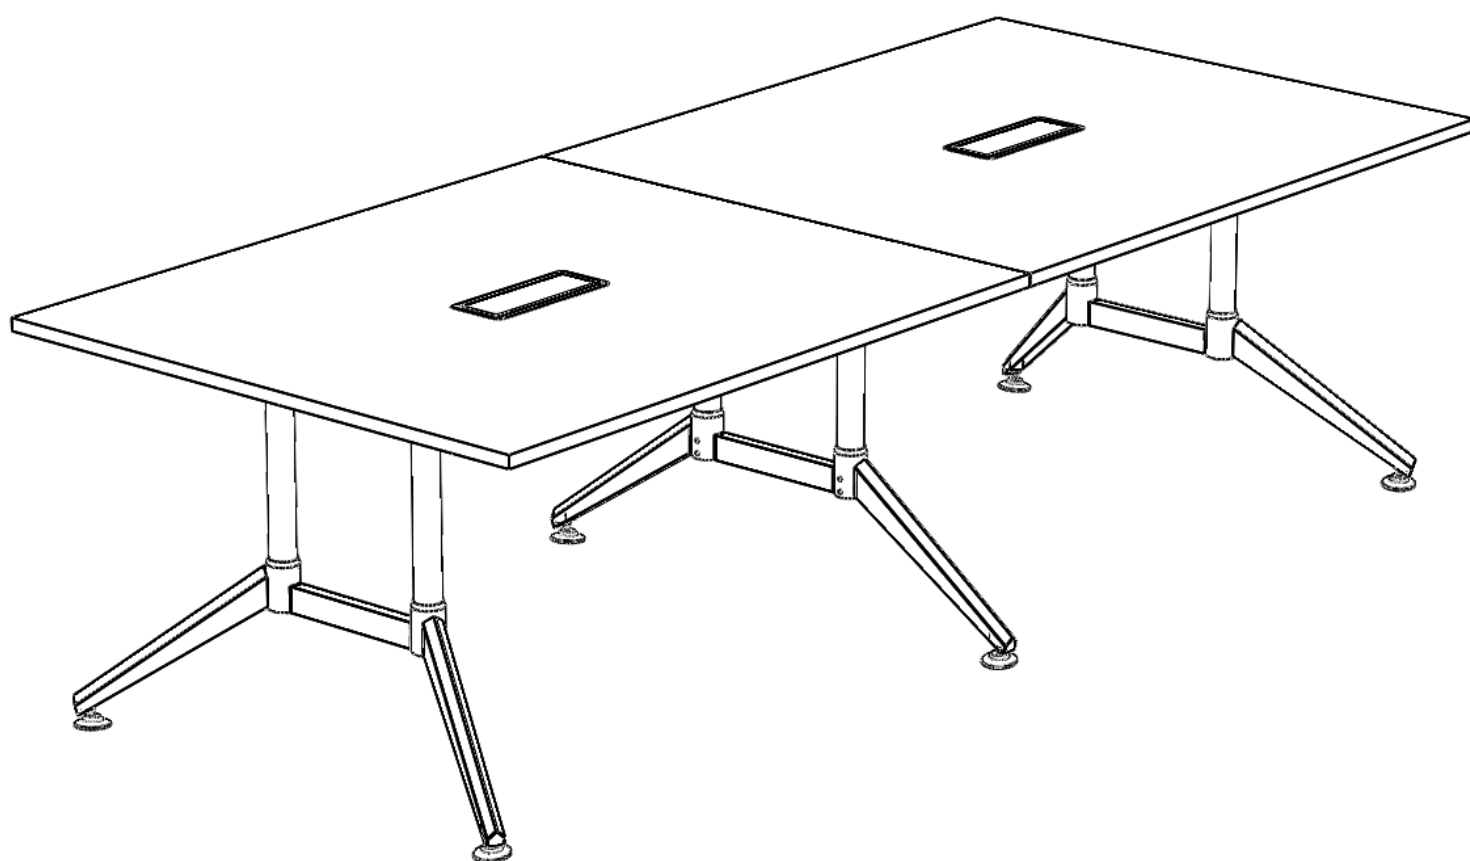



Tools Required For Assembly

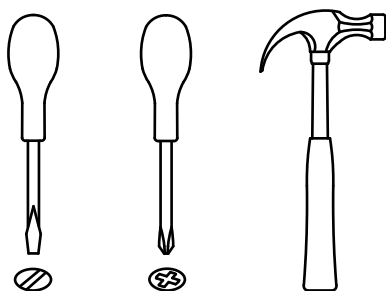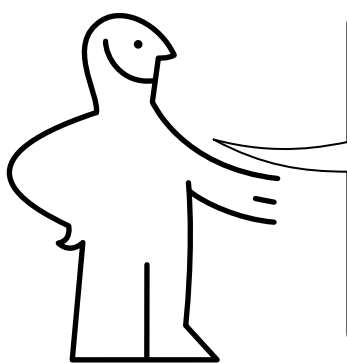

Need Two Or More People To Complete

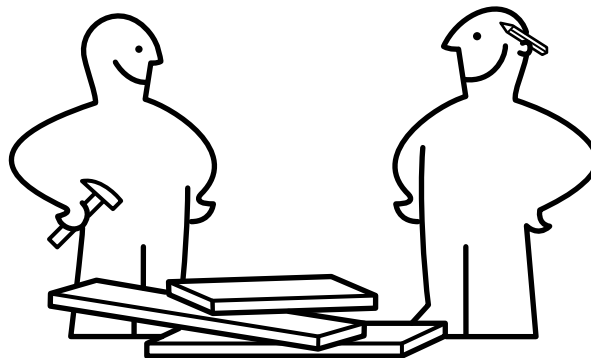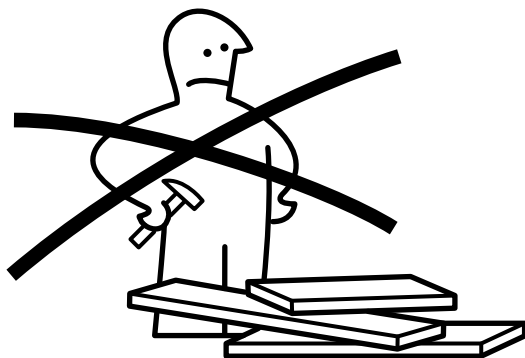


Assemble Item On a Clean Flat Surface

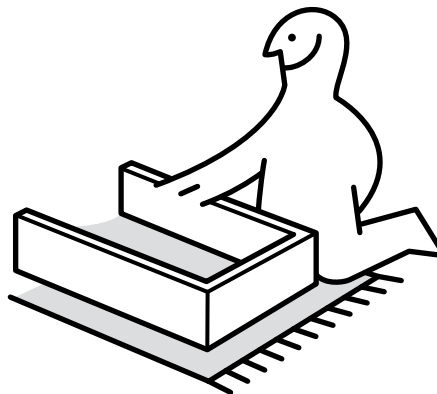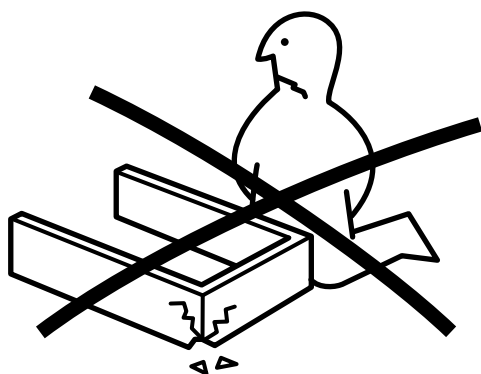

- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase










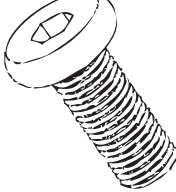
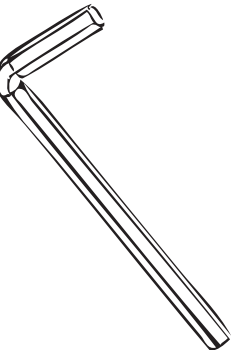
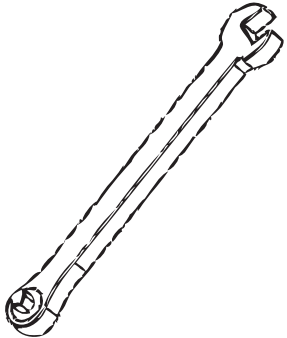
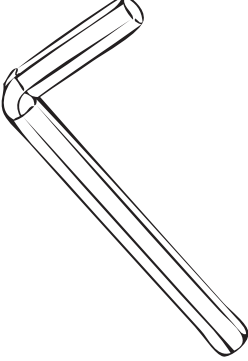
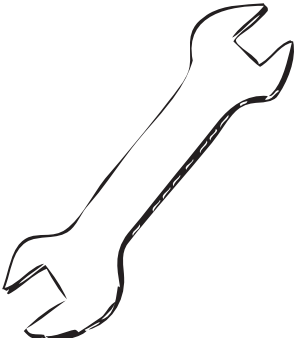
Parts List

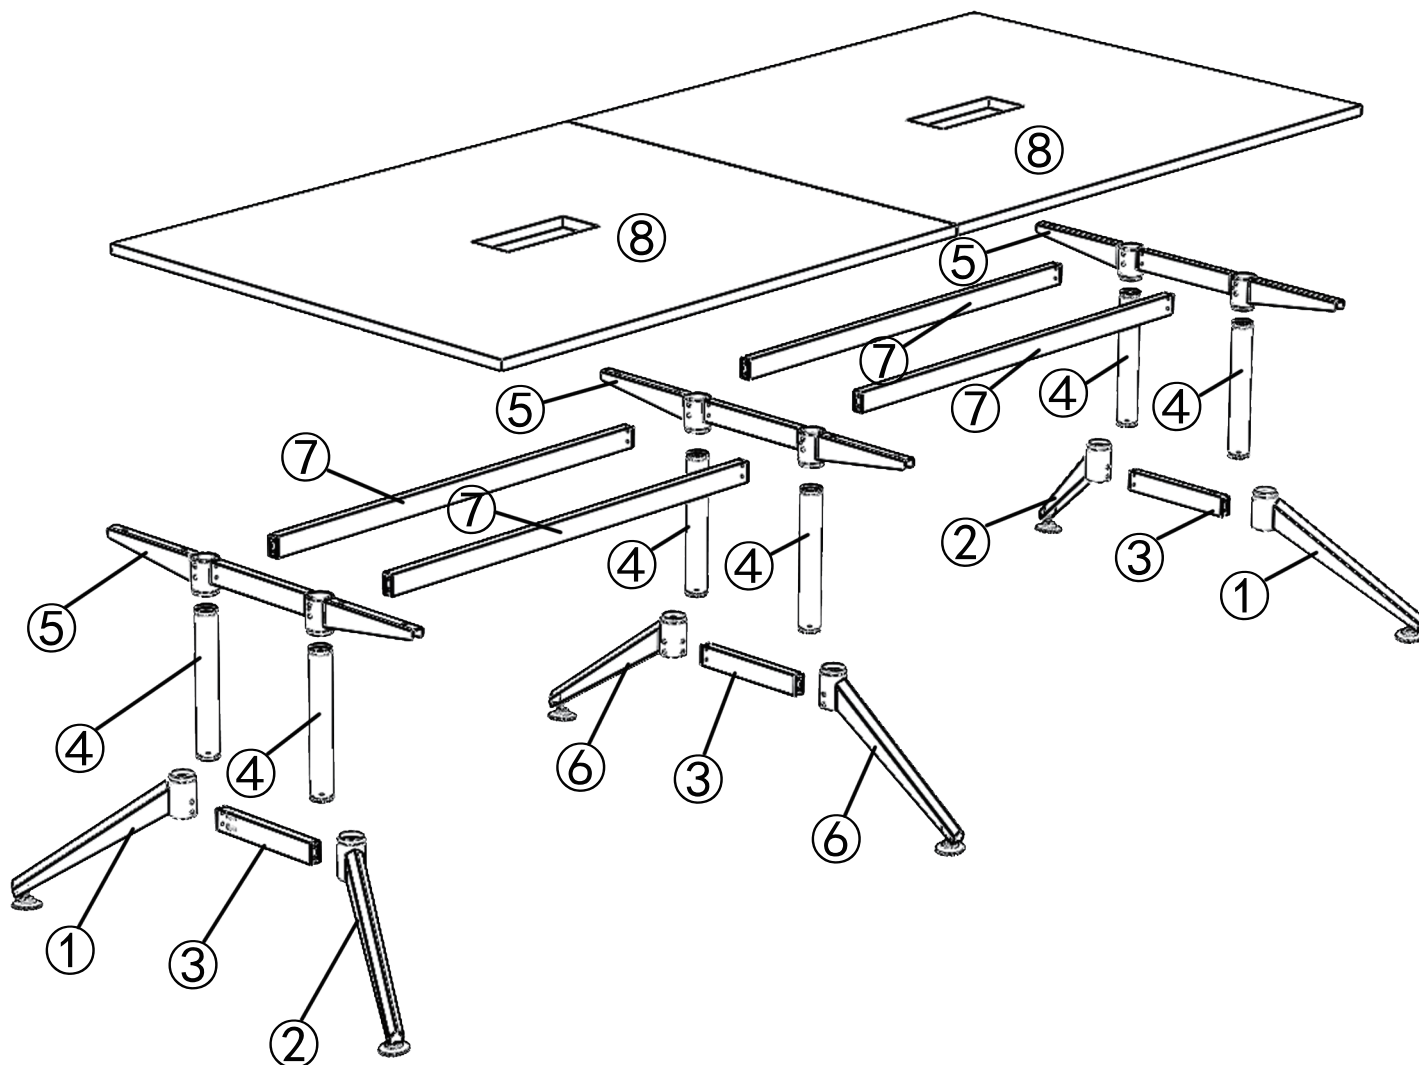


Attention:

Do not tighten the screws before all screws are in right place.


Hardware List

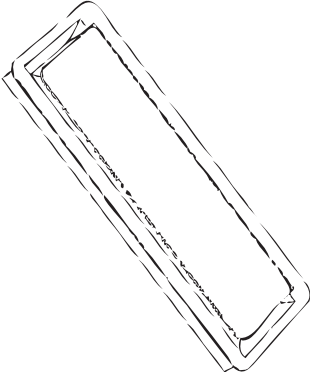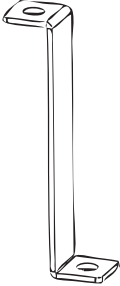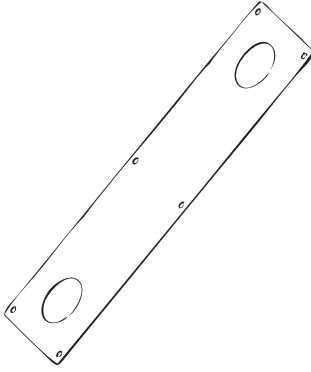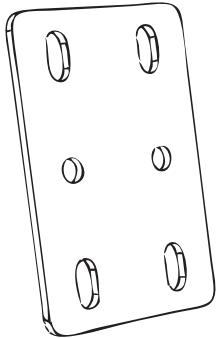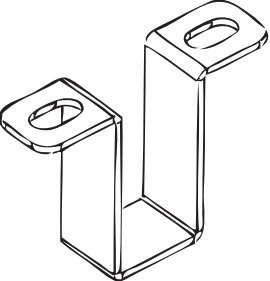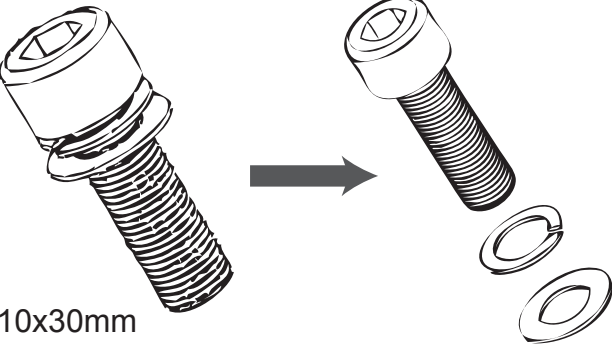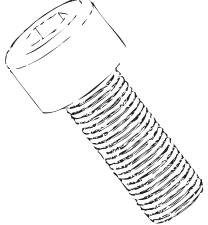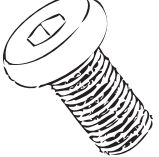			
A X2	B X12	C X2	D X2
	 M10x30mm		 M8x20mm
E X10	F X12		G X28
 M6x10mm		 M6x15mm	
H X12	I X12	J X52	
			
M4	M6	M8	M10



Step 1

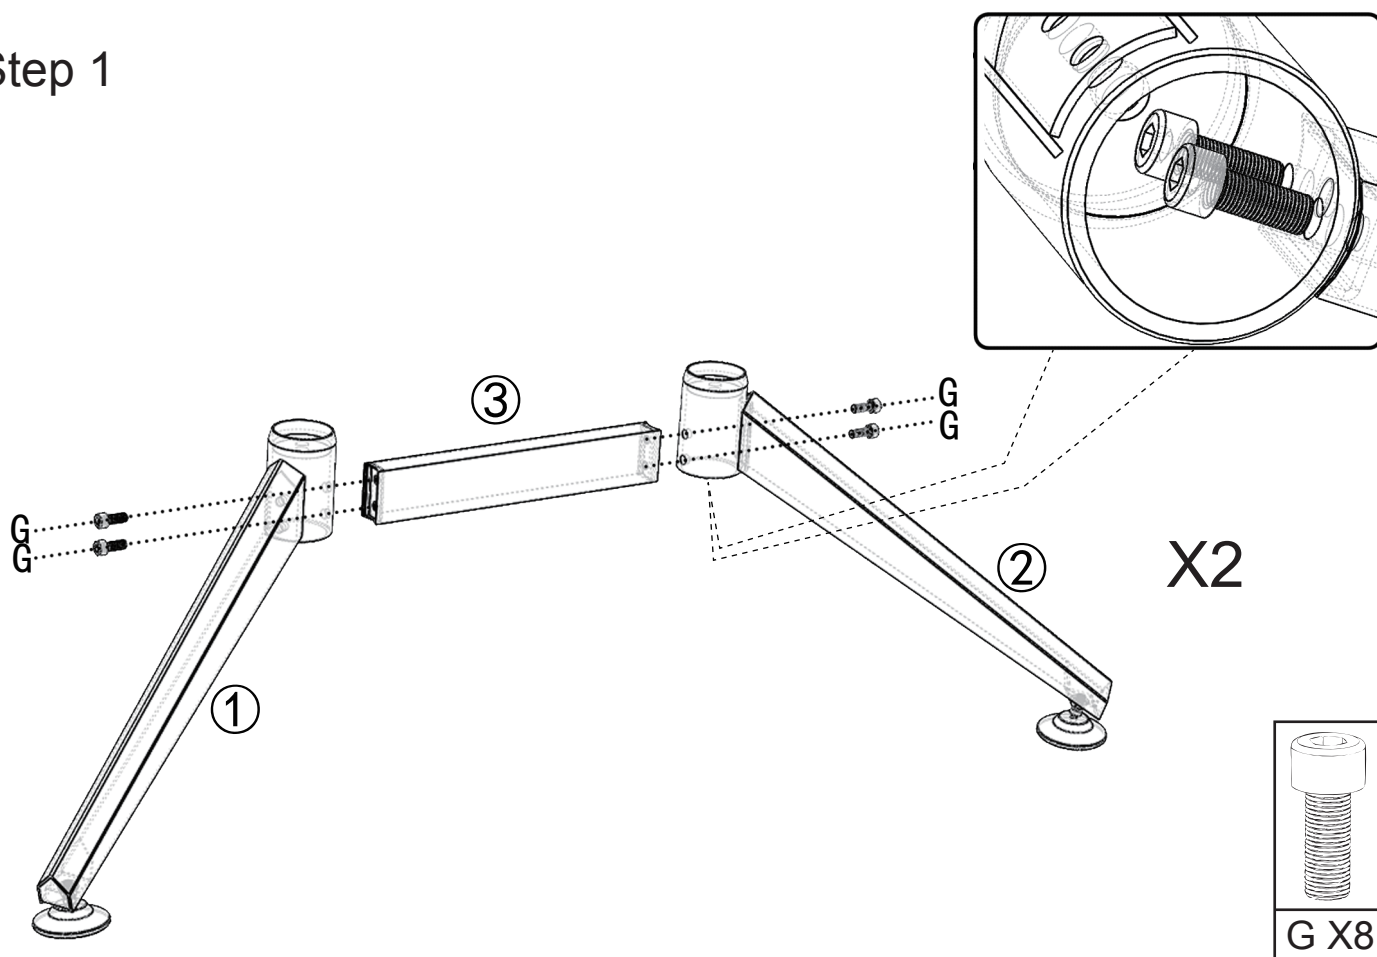


Step 2

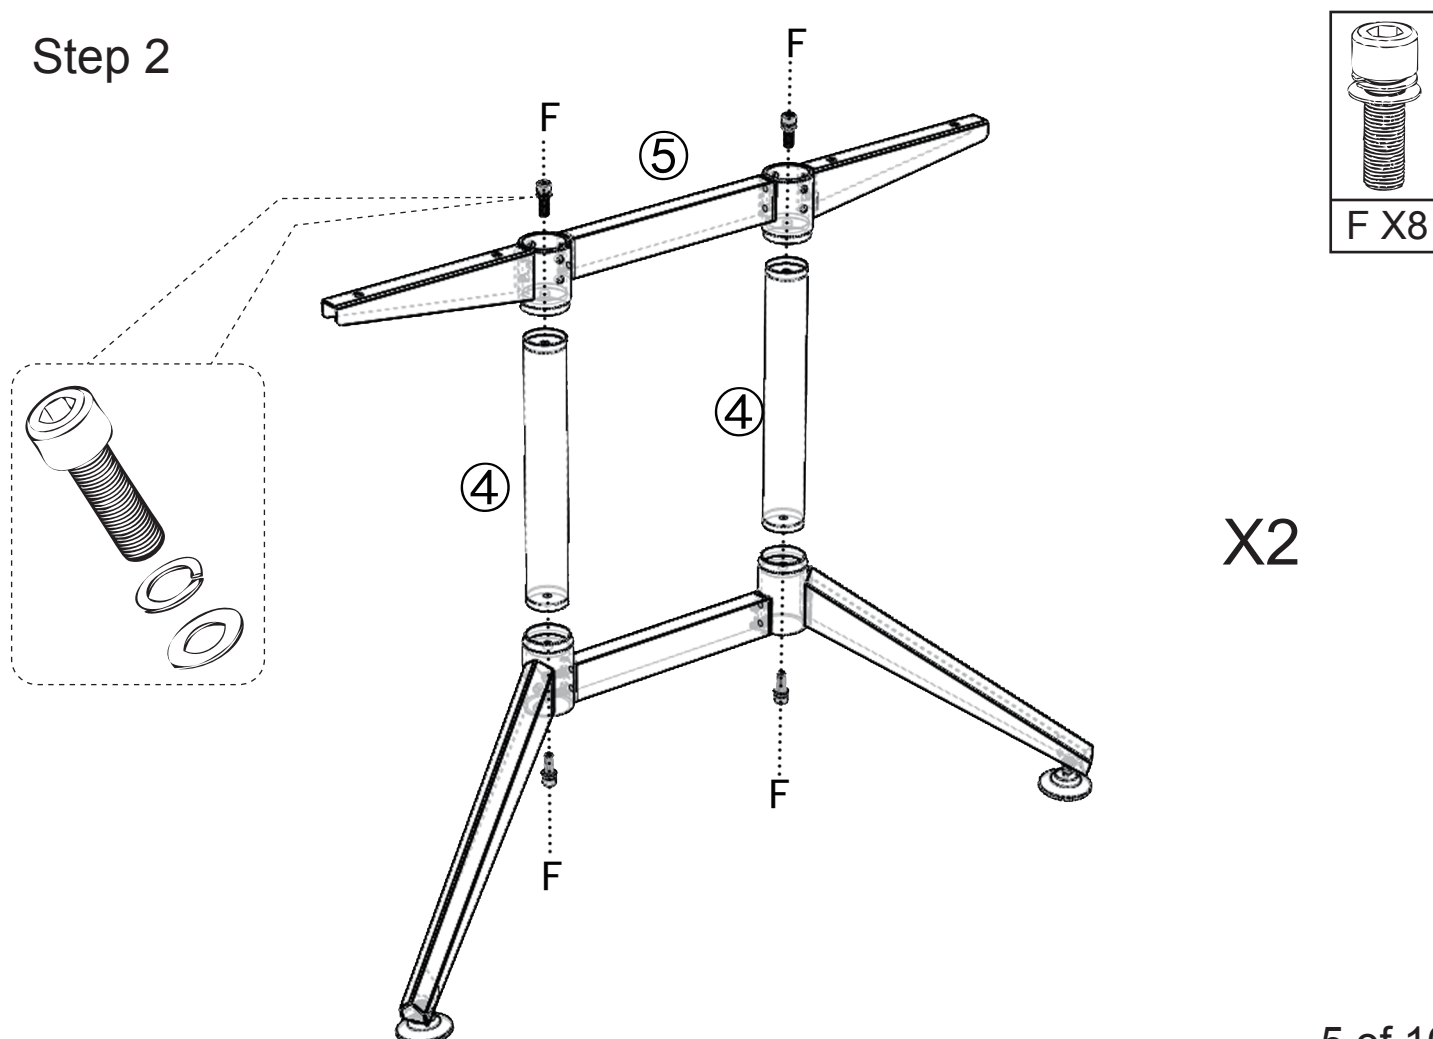


Step 3

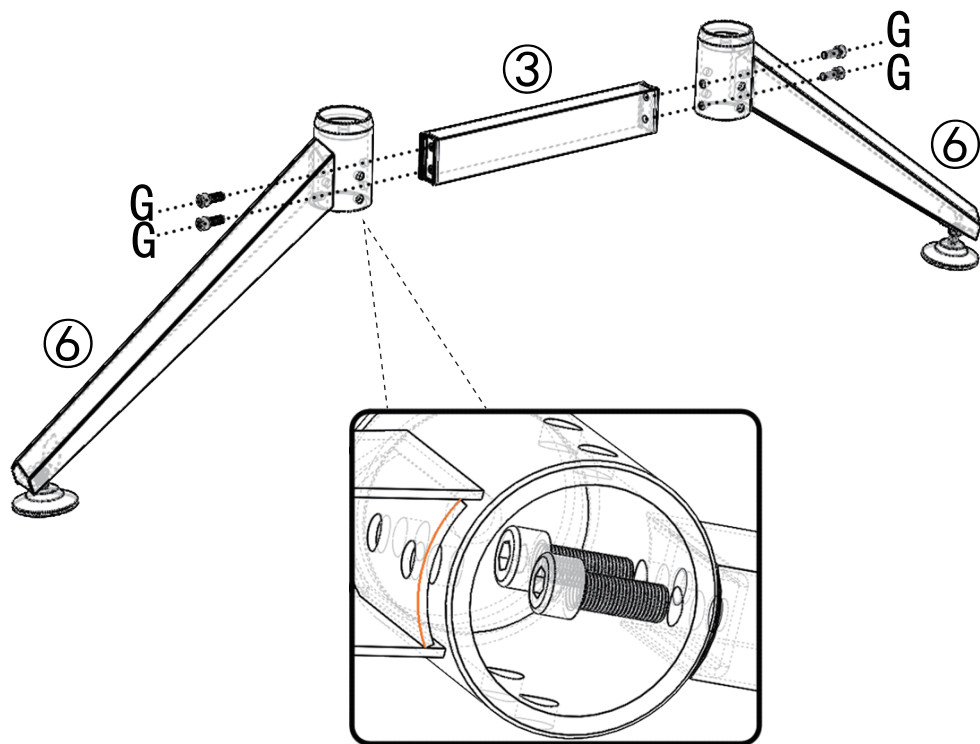


Step 4

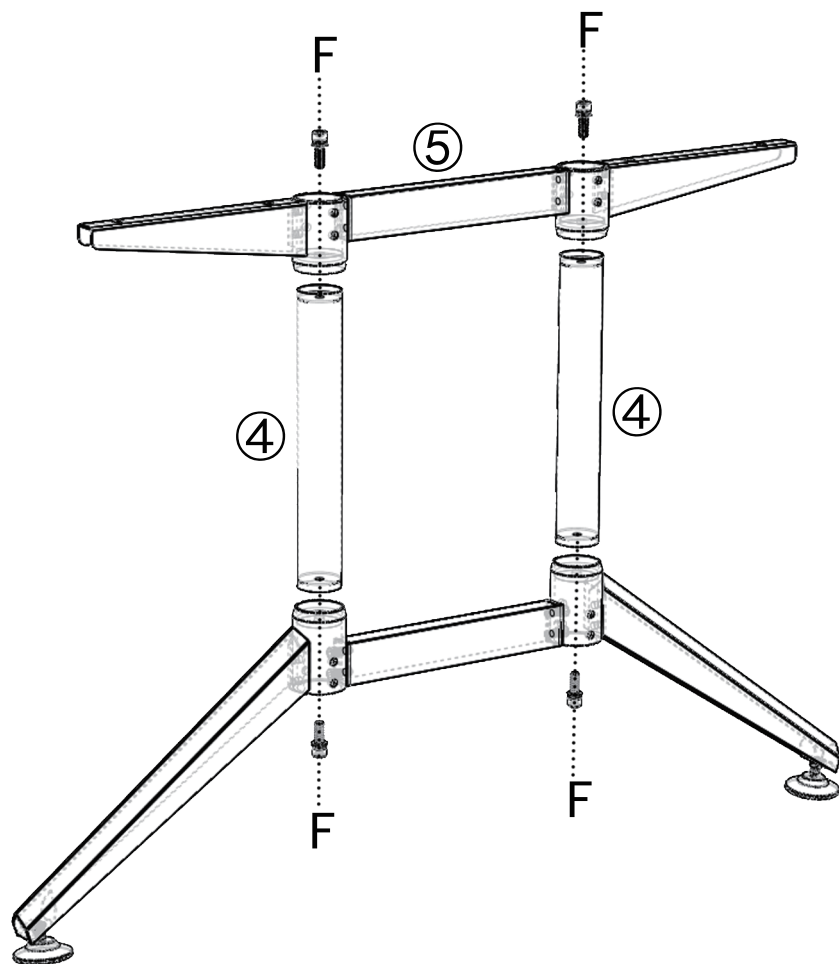



Step 5

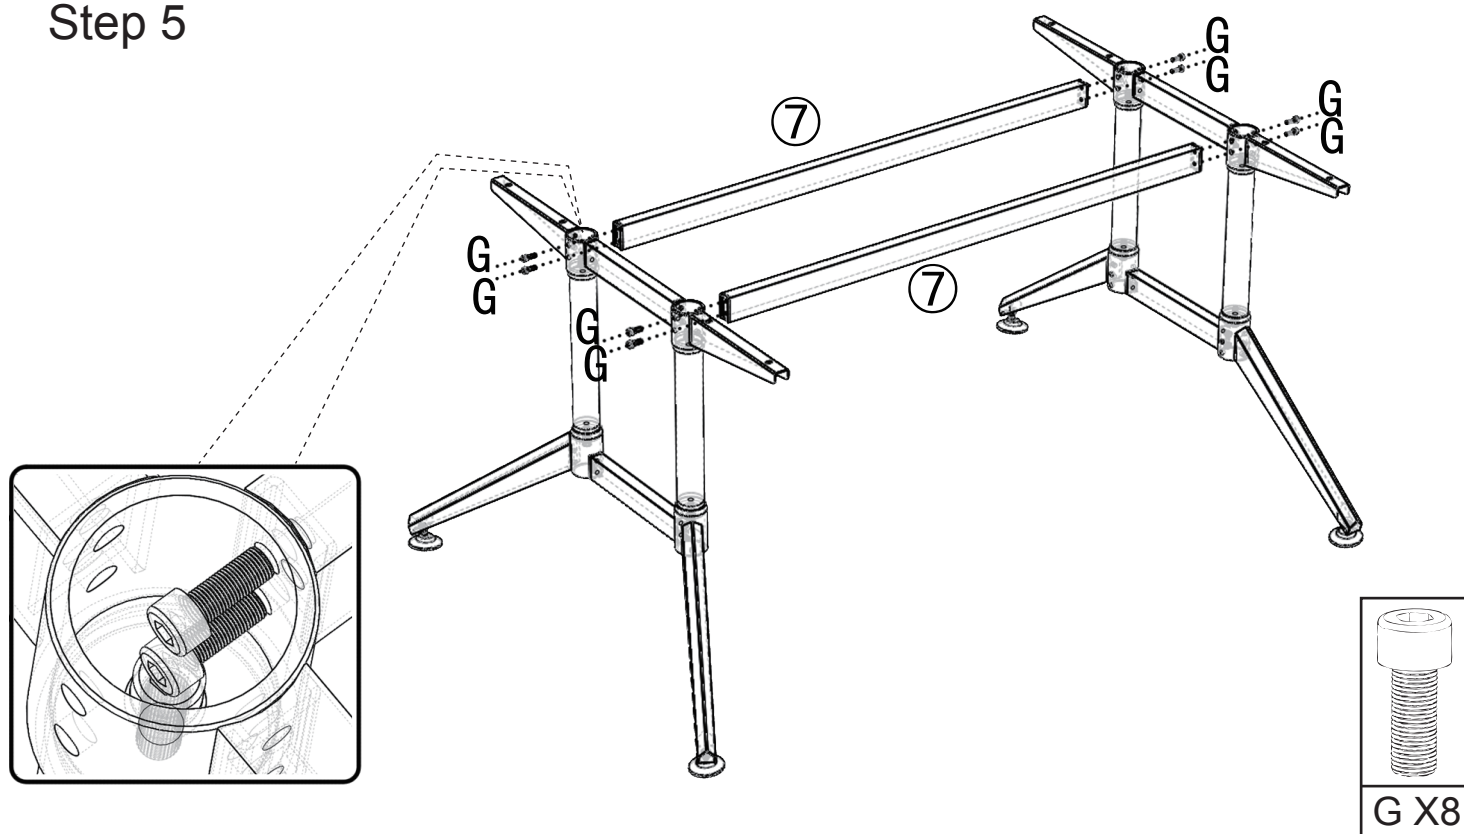


Step 6

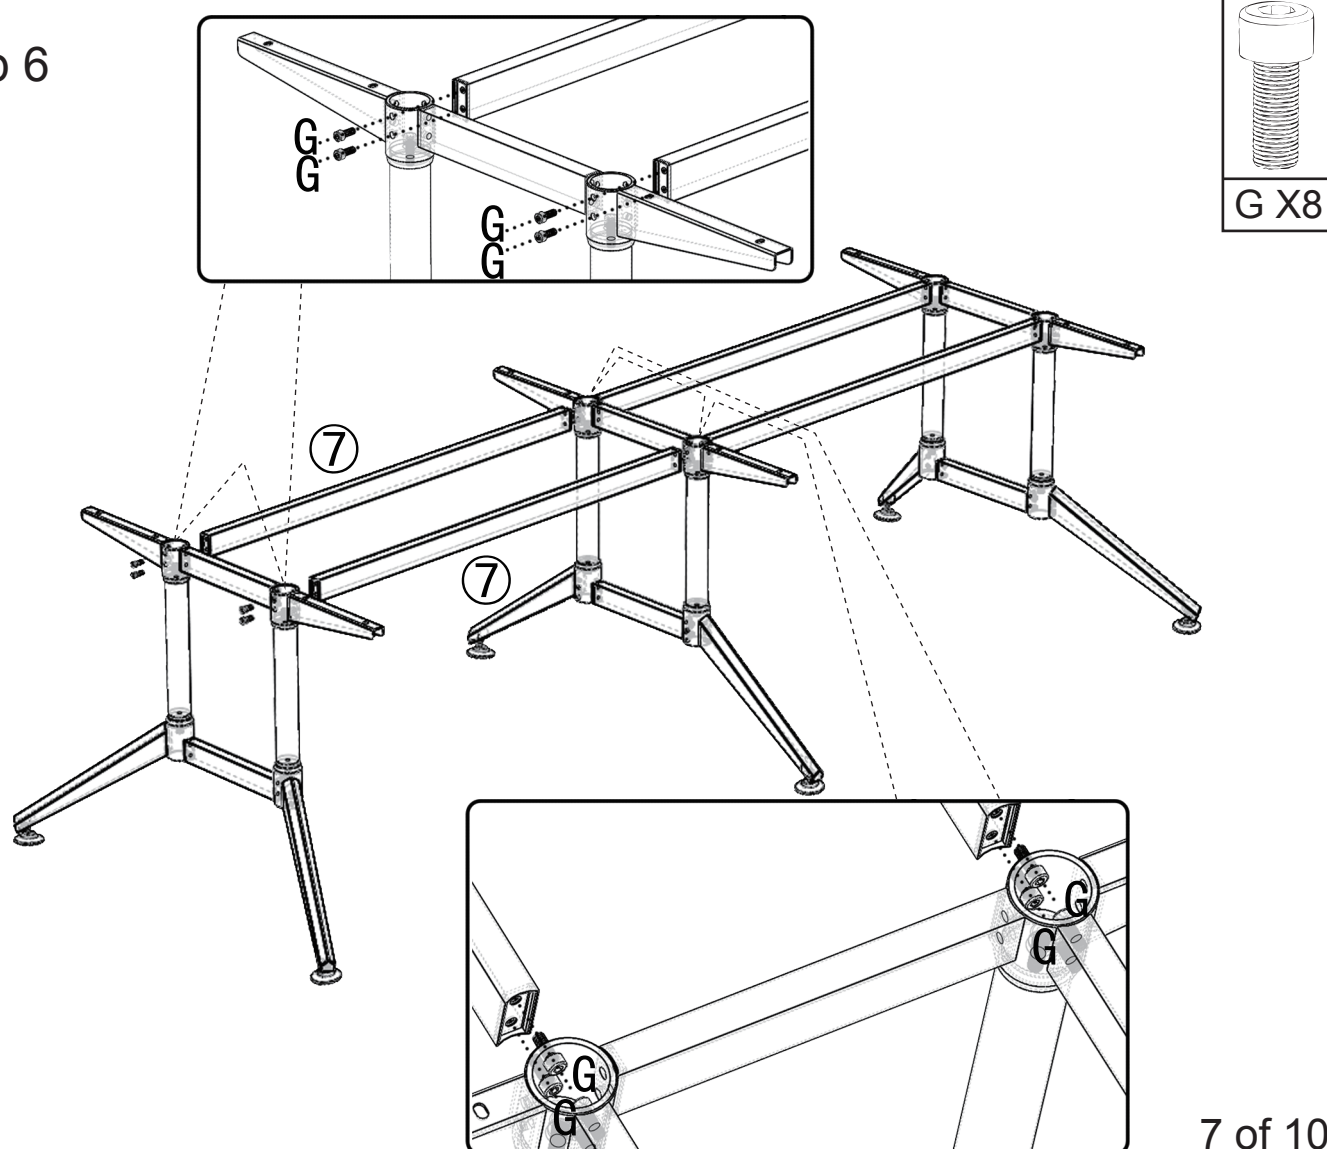


Step 7

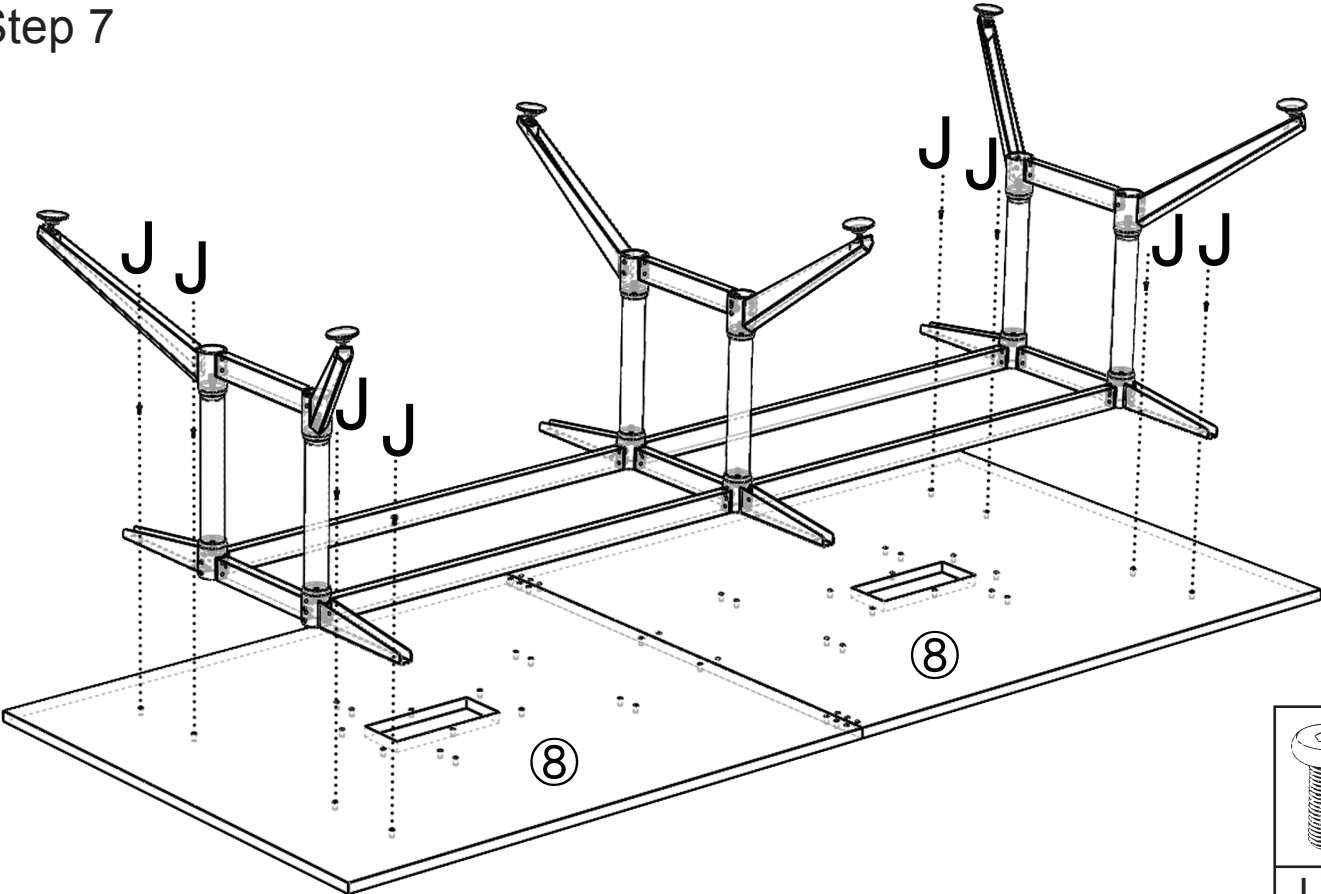

Step 8

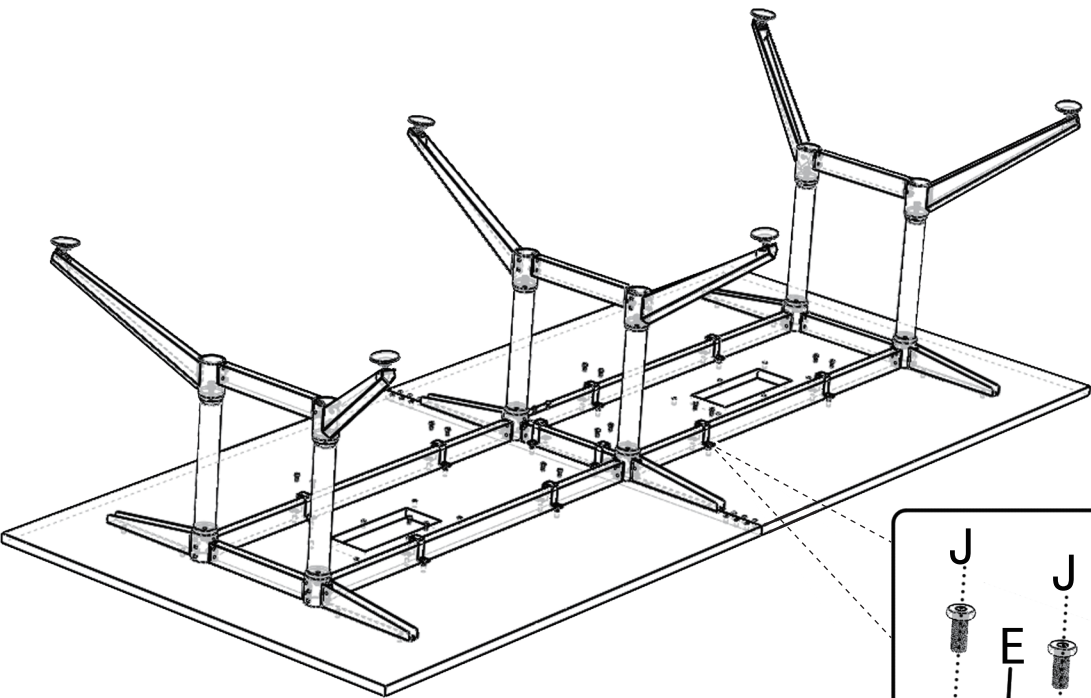


X10




E X10


J X20

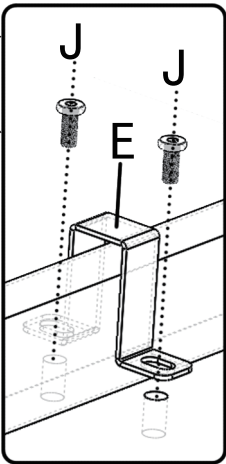




Step 9

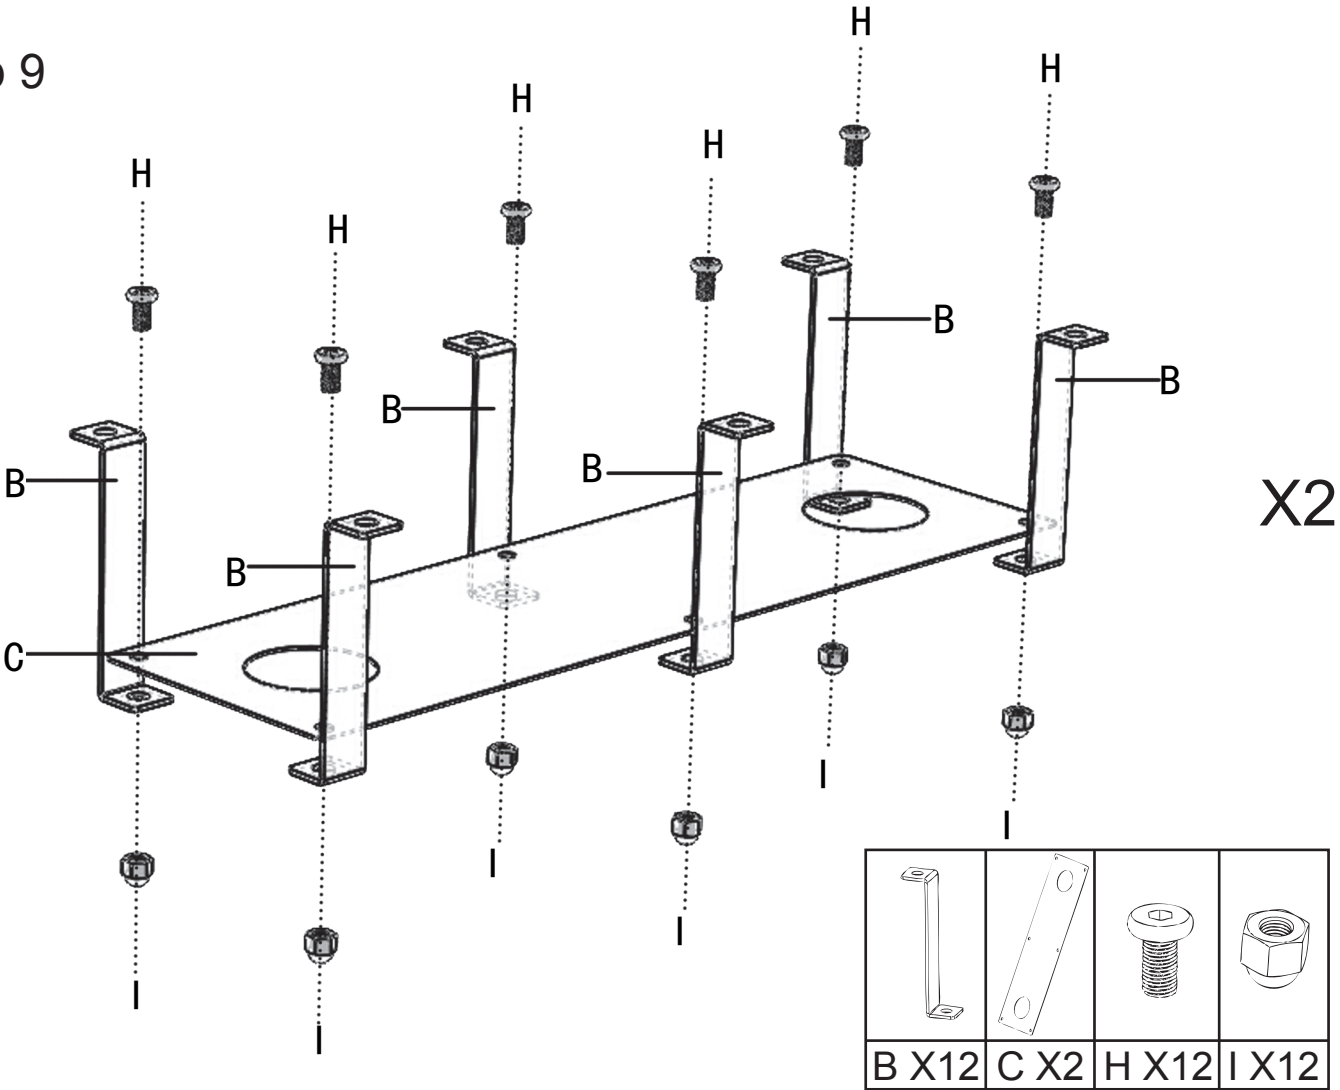

Step 10

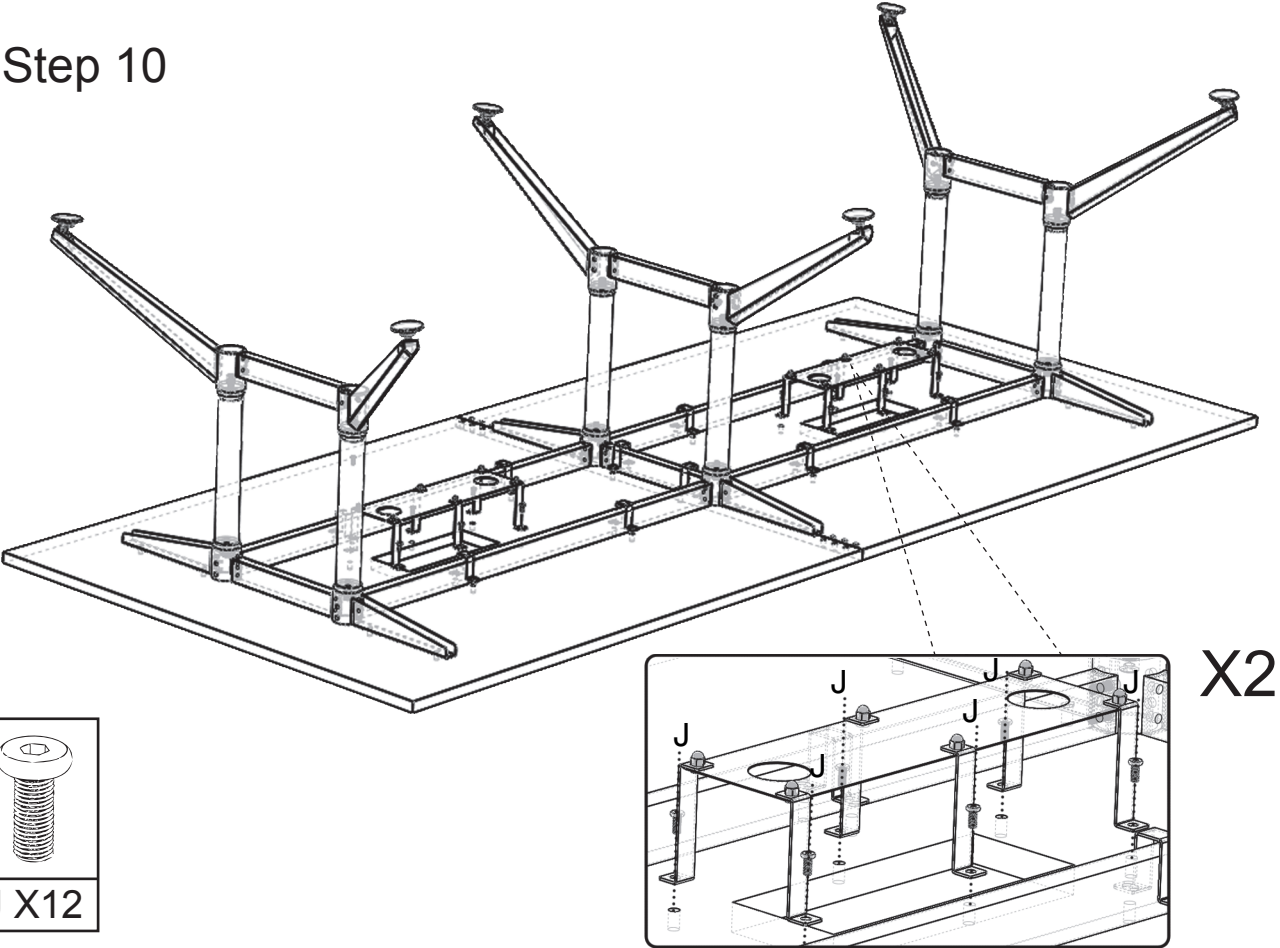

Step 11

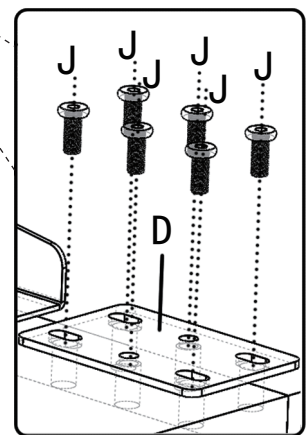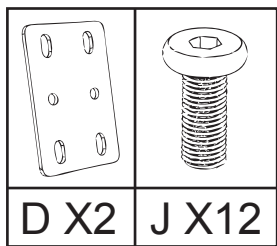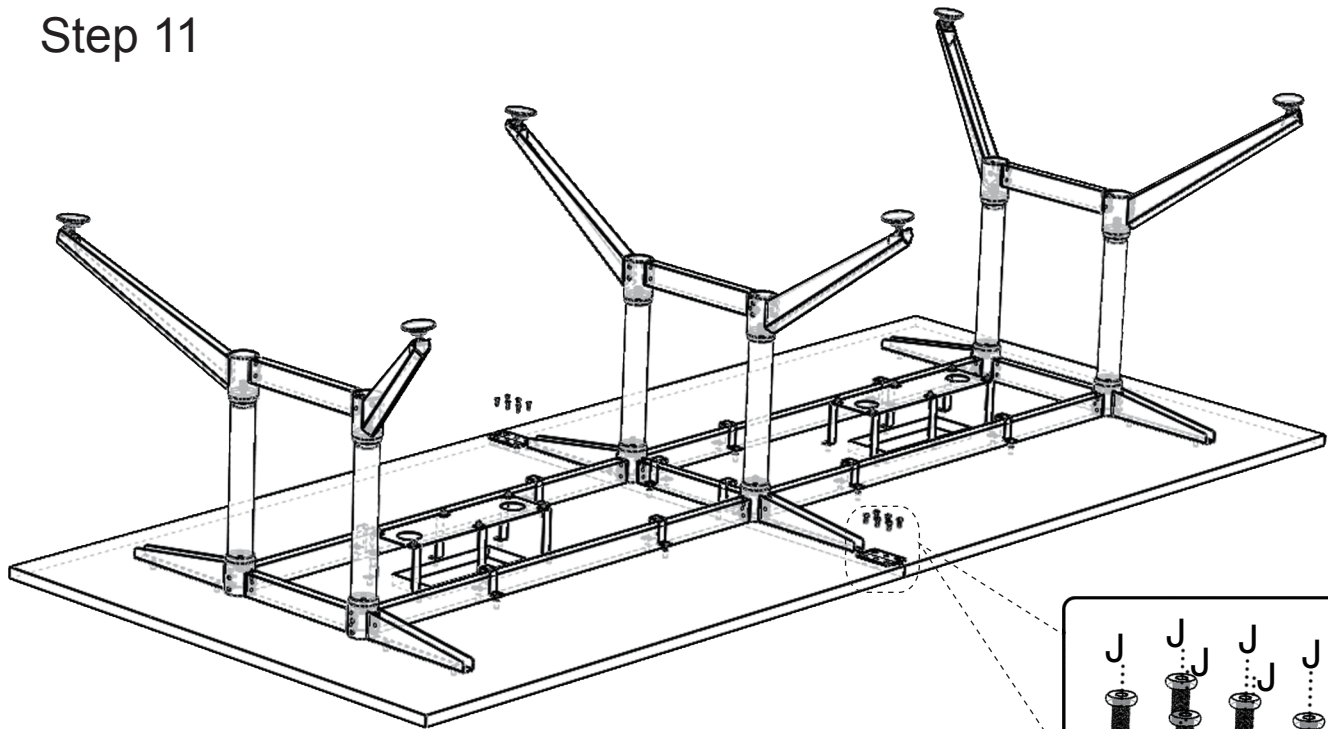

Step 12

