


# ASSEMBLY INSTRUCTIONS



AERO TALL CUPBOARD (2 CTN)

JBAEROCUPB



EAN: 9341694242538

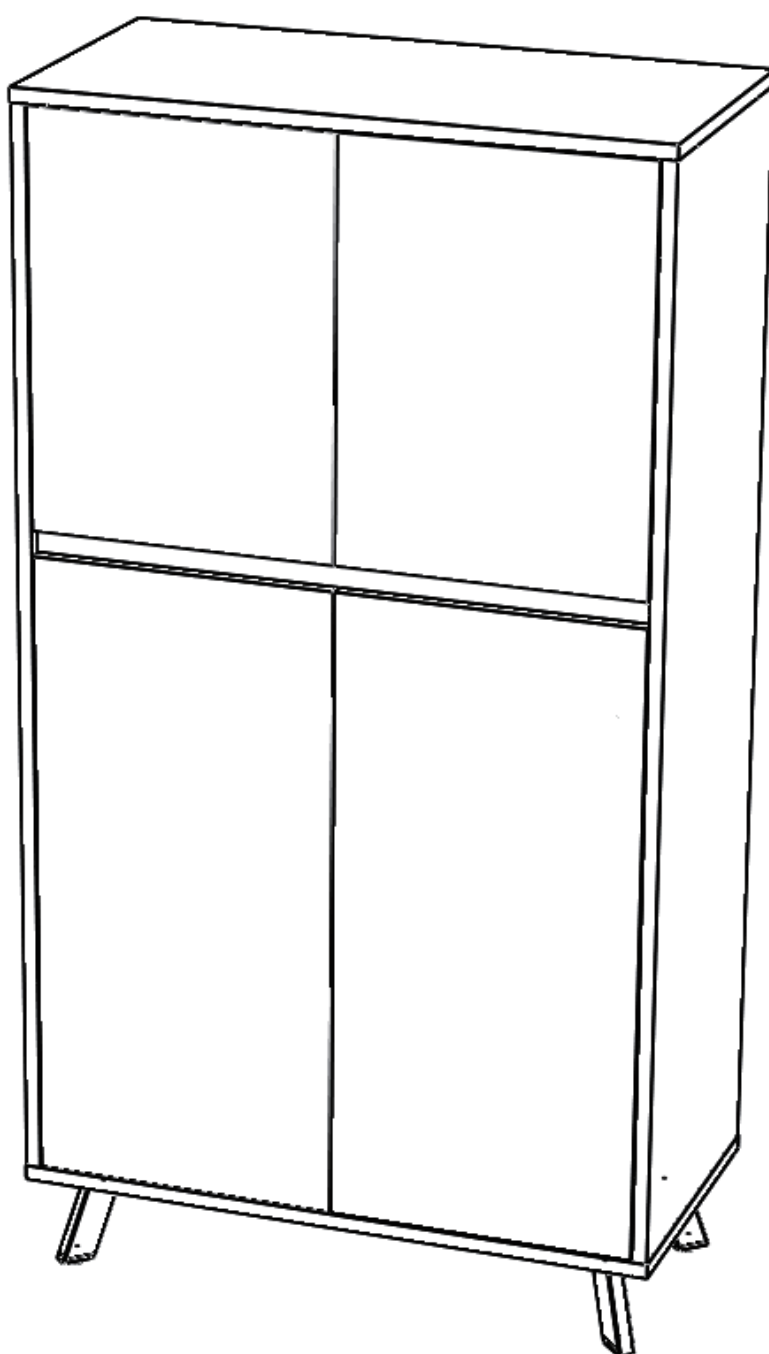



## Tools Required For Assembly

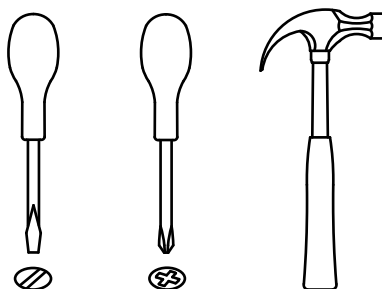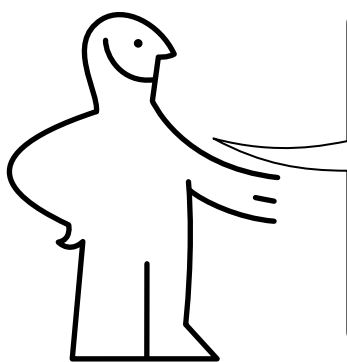

## Need Two Or More People To Complete

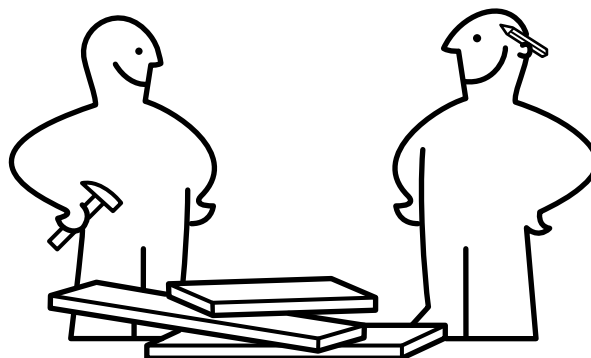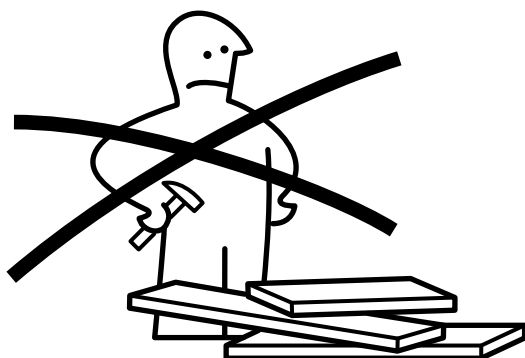


## Assemble Item On a Clean Flat Surface











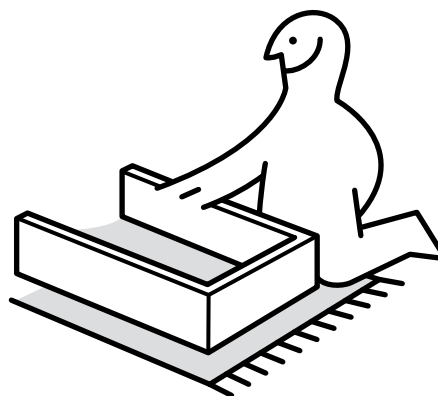
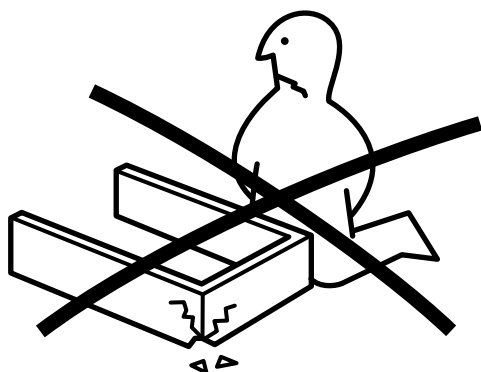


- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase

# Panel List

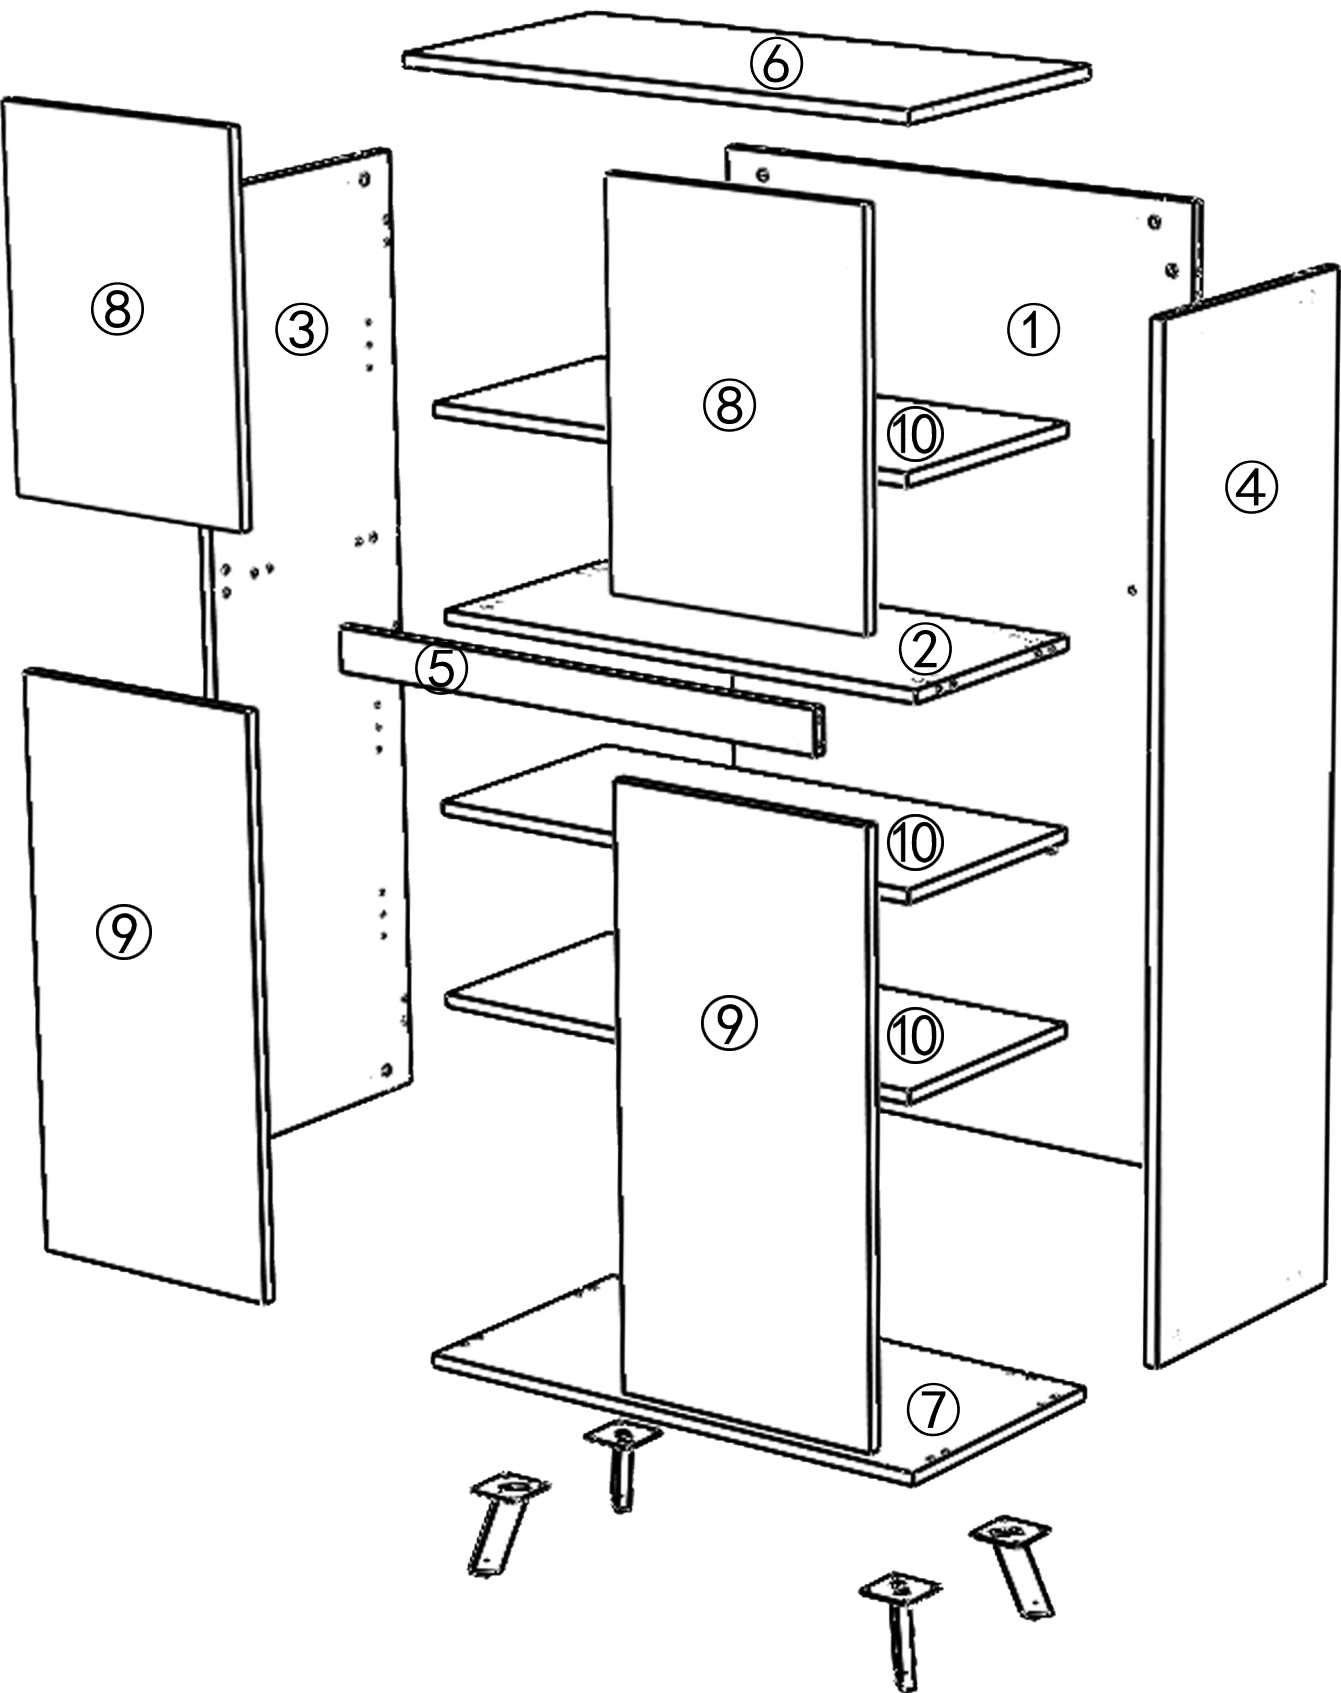


# Hardware List

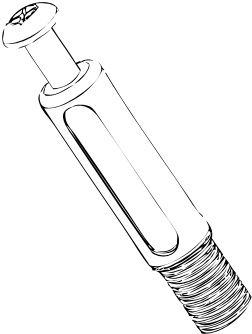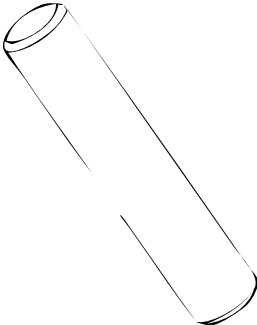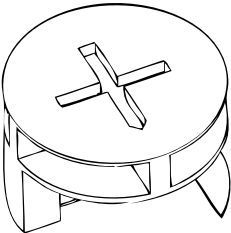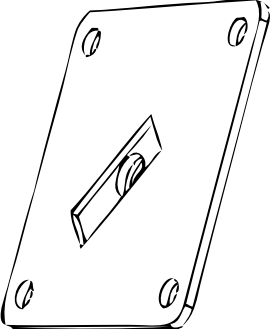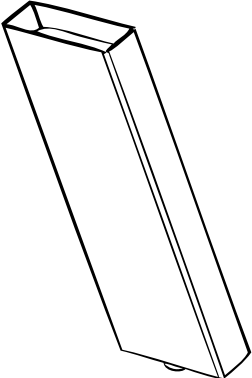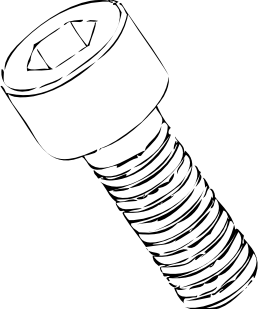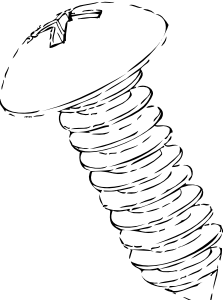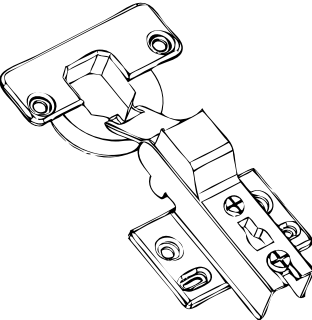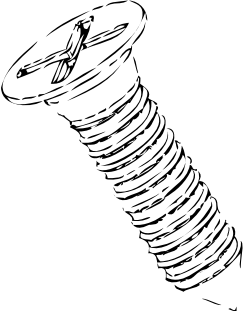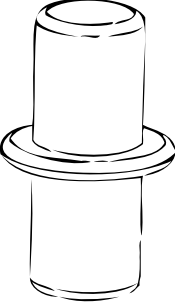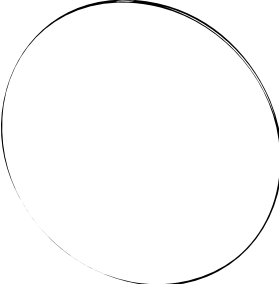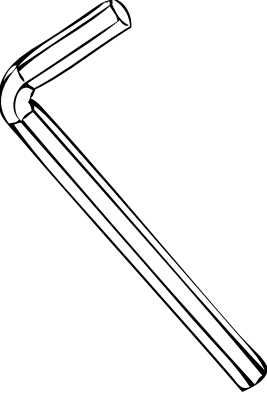
|  |   |  |   |
|--|---|--|---|
|               |              |              |    |
| A x28  | B x22   | C x28  | D x4  |
|              | <br>M6x20mm | <br>M5x16mm |   |
| E x4   | F x4  | G x16  | H x8  |
| <br>M4x16mm |            |            |  |
| I x48  | J x12   | K x28  | M5  |





## Step 1

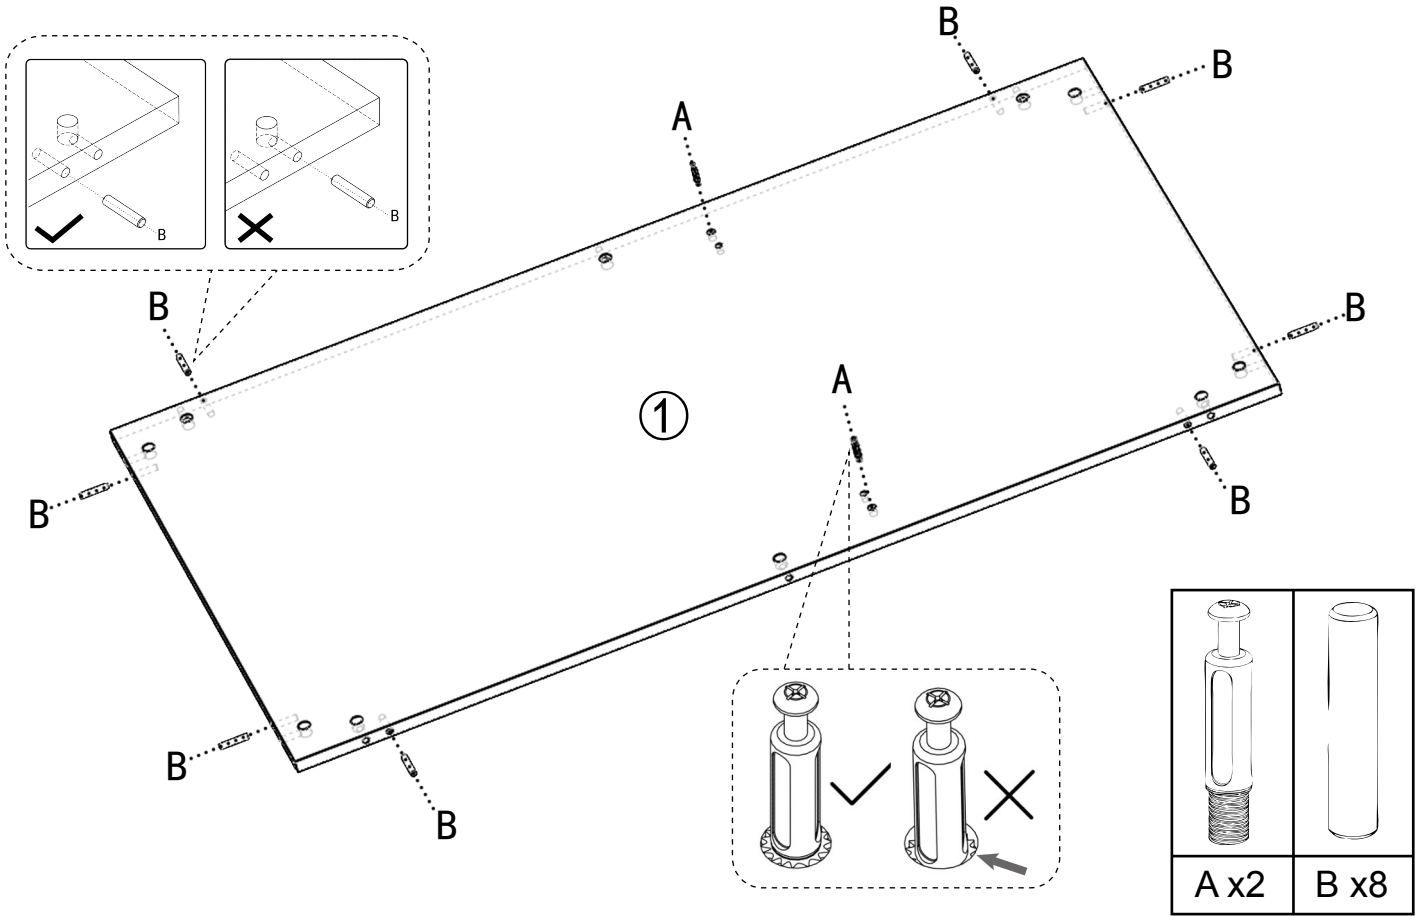



## Step 2

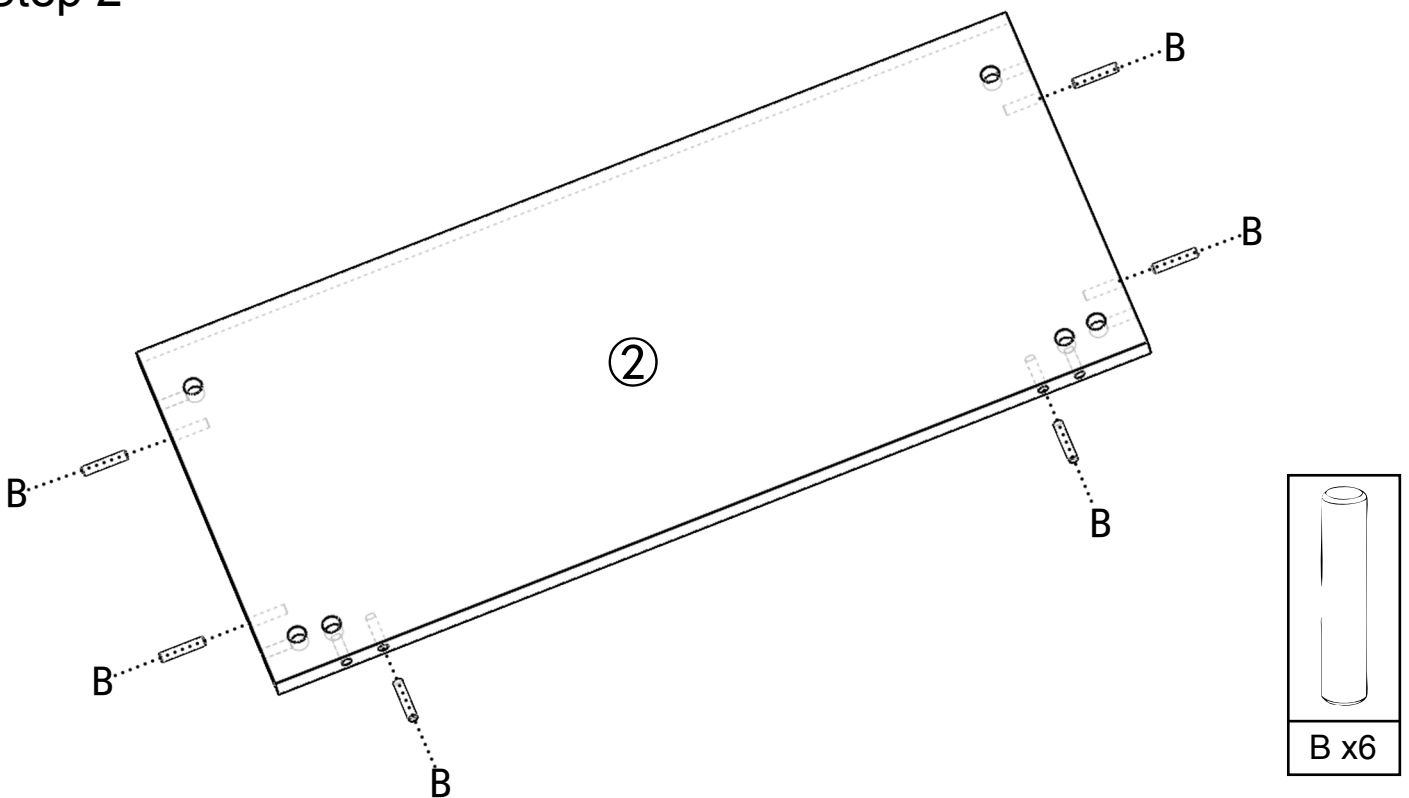



Step 3

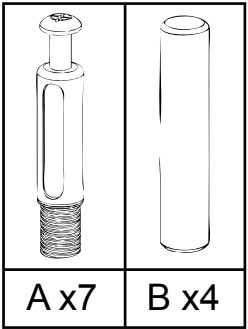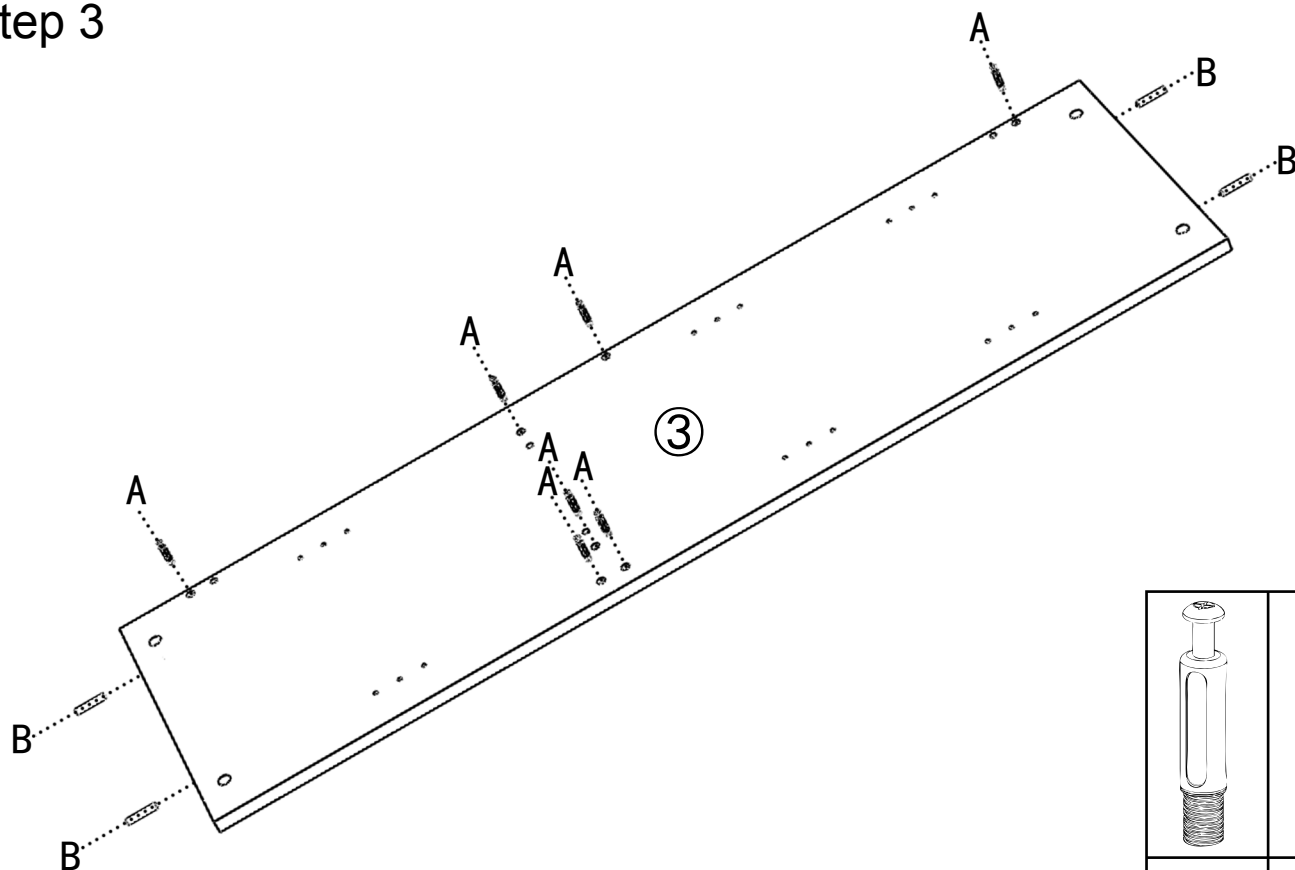



Step 4

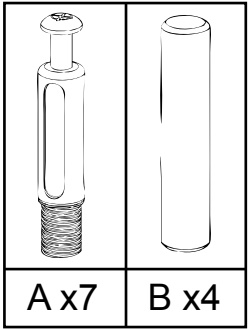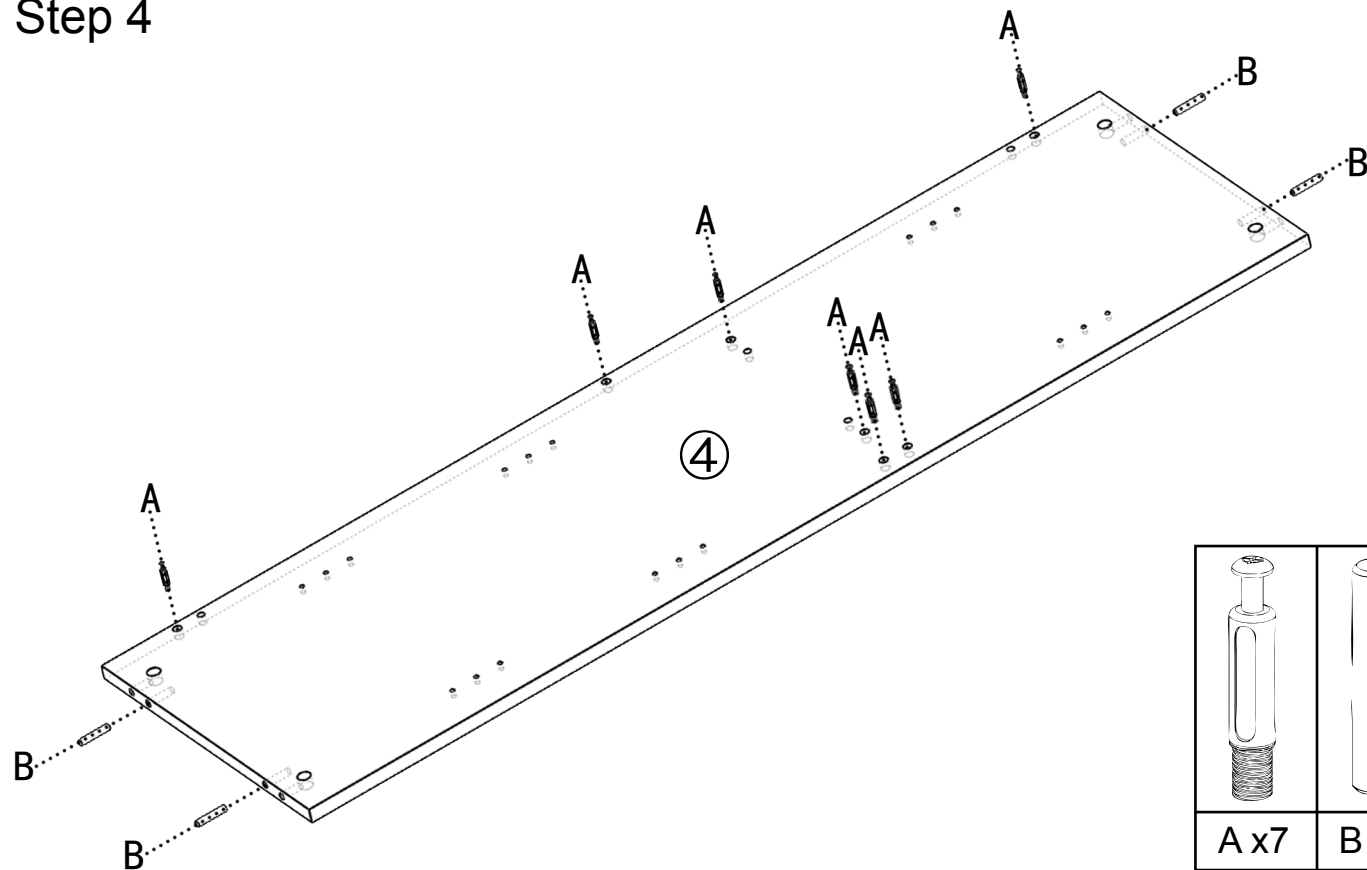



## Step 5

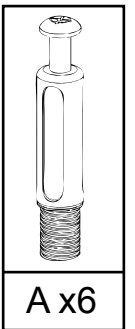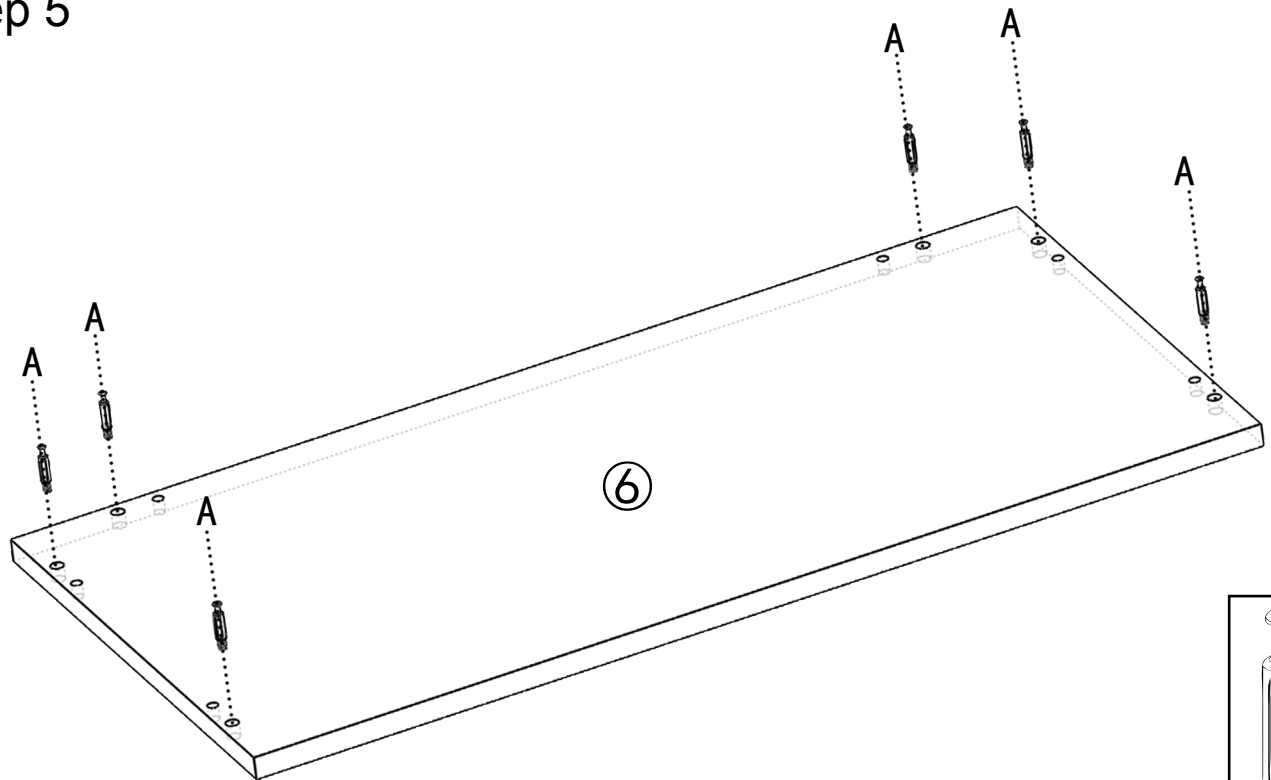



## Step 6

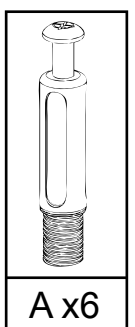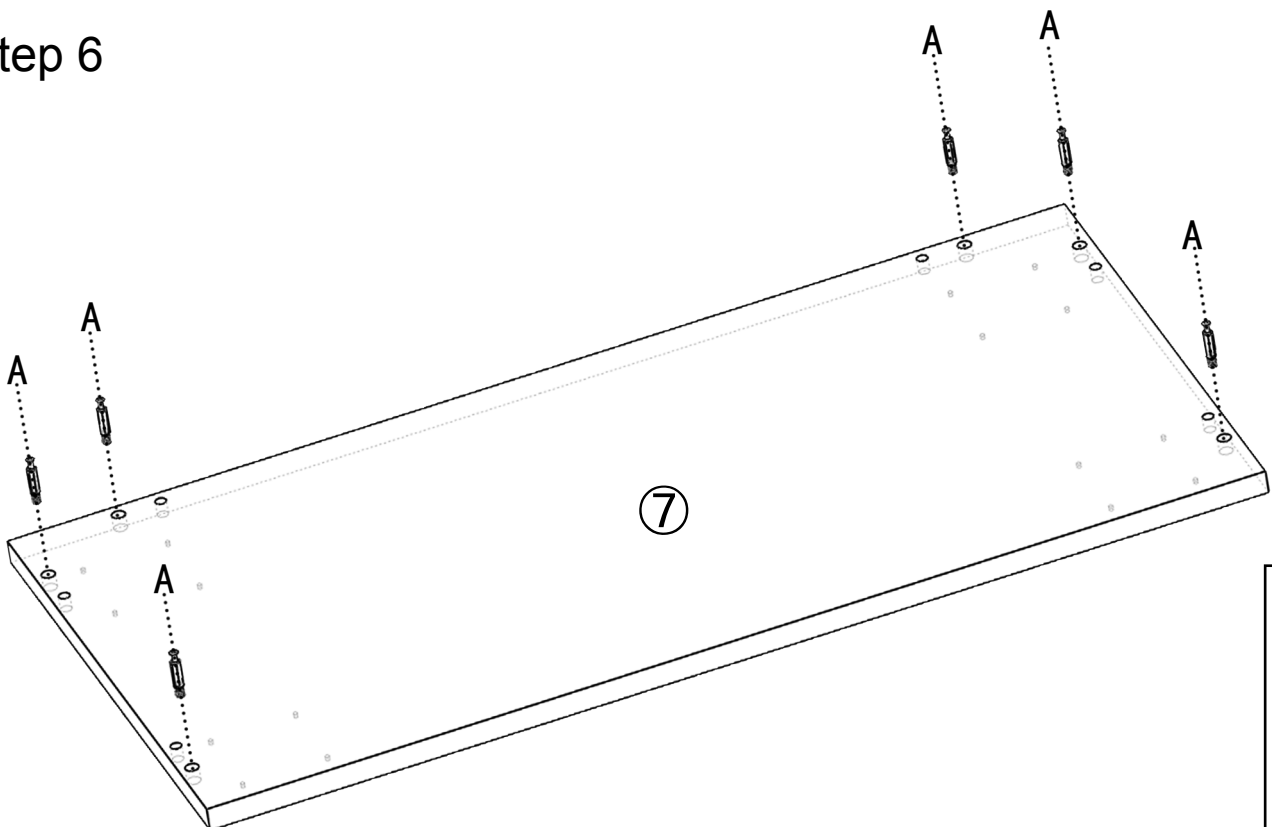



Step 7

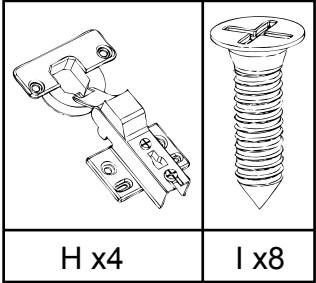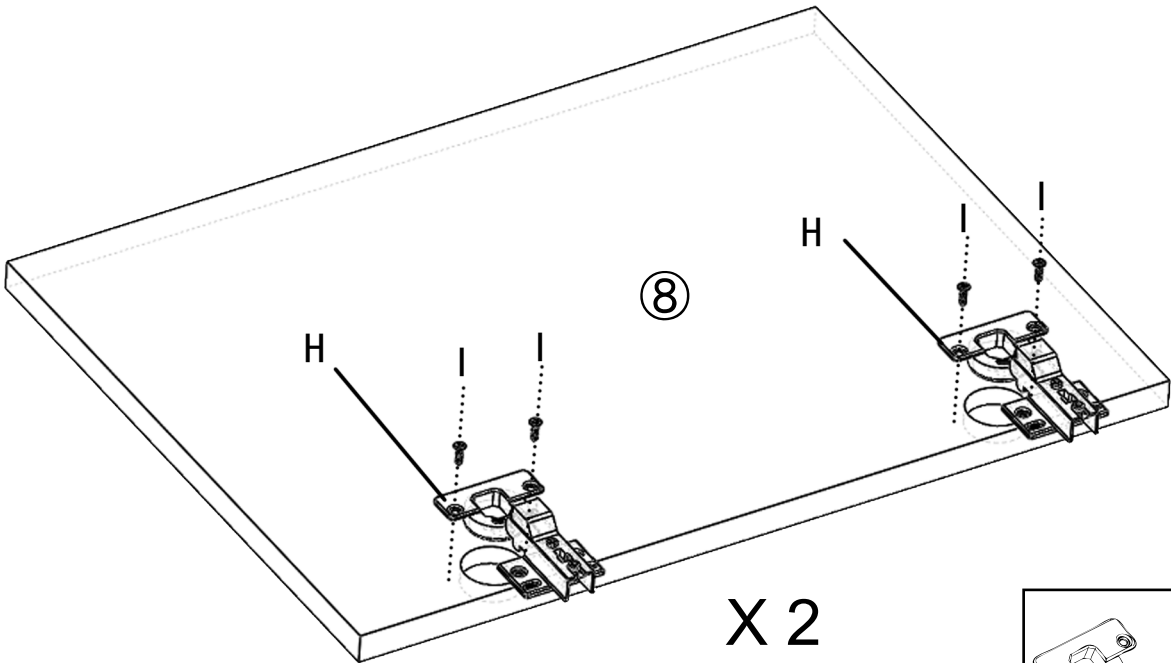



Step 8

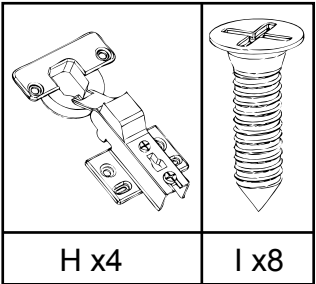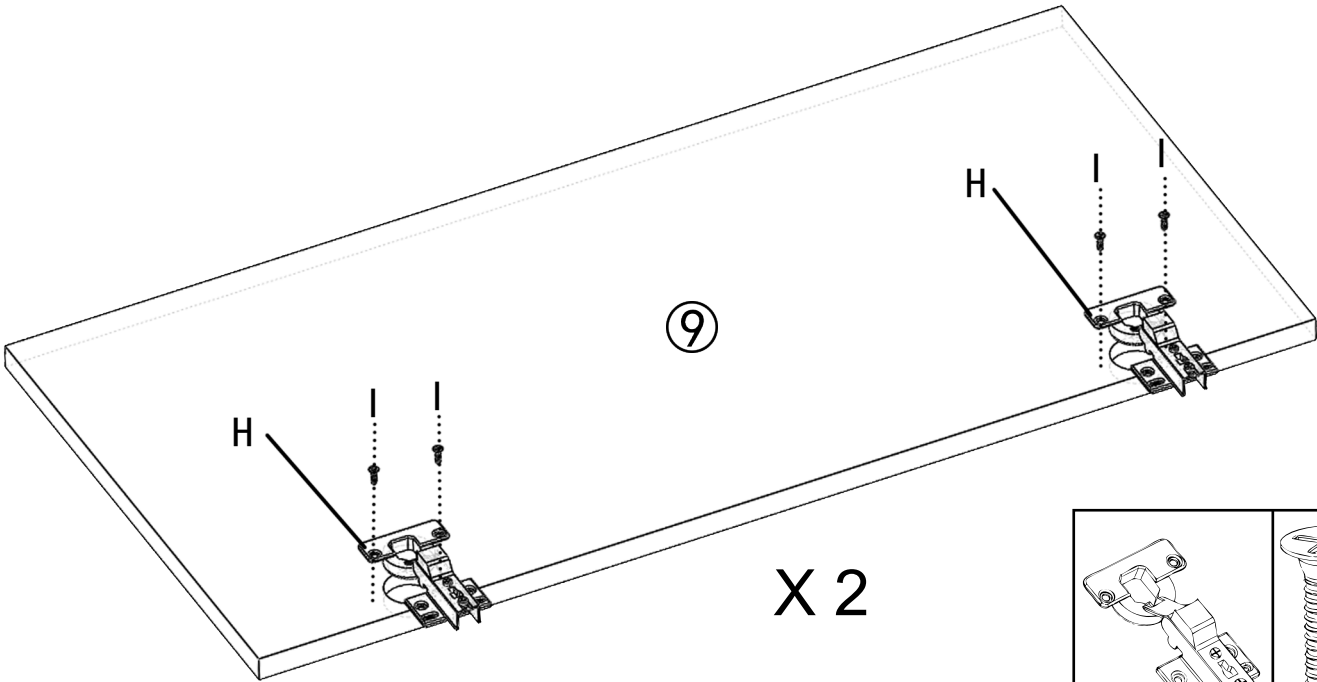



## Step 9

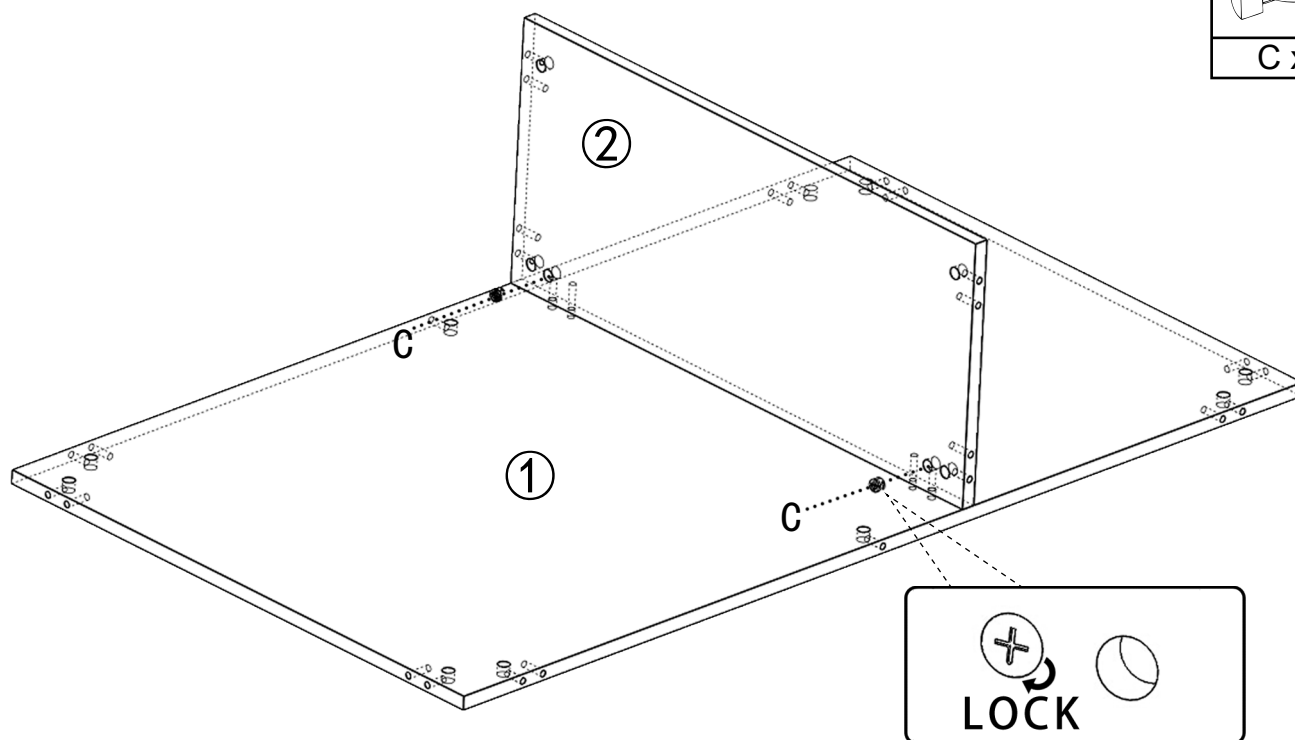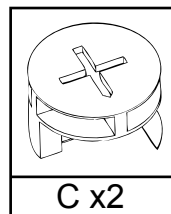



## Step 10

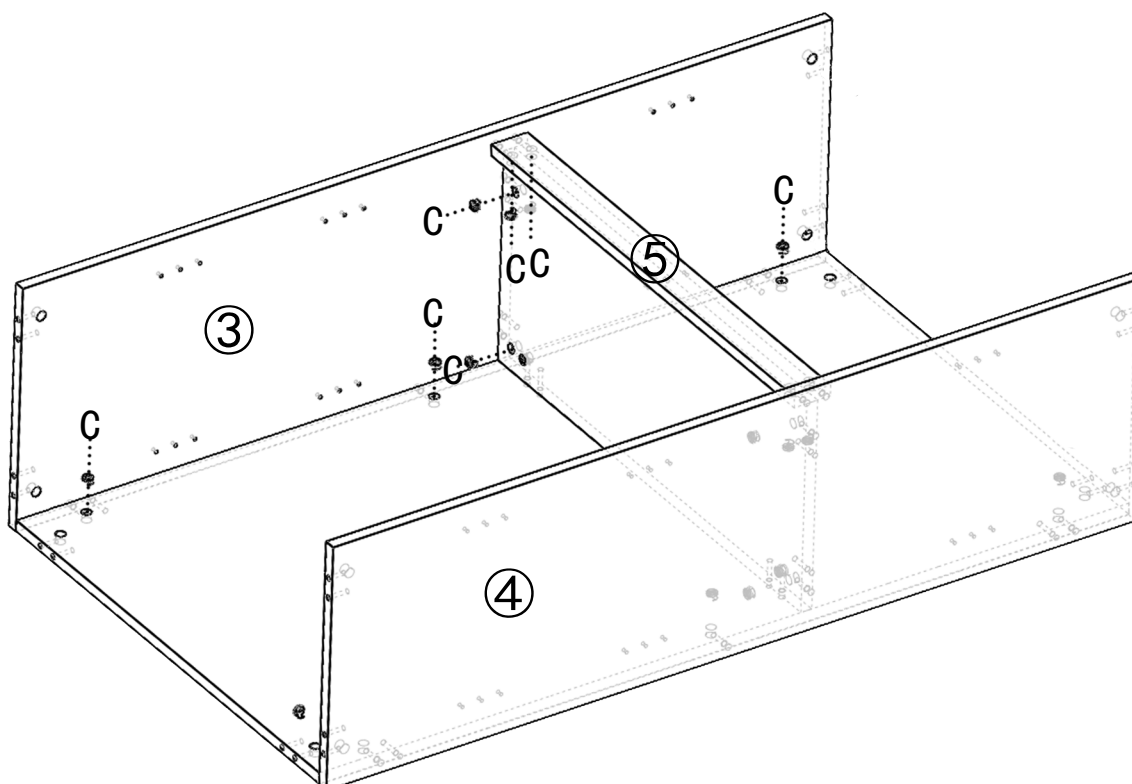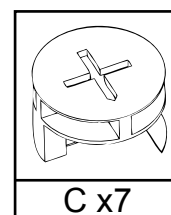


Step 11

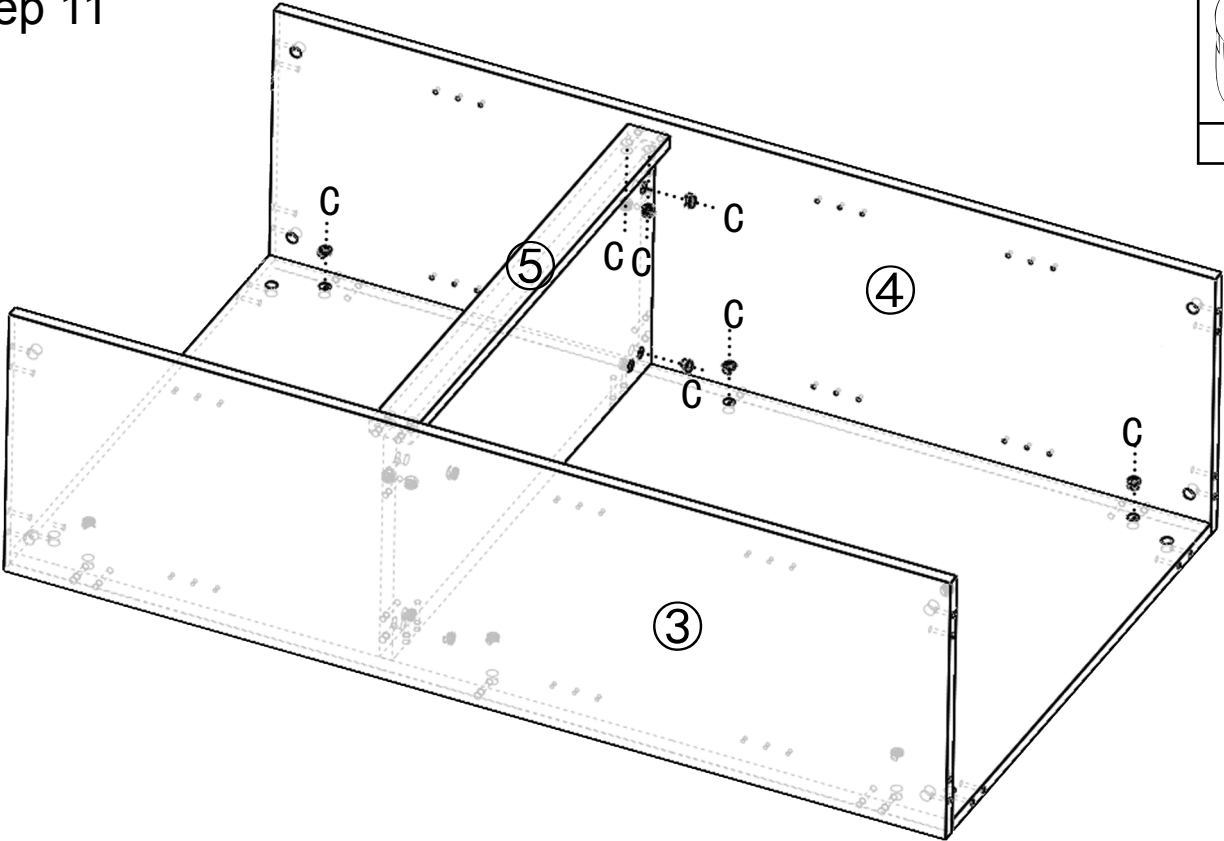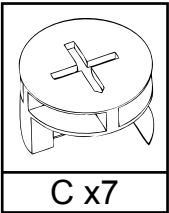


Step 12

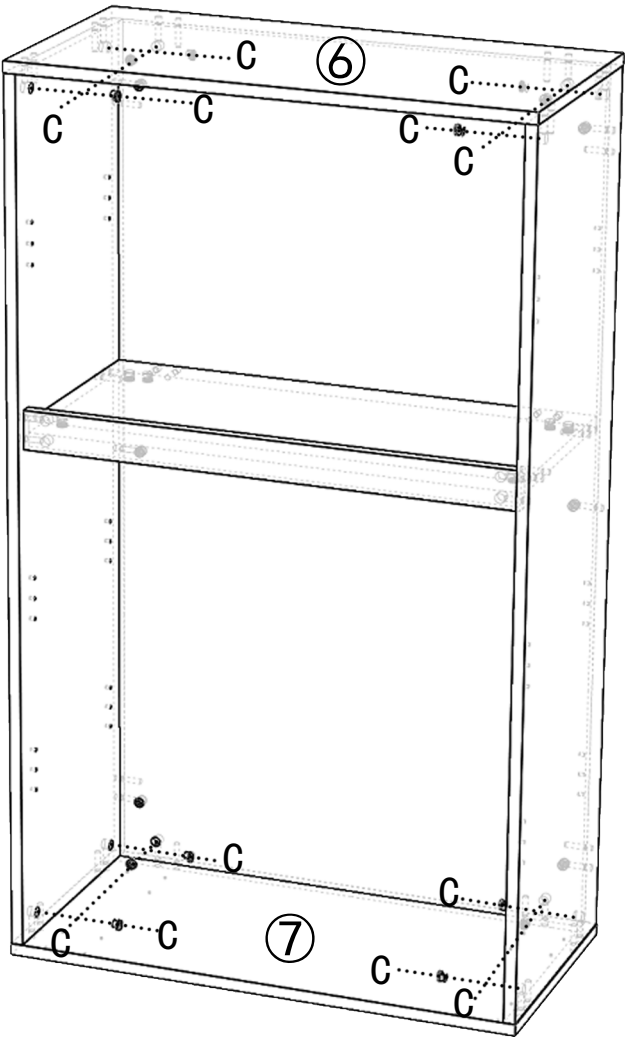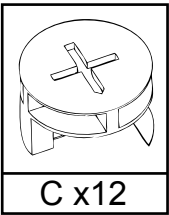


## Step 13

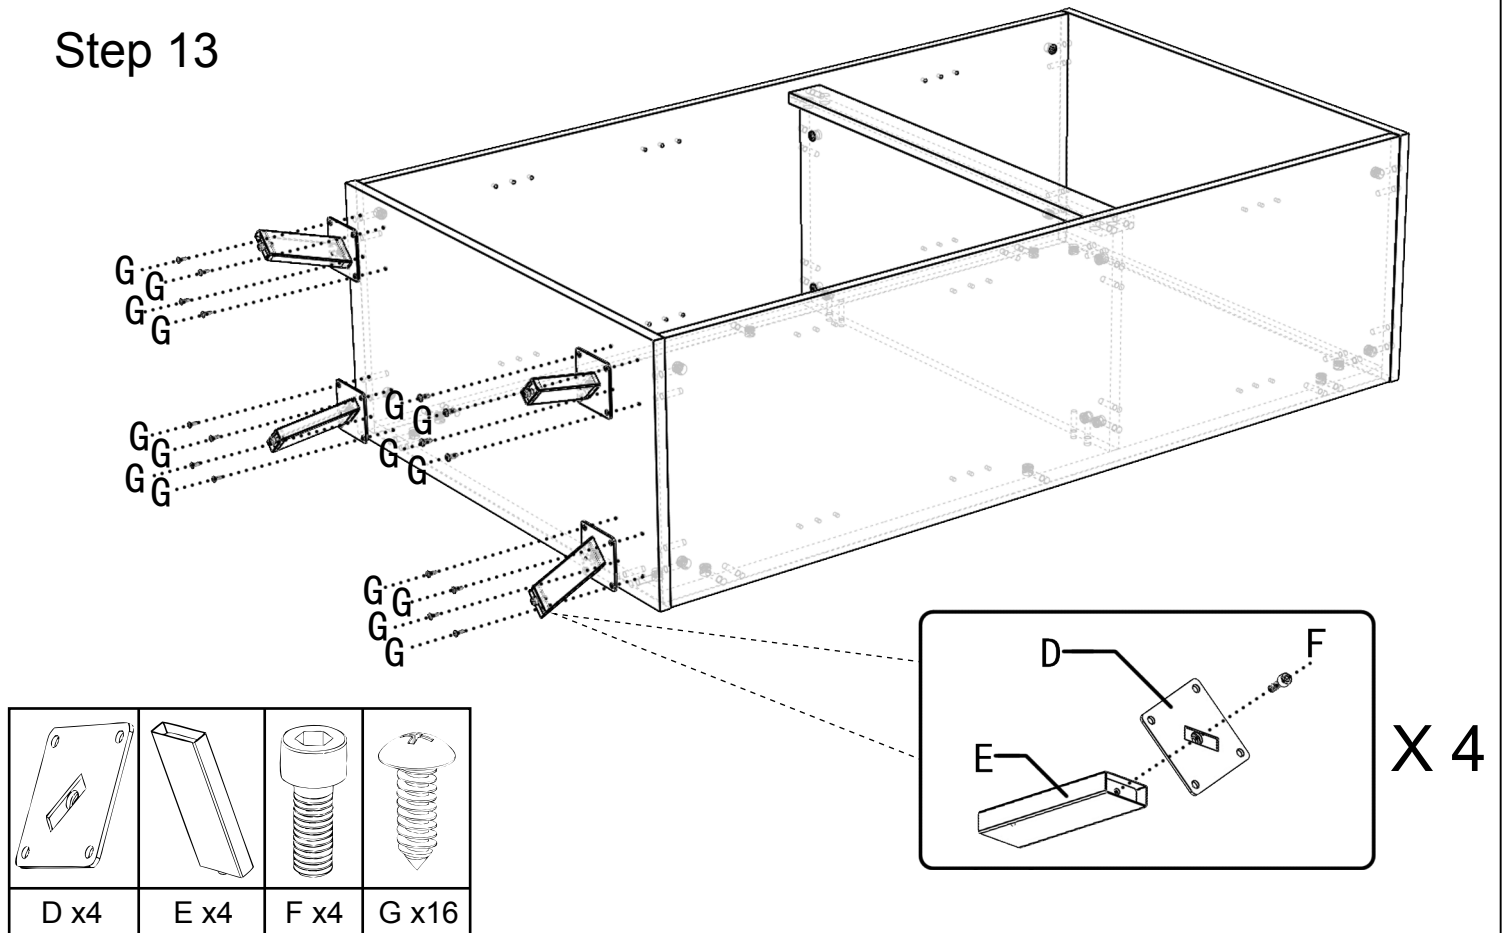



## Step 14

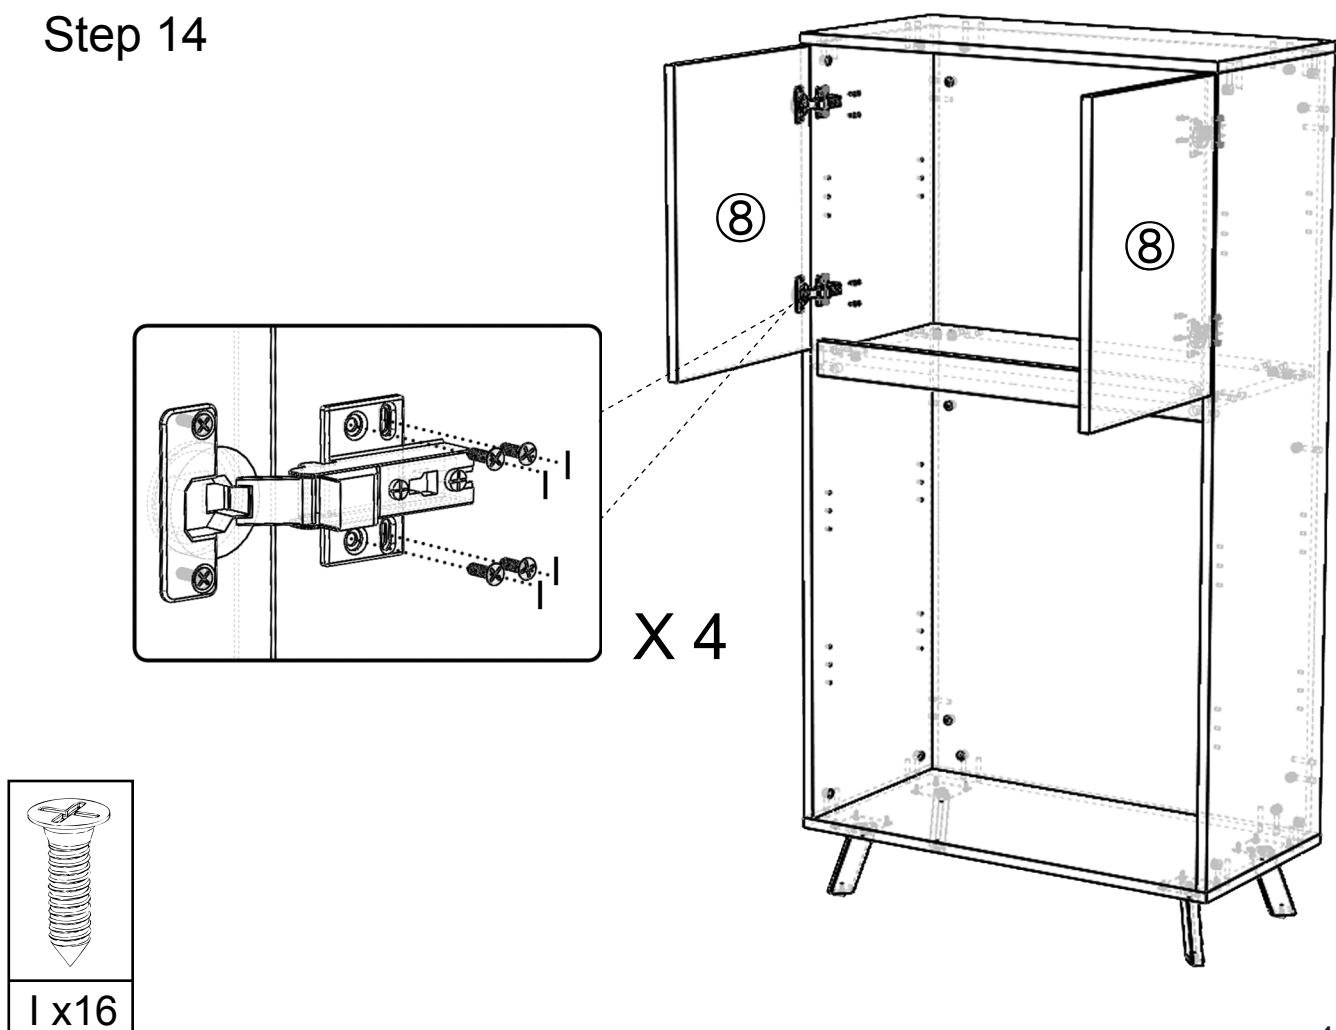

## Step 15

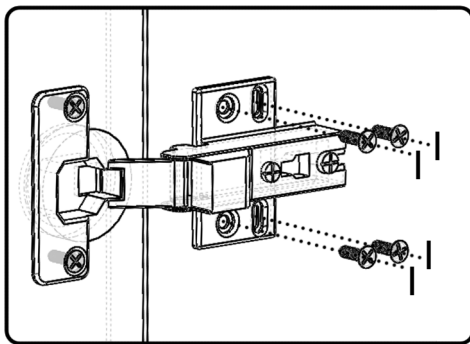

X 4

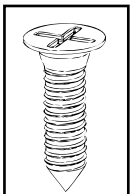
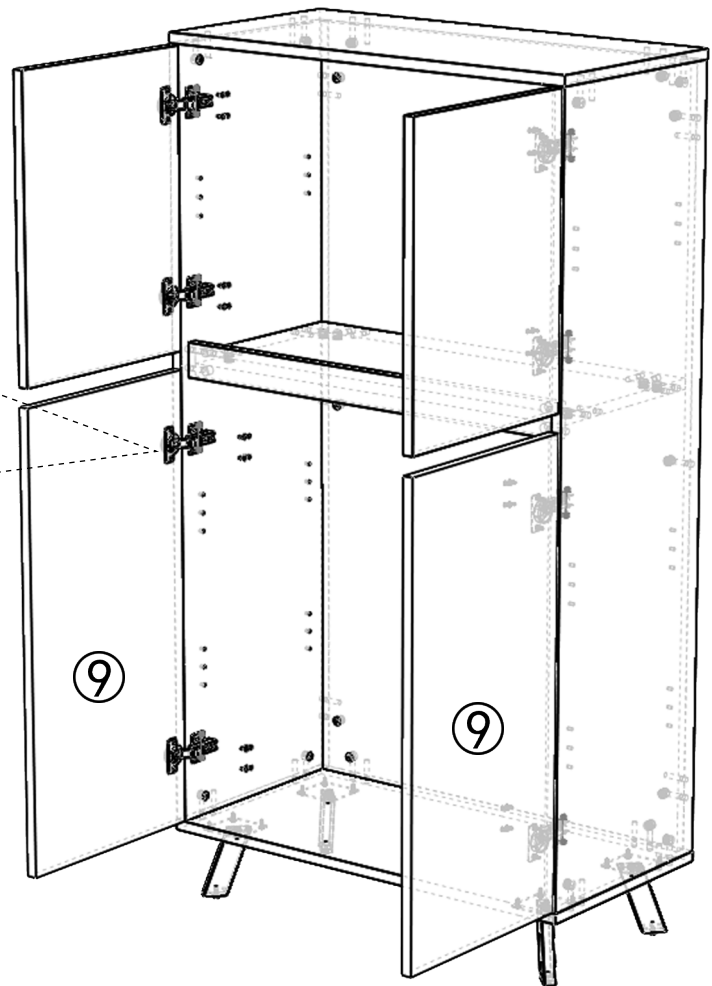


1 x 16





# HINGE INSTALLATION

UNIT: mm

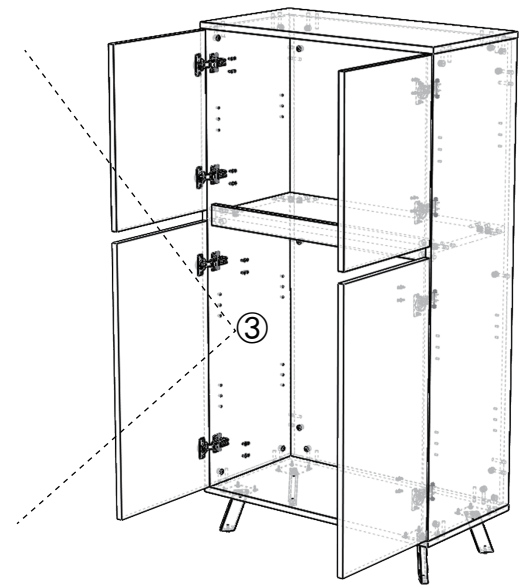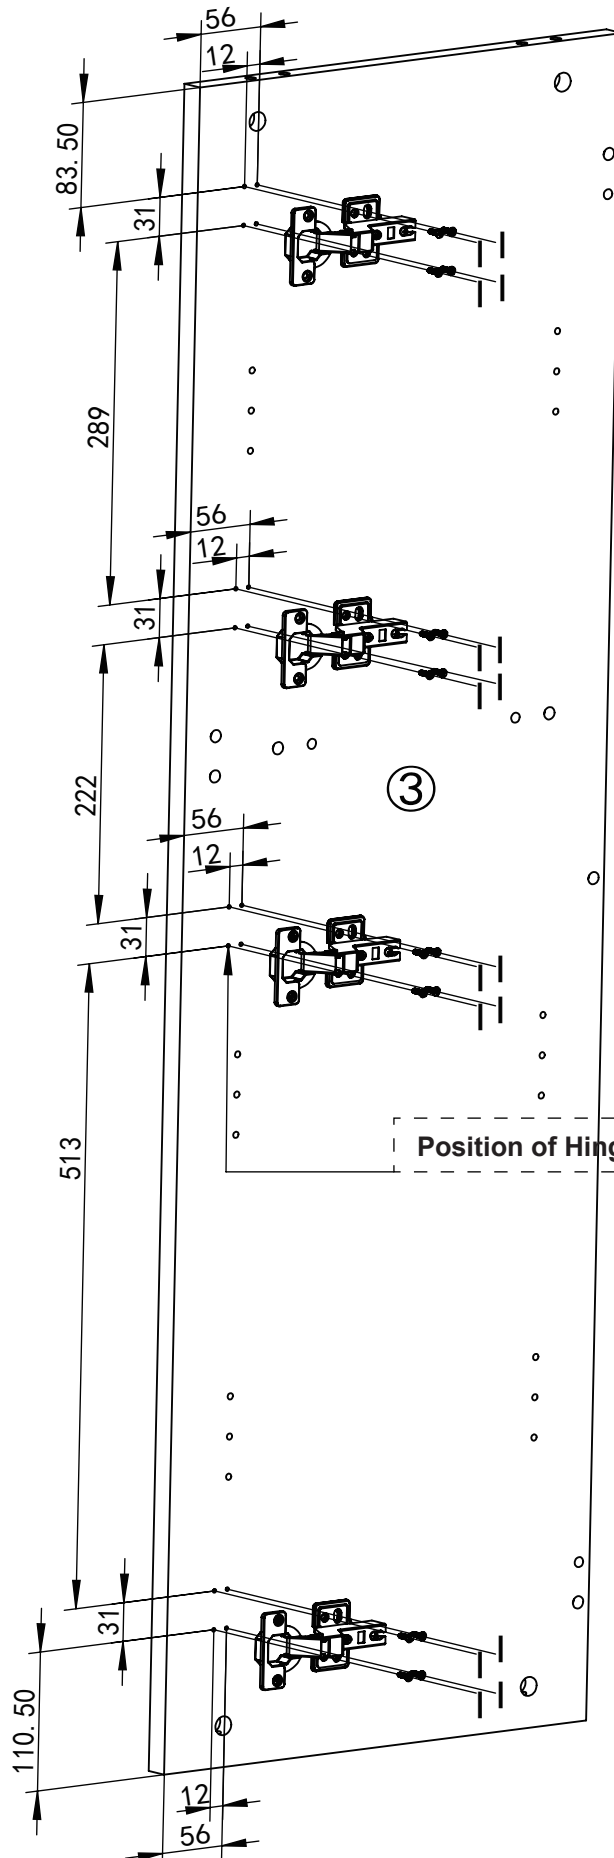

# HINGE INSTALLATION

UNIT: mm

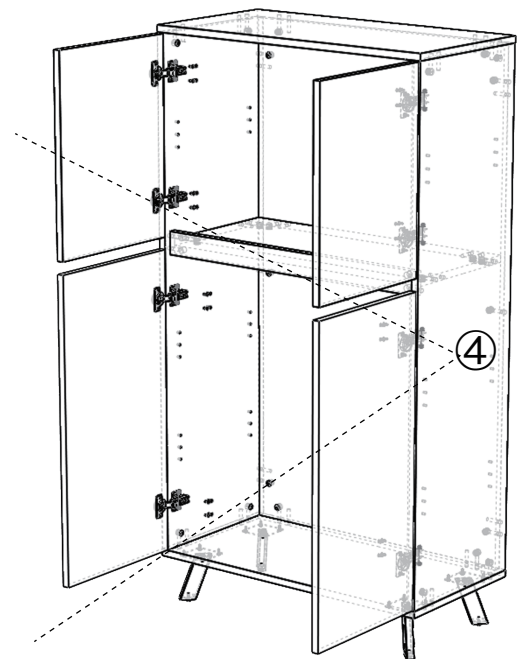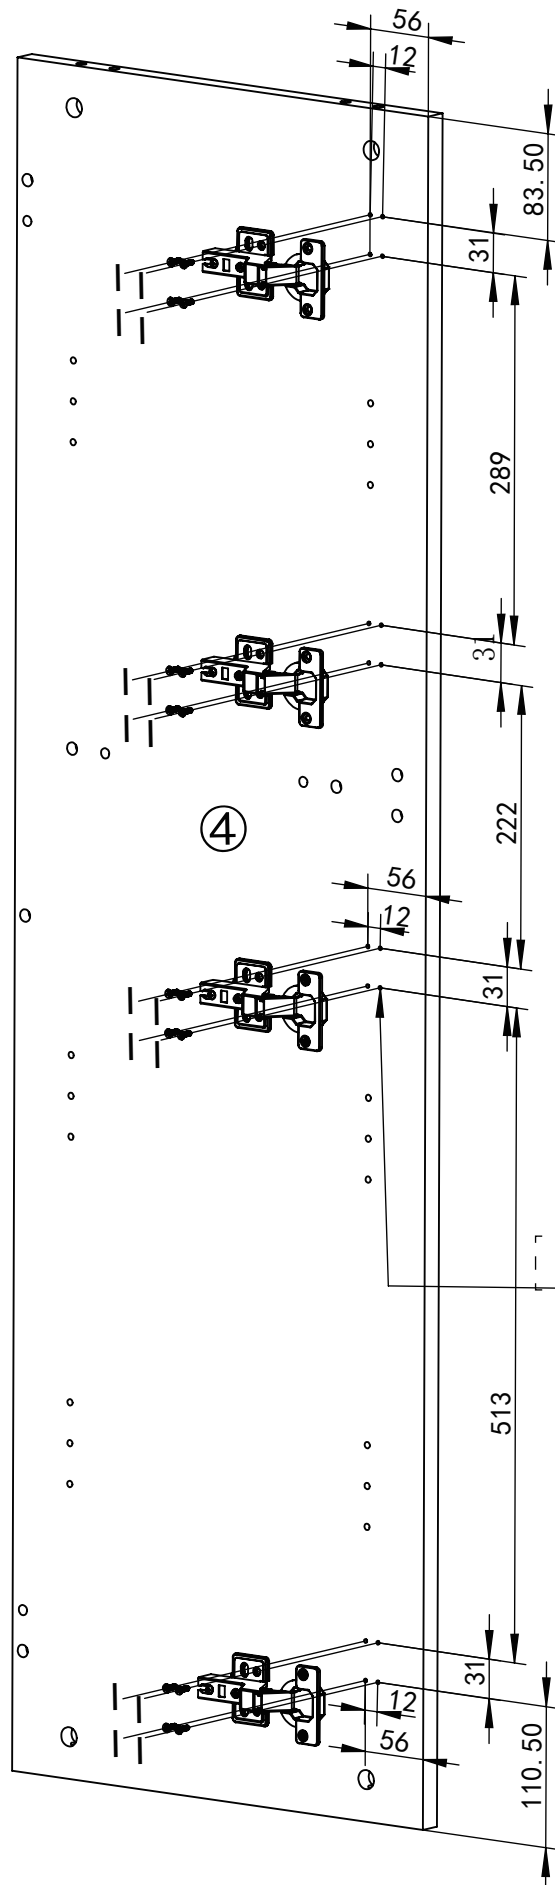


Position of Hinge screw X 16



Mark out the holes using a measuring tape and marker. Drill holes using a 3mm drill bit, maximum depth 5mm, do not drill through the panel.

## Hinge adjustment



If the doors do not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

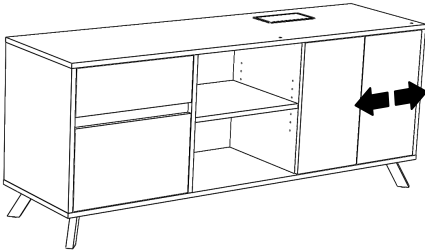


1. Side to side adjustment: Loosen screw A, adjust gap with screw B and re-tighten screw A.

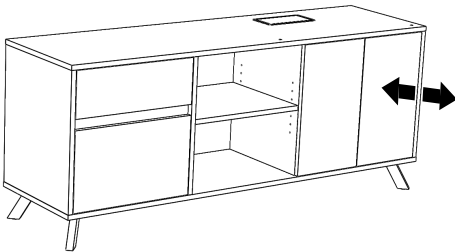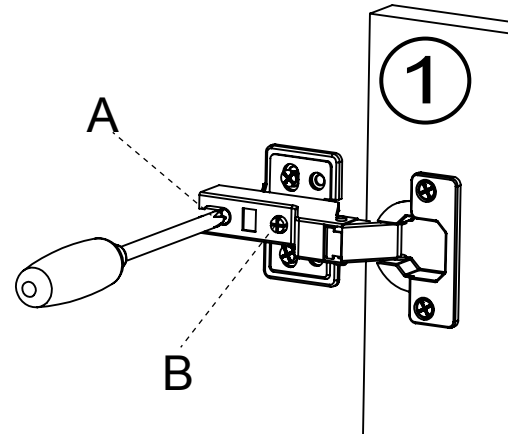


2. Depth adjustment: Loosen screw A, push hinge arm forwards or backwards, re-tighten screw A and screw B with a 1/4 turn clockwise.

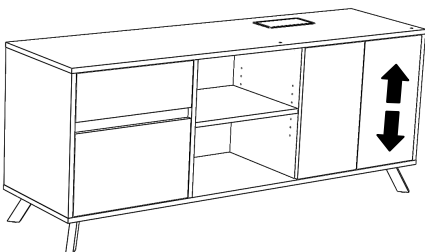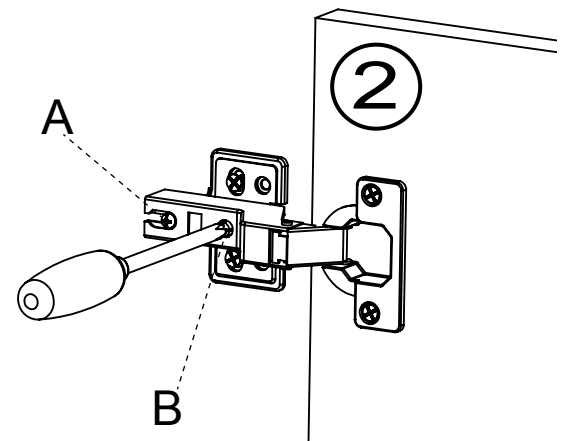

3. Height adjustment: Loosen screw C, adjust door height and re-tighten screw C.

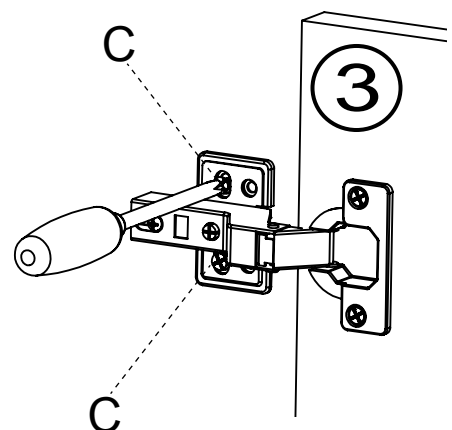

## Step 16

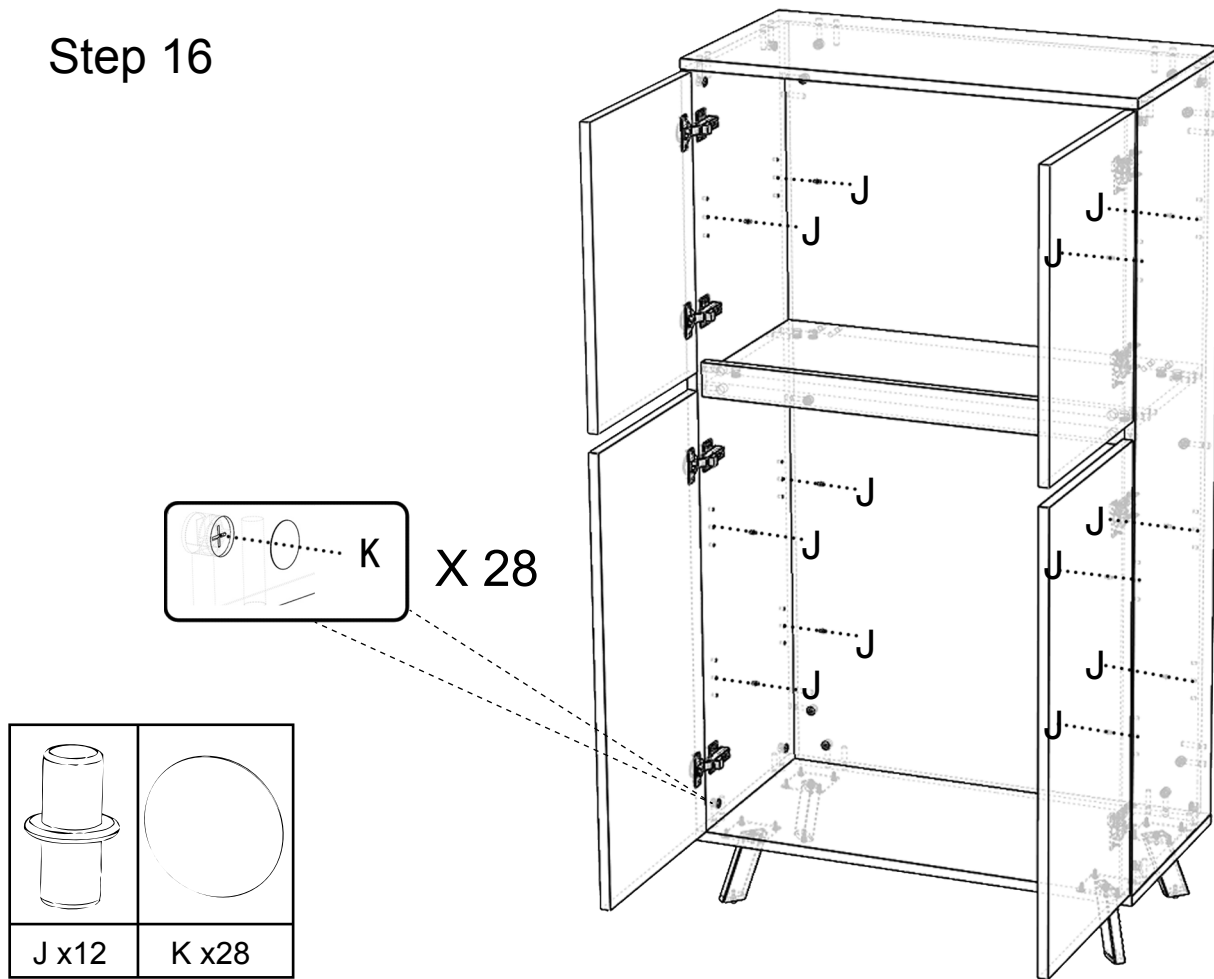

## Step 17

