
# **ASSEMBLY INSTRUCTIONS**


AERO WORKSTATION (3 CTNS)

**JBAEROWSTN** 


EAN: 9341694242552

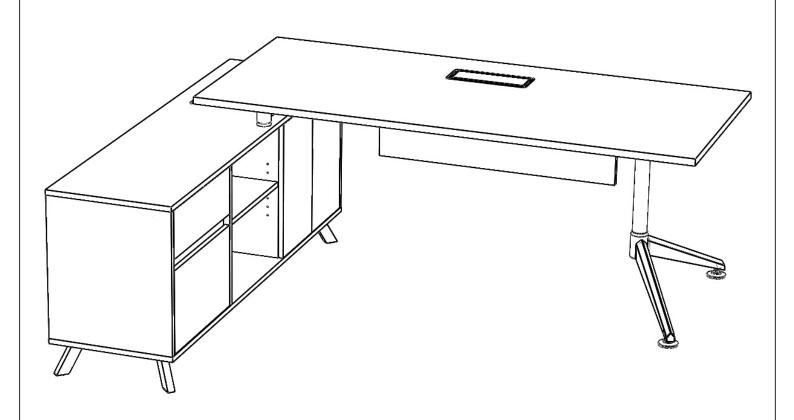


### **Tools Required For Assembly**

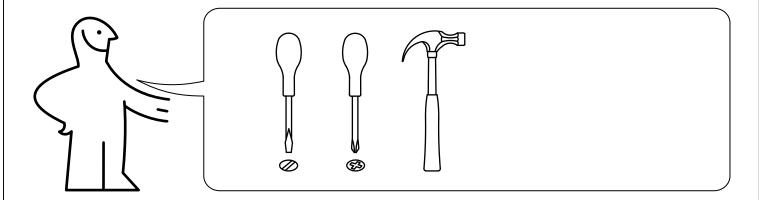


### Need Two Or More People To Complete

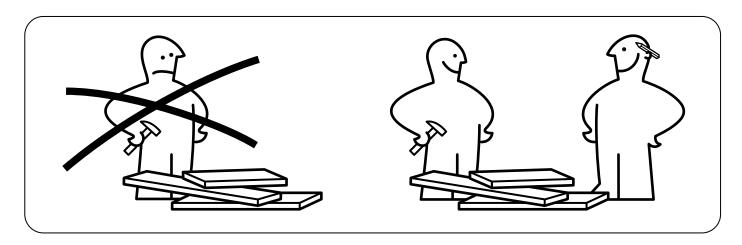


### Assemble Item On a Clean Flat Surface

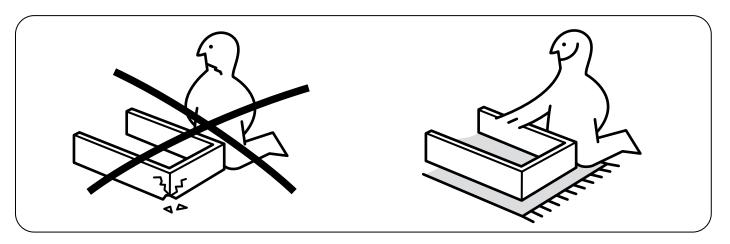



- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase

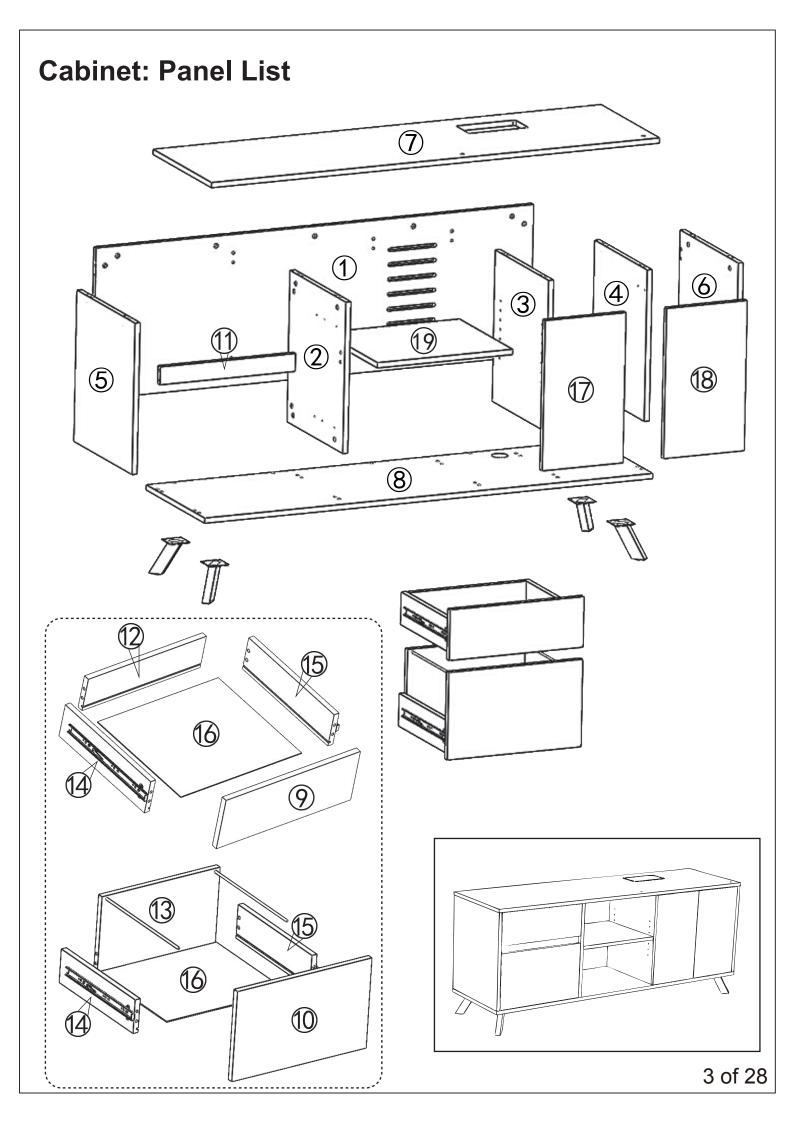



# **Cabinet: Hardware List**

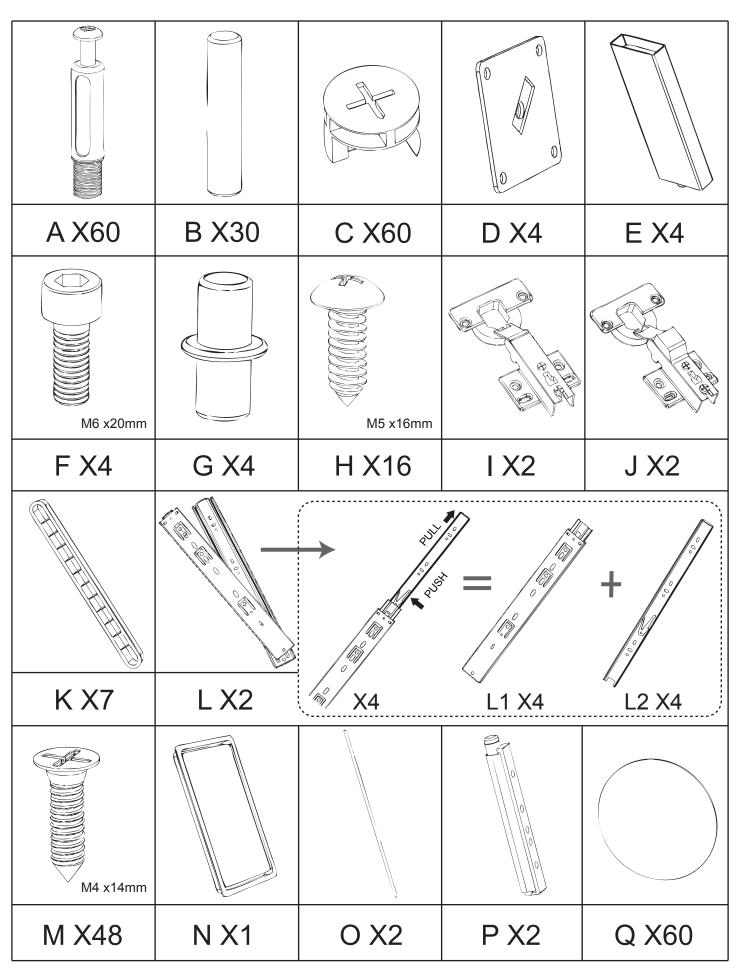


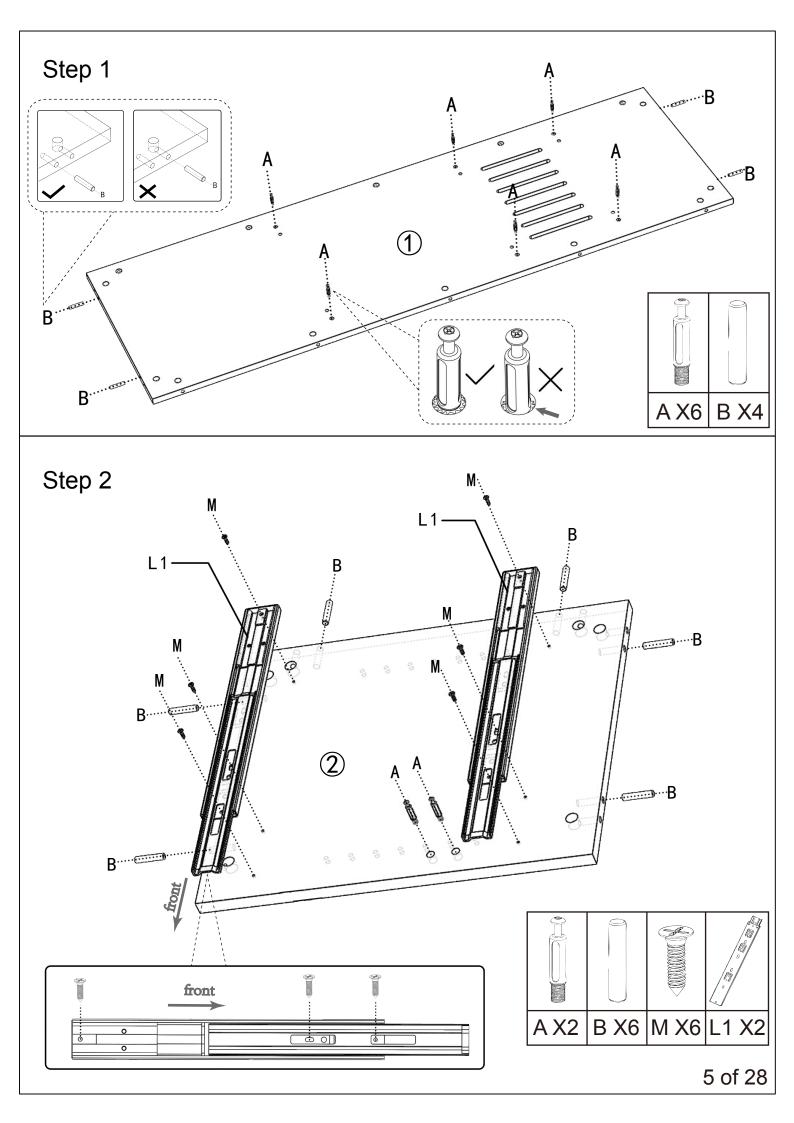


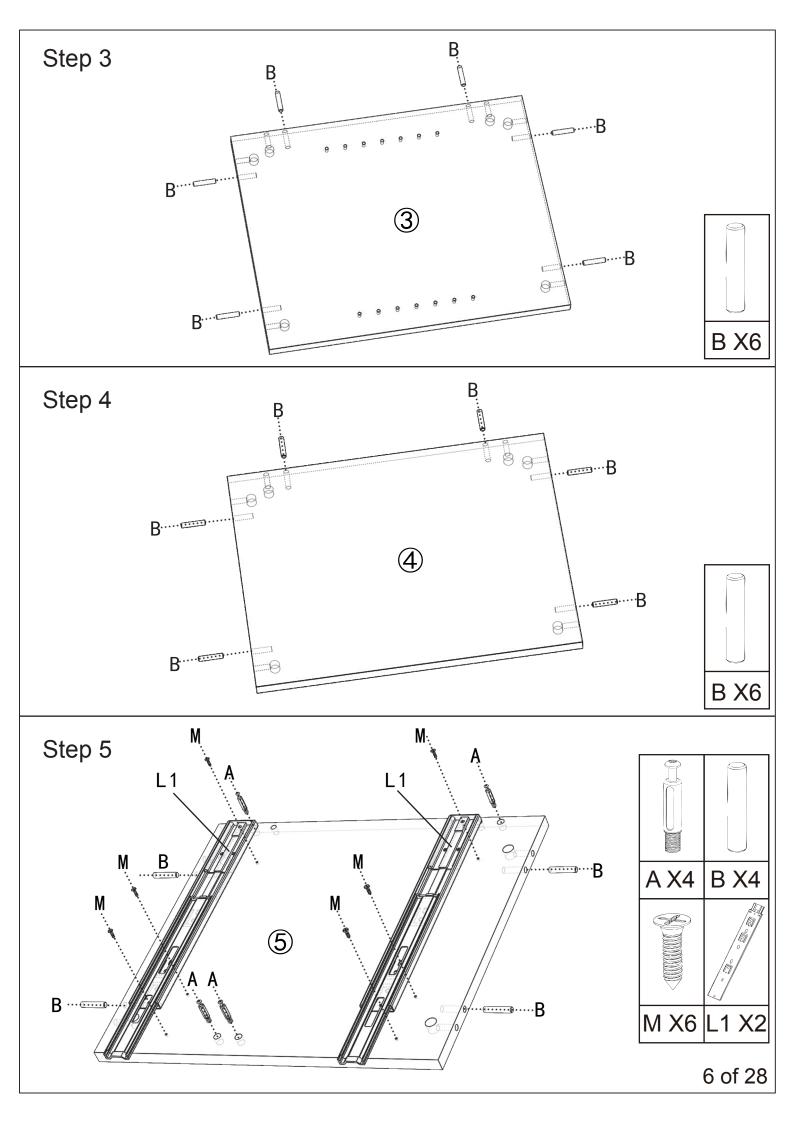


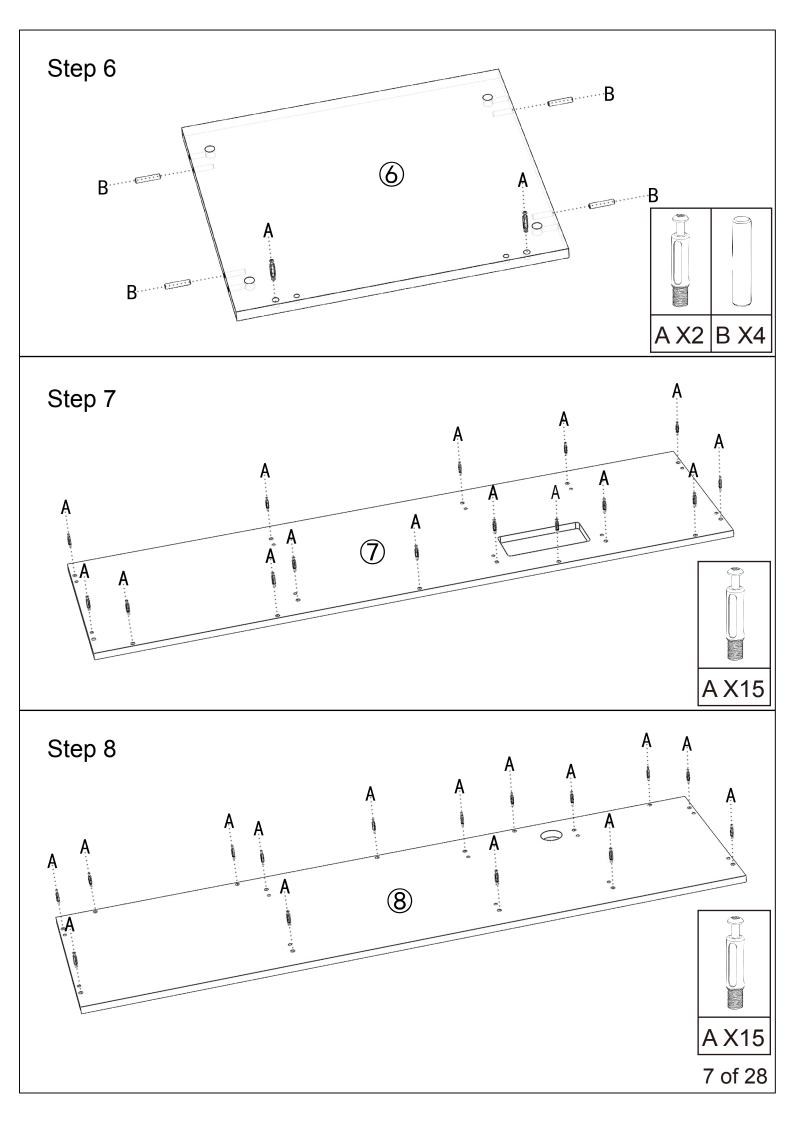


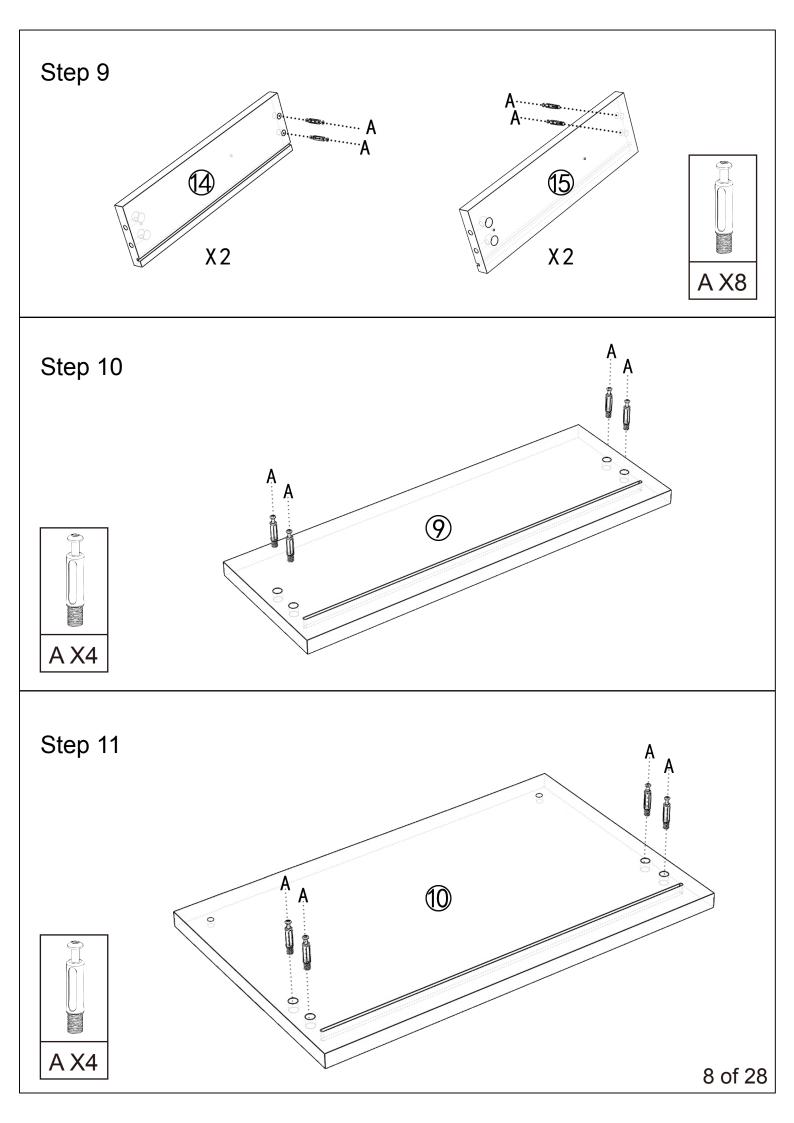


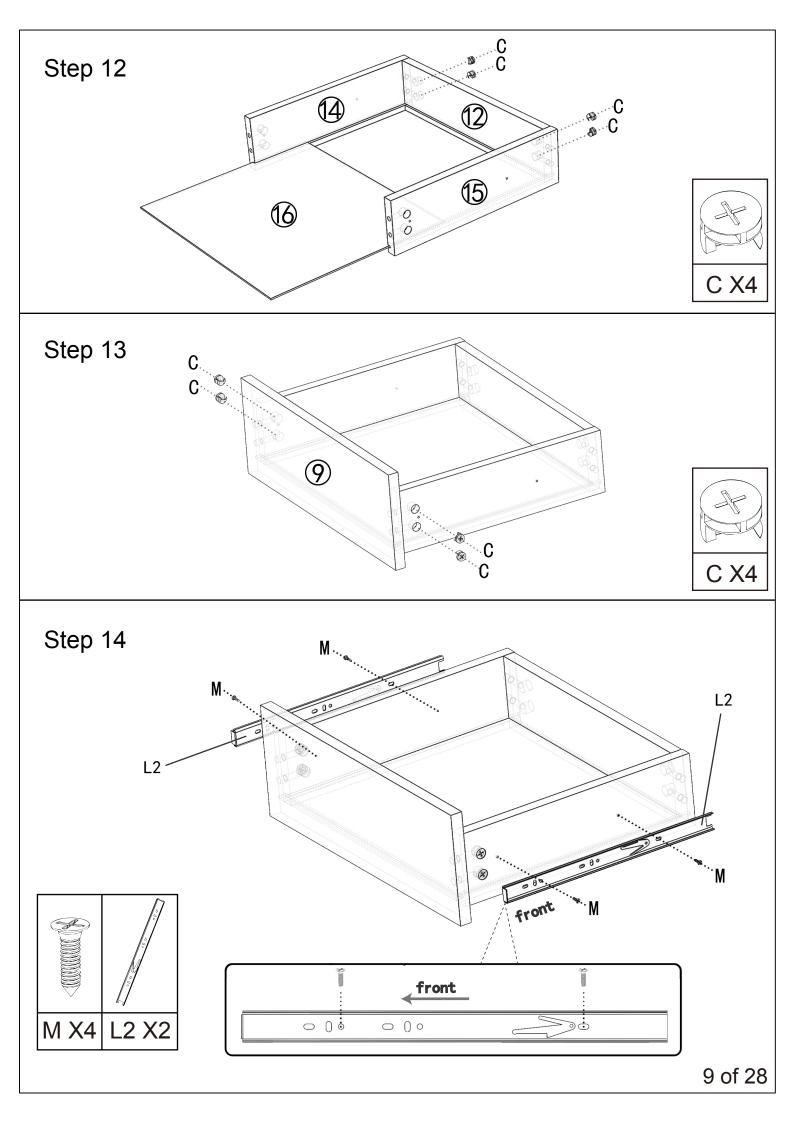


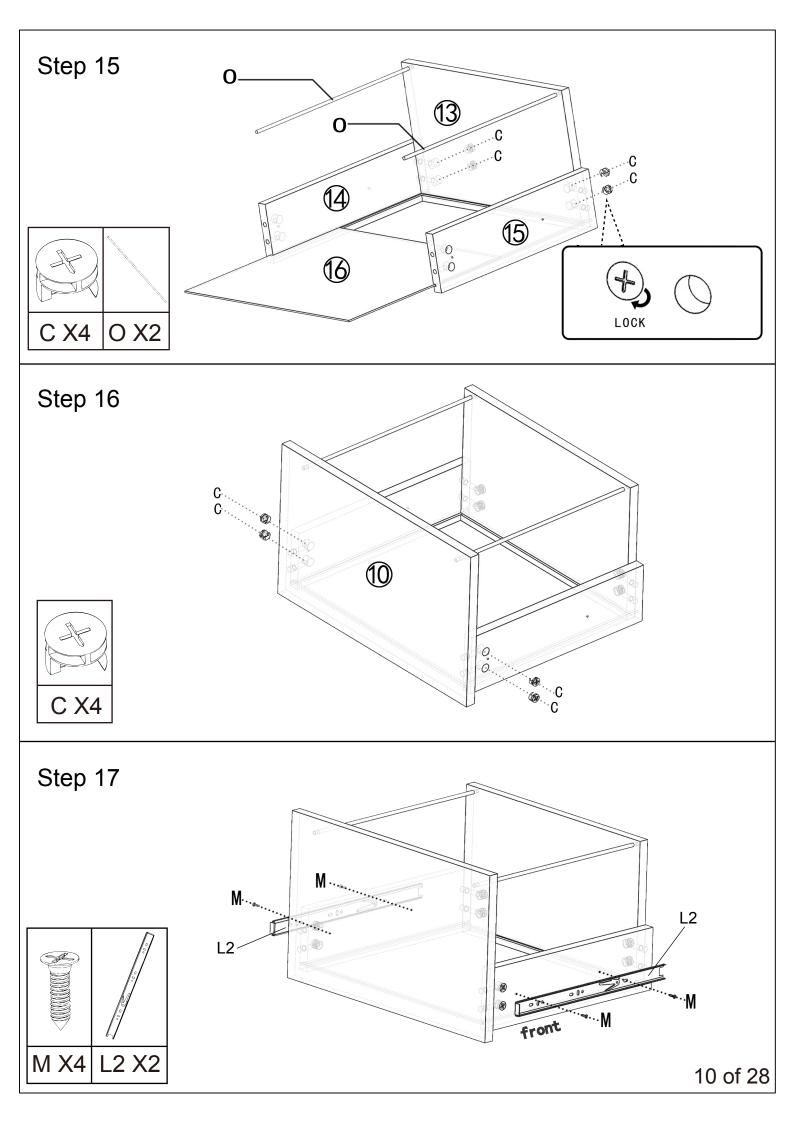

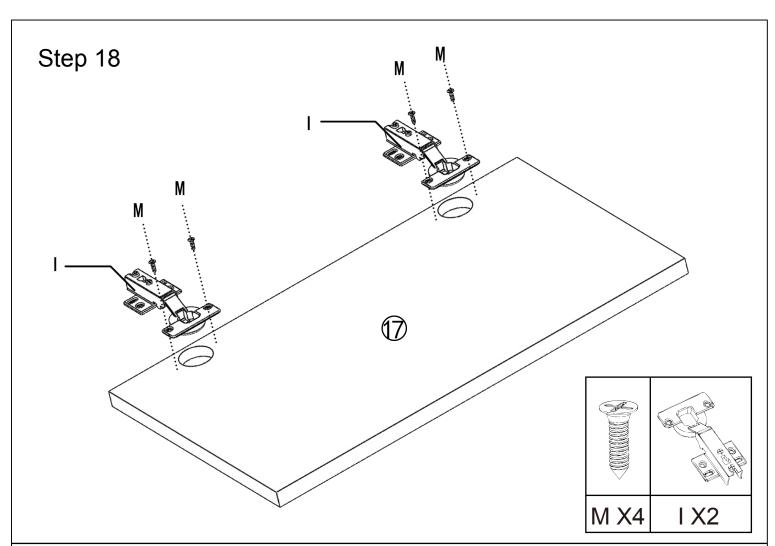


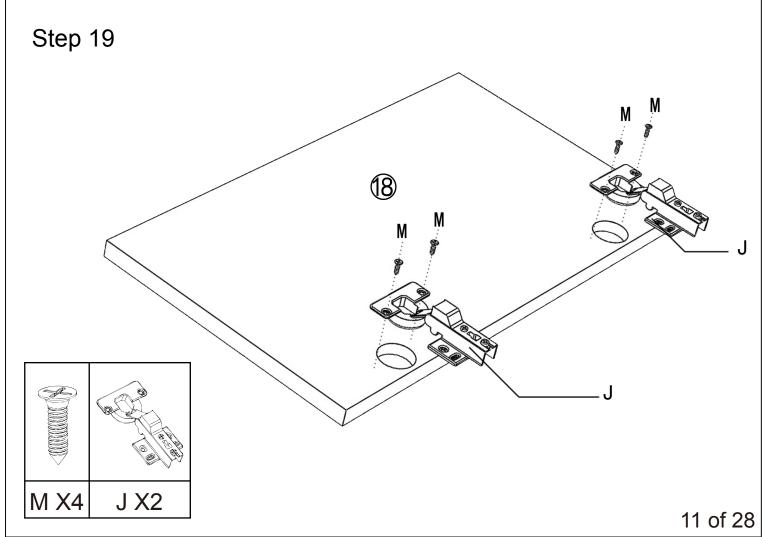

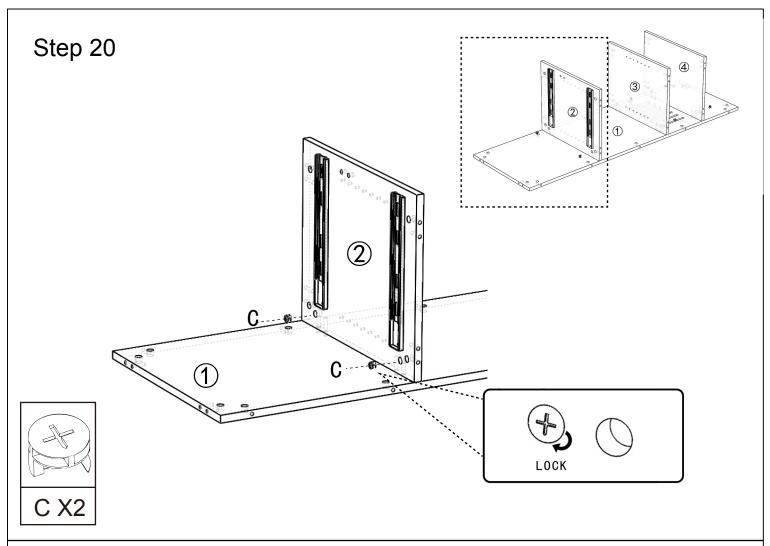

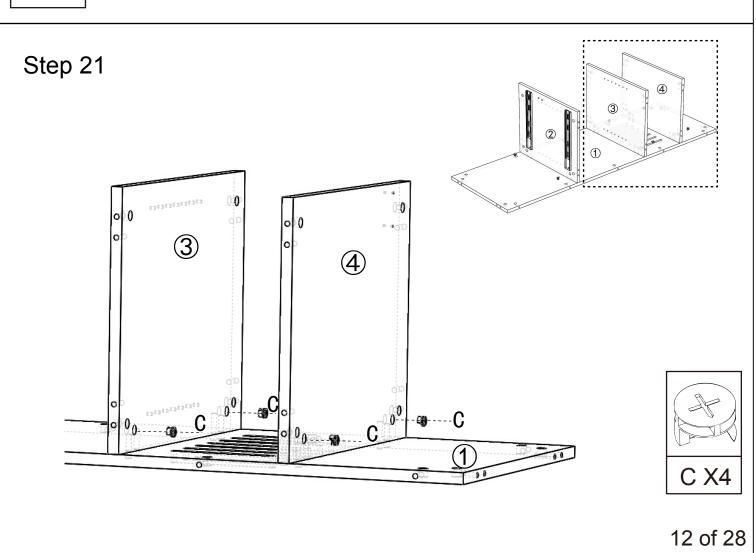


# Step 22

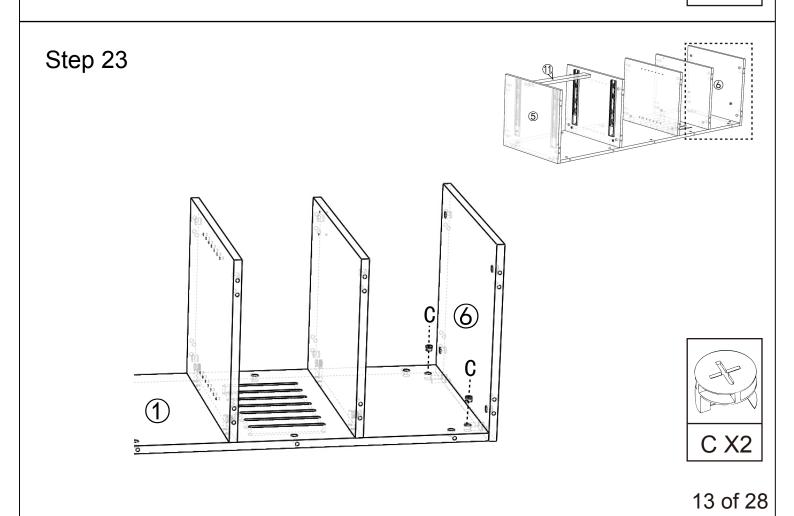


Step 24



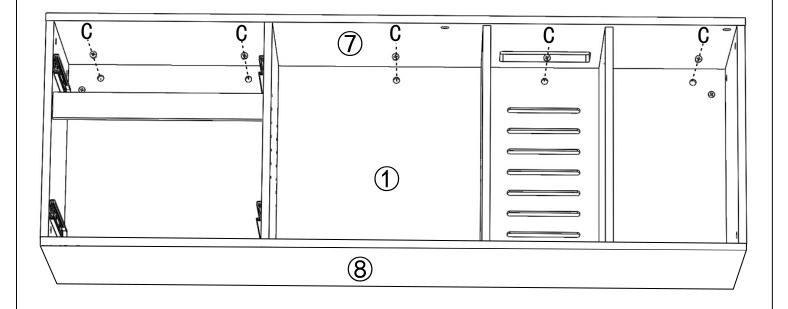



Step 25



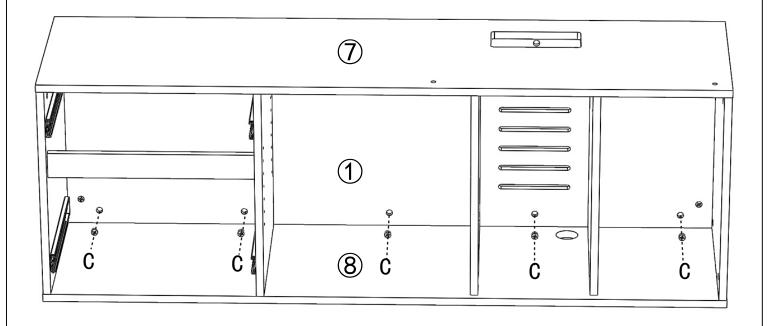


Step 26

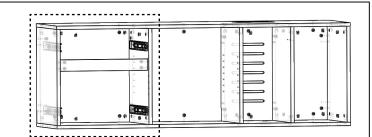


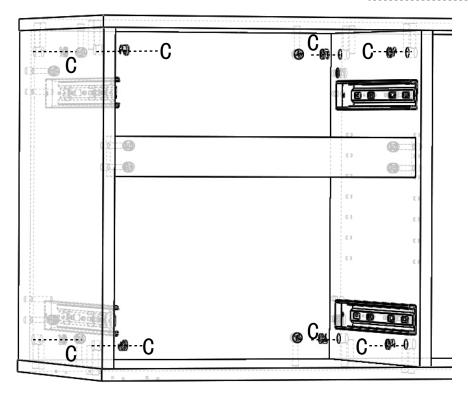




Step 27

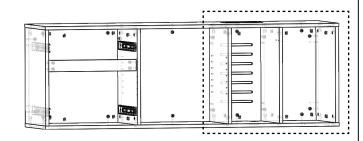


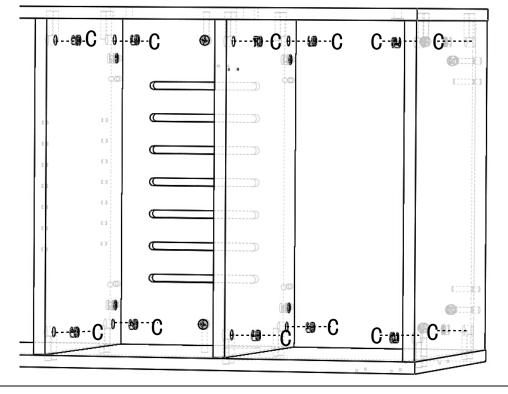





15 of 28

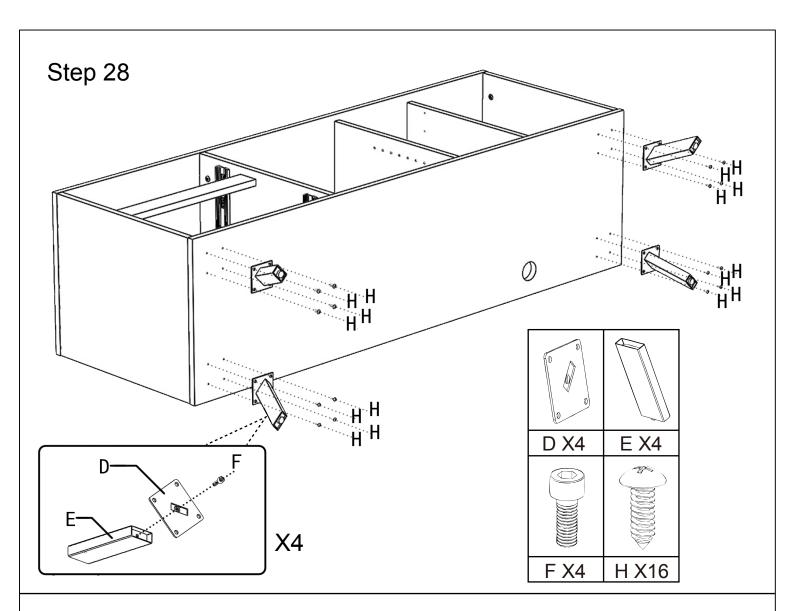


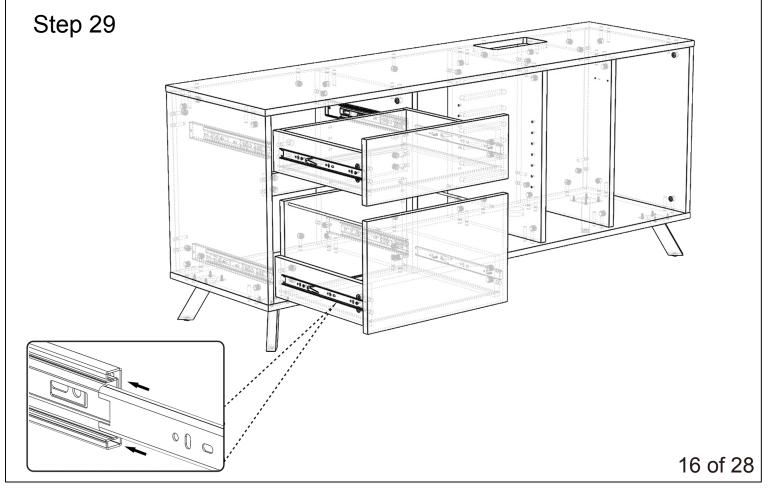


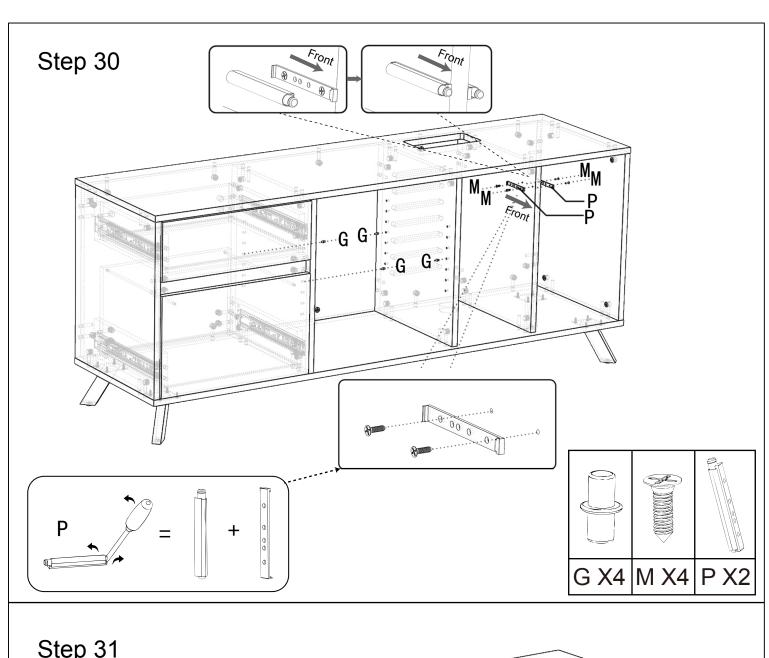


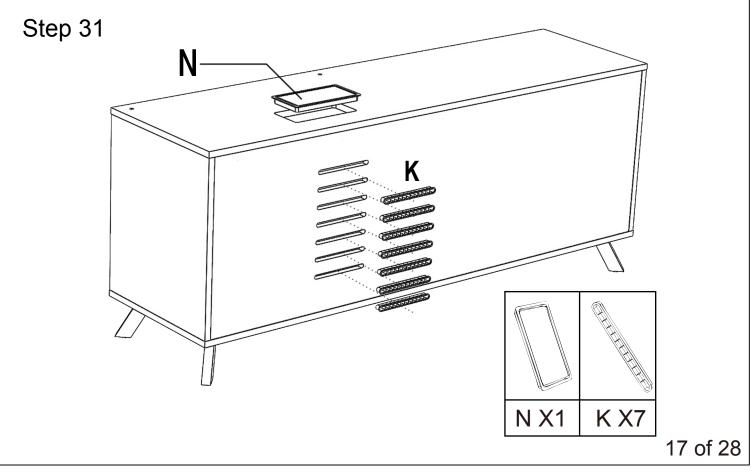


Step 32

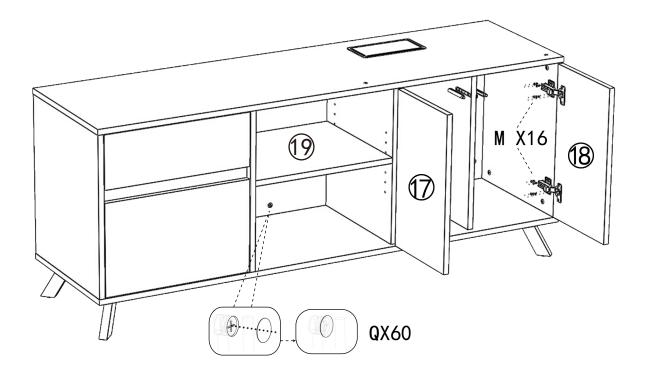

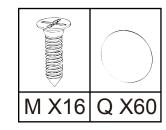

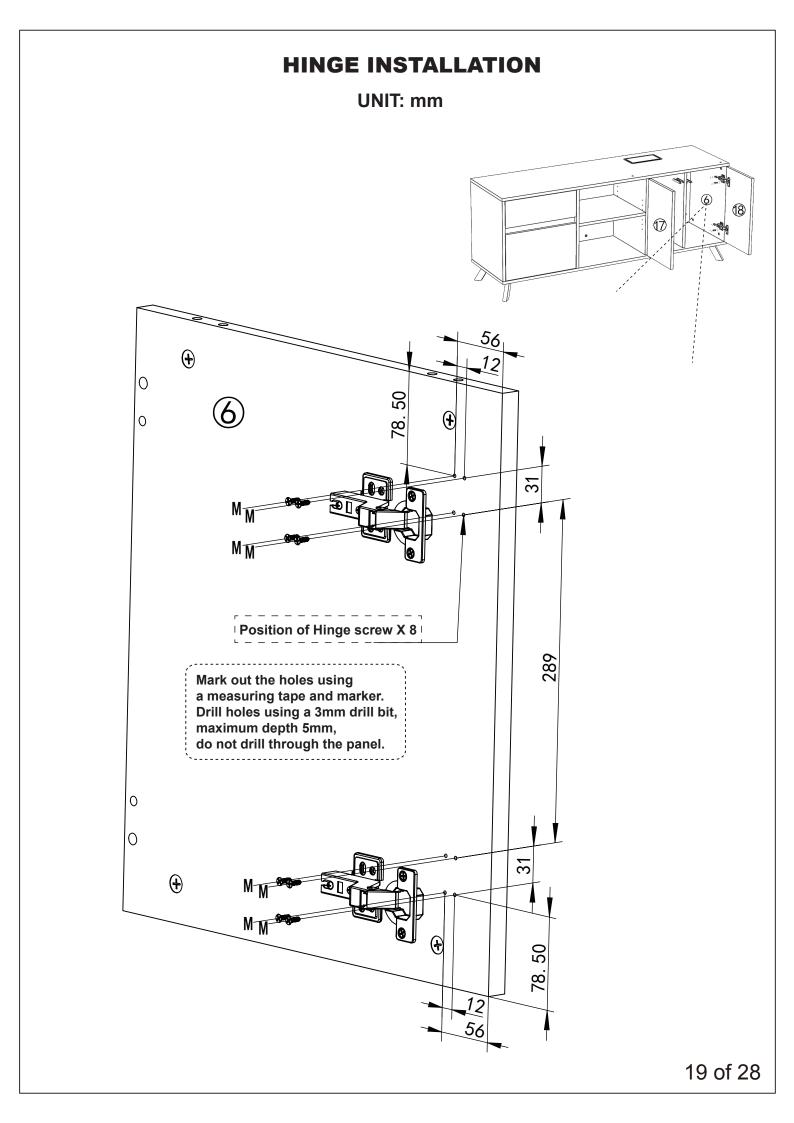

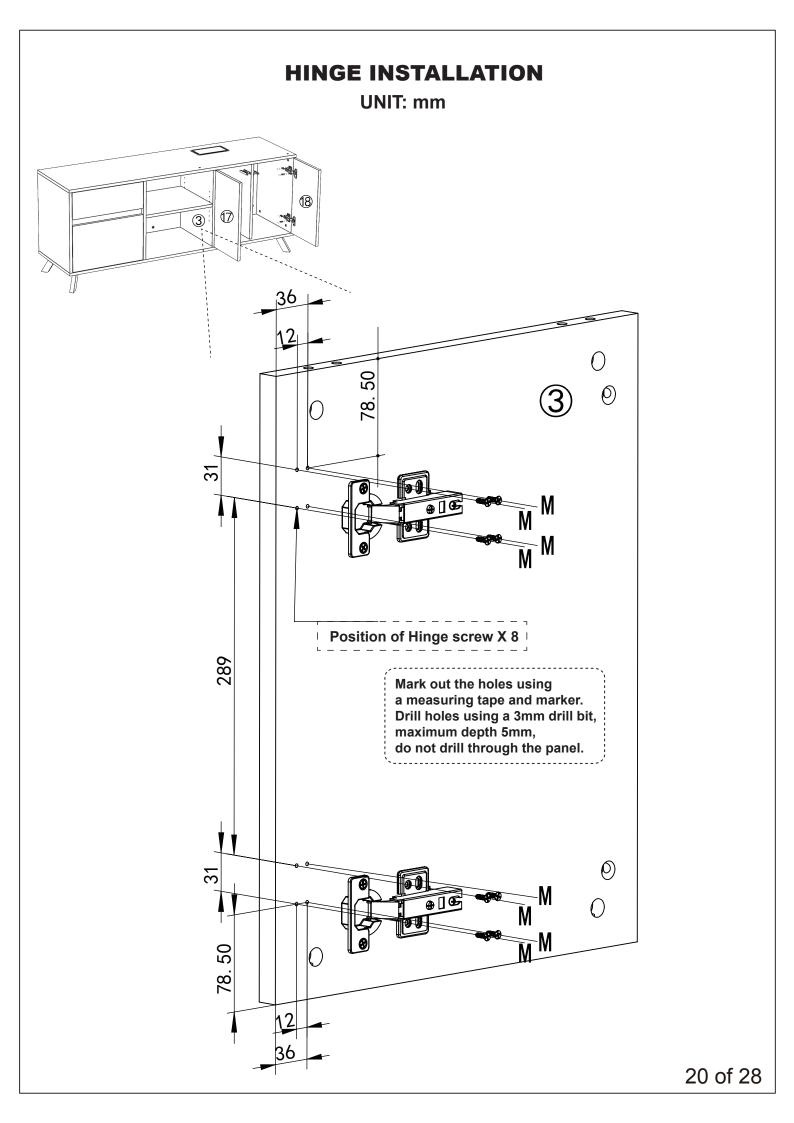



## **Hinge adjustment**

If the doors do not appear square or aligned, lossen or tighten the appropriate screws on each case hinge as illustrated.




1. Side to side adjustment: Loose screw A, adjust gap with screw B and re-tighten screw A.

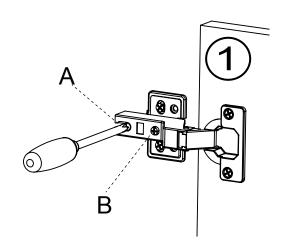

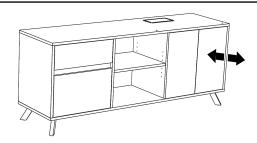



2. Depth adjustment: Loosen screw A, push hinge arm forwards or backwards, re-tighten screw A and screw B with a 1/4 turn clockwise.

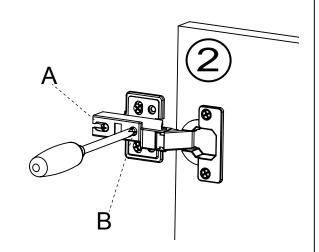



3. Height adjustment: Loosen screw C, adjust door height and re-tighten screw C.

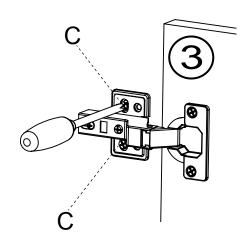

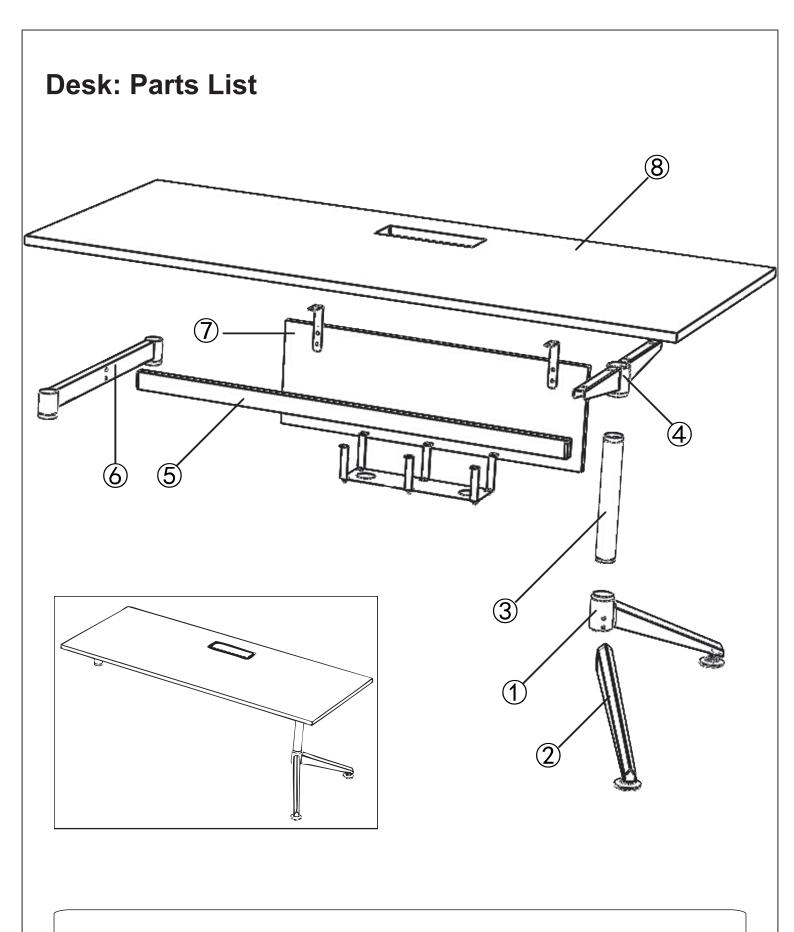

# **Attention:**

Do not tighten the screws before all screws are in right place.

# **Desk: Hardware List**

