


# J.BURROWS


.....

## ASSEMBLY INSTRUCTIONS


### 5 Shelf Metal Shelving

JB5TMTLSWE

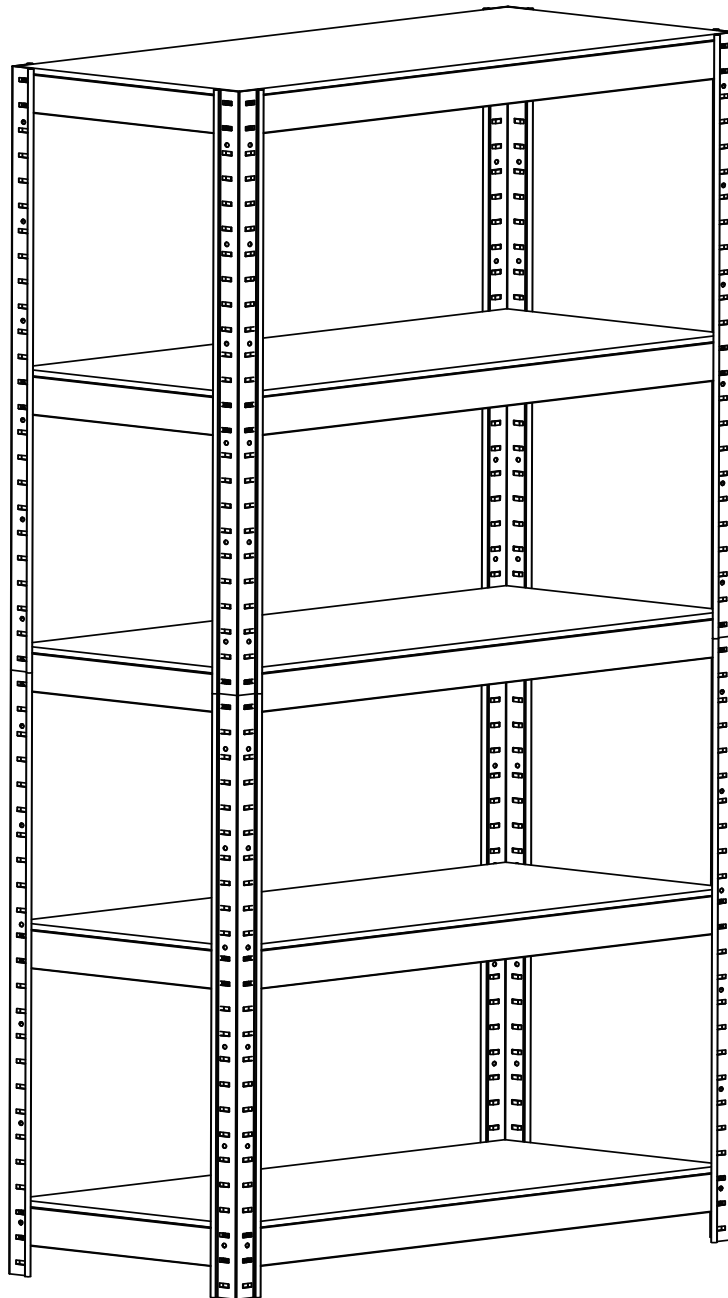

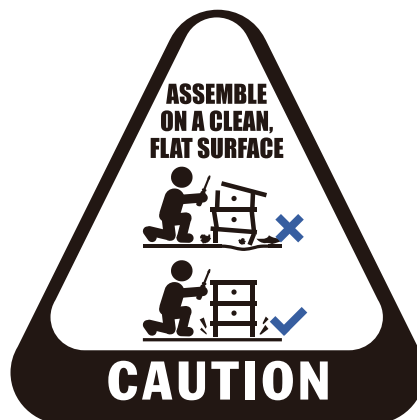



## Tools Required

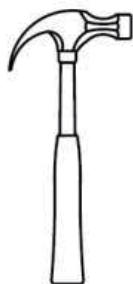

## Hardware List

PARTS INVENTORY CHECKLIST		
<b>A</b>	- Posts	QTY 8
<b>B</b>	- Shelves	QTY 5
<b>C</b>	- Long Apron	QTY 10
<b>D</b>	- Short Apron	QTY 10
<b>E</b>	- Plastic Floor Protectors	QTY 8

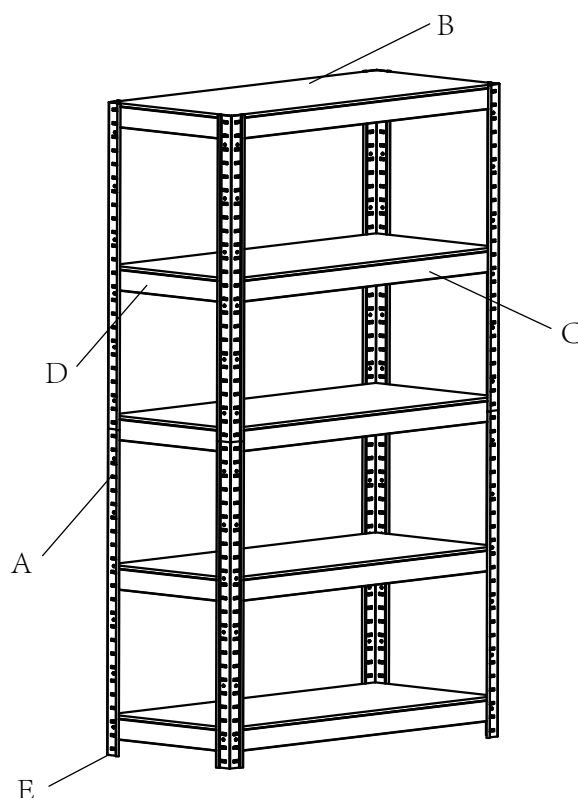

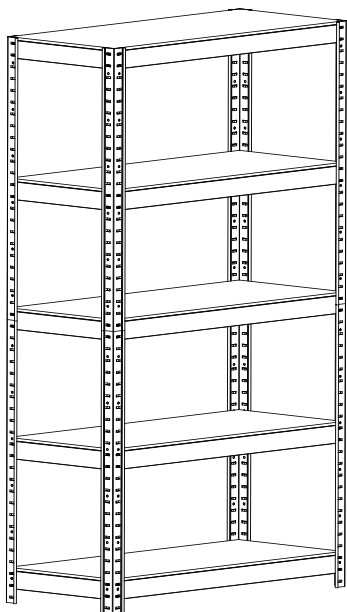

## FOR SAFETY

- 2 people are recommended for assembly
- BE CAREFUL of sharp edges when assembling.
- DO NOT stand on this product or use as a ladder.
- DO NOT alter this product in any manner that is not intended. This may cause product damage or personal injury.
- Position the product on a level surface.

The maximum loaded weight for each shelf is no more than 90kg, evenly distributed.


When loading shelves please distribute items evenly with heaviest items on the bottom shelf.

Fasten the unit to the wall whenever possible with proper fasteners (not provided)

**887W x 354D x 1826H mm**


### **Important: Be sure to line up and match hole pattern on all posts prior to assembly.**

Place post upright, using cardboard or other safeguard beneath post to protect floor. Insert tabs on long shelf support apron into slots on post. Press on tabs with fingers to guide into slots. Push down lightly to extend tabs through slots. It is recommended that the bottom shelf aprons be placed in the second and third slots from the bottom. To ensure stability of the unit, do not place bottom shelf aprons any higher than the sixth slot.

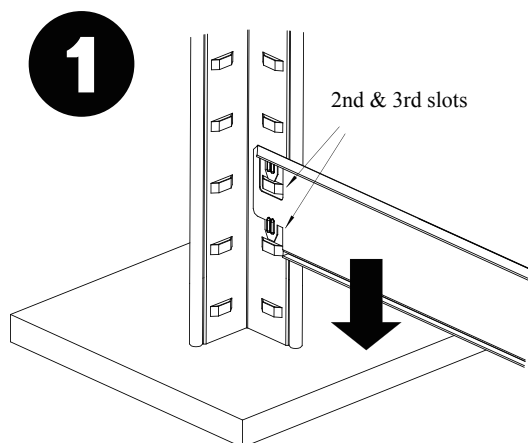


**2**

Next, insert tabs of a short apron into the front post, creating a "tripod." Then alternate insertion of support aprons with posts.

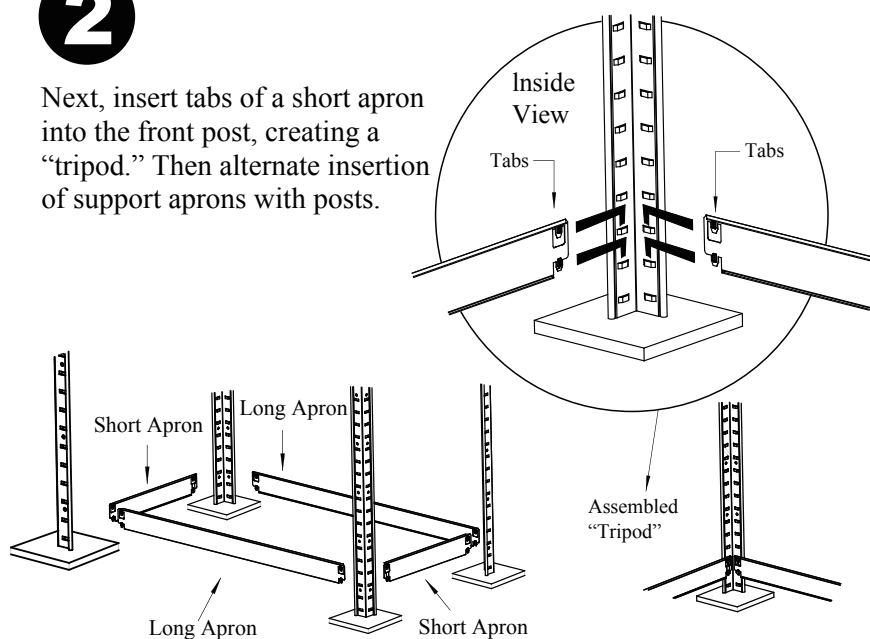


**3**

Place shelves starting at the bottom as you build each layer. Gently tap the top of the shelf around each corner with a rubber mallet until tabs are flush with slots.

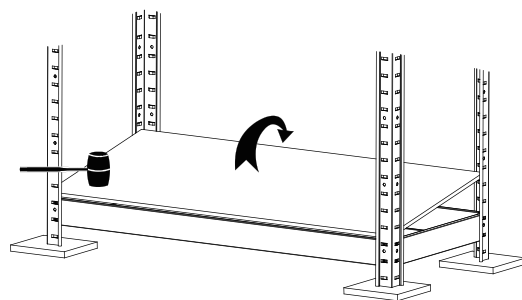

**4**

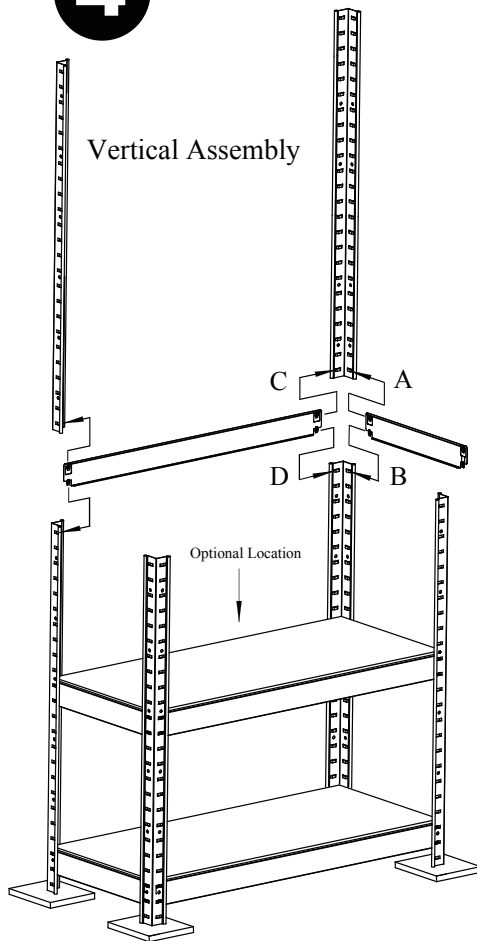

This unit can be assembled upright (vertically) or side-by-side (horizontally).

**For vertical assembly** the posts are attached using a shelf support apron at the mid-level of the unit. To attach using the aprons, begin with a short apron. First insert top apron tab into the bottom slot of the upper post section, as shown in illustration **A**, and then insert the lower apron in the top slot of the lower post section as shown in illustration **B**. Repeat this process at the other end of the short apron. Insert a long apron by again inserting the lower tab into the top slot of the lower post section and top apron tab into the bottom side of the upper post section (illustrations **C**, **D**). If needed, the unattached end of the long apron can be rested on the lower post section, joining of lower and upper post sections using the aprons until all are installed.


When assembling your unit it is recommended that you place the top shelf aprons in the first and second slots from the top.

### Horizontal Assembly


First and second slots recommended

Optional Location

Second and third slots recommended

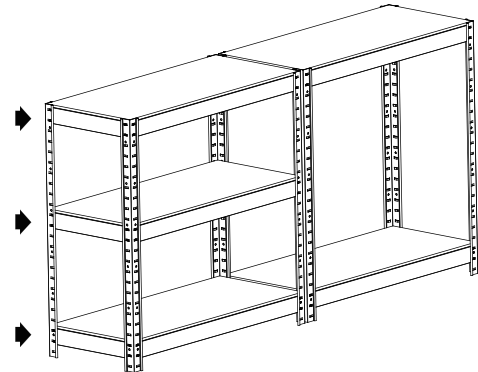

To ensure stability of the unit, do not place the top shelf aprons any lower than the sixth slot. This applies to both vertical and horizontal assembly.

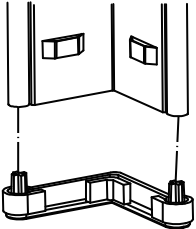

**5**

Fit the floor protectors provided on the end of each leg.

**When moving assembled unit, always handle by the lower half. Recheck all apron tabs / slots being sure they are securely seated.**

**For damaged or missing parts, please email [products@geelongsales.com.au](mailto:products@geelongsales.com.au)**