


## Corian® Washplane Installation Guide 5213


## **Instructions**

- 1. Please check the washplane is in perfect condition before proceeding to installation.
- 2. Please ensure all fixing brackets and screws are in the box.
- 3. Ensure the structure / wall is sound and load bearing to take the weight of the unit. This washplane weighs approximately 80KG.
- 4. All required wall support fittings have been included with your product together with screws and plugs. Please ensure that you use a sharp masonry bit to drill the holes. M8\*80 screws for cantilever wall brackets, M6\*60 screws for hanging brackets.
- 5. Once the hanging supporting brackets are securely fixed, slide the unit down onto the pre-installed unit fitting. Be sure all fixtures are seated into the fixings. Use the adjusting bolts to level the unit.
- 6. If required, please make sure that you use a good quality silicone to seal where the back of the washplane meets the wall.

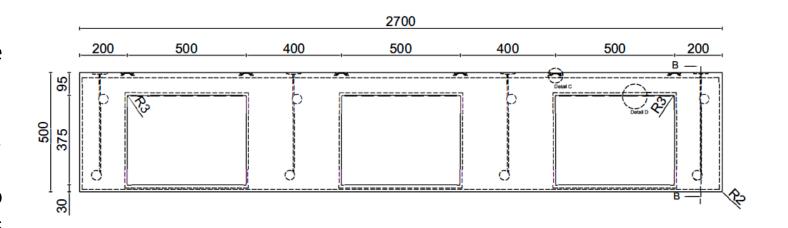


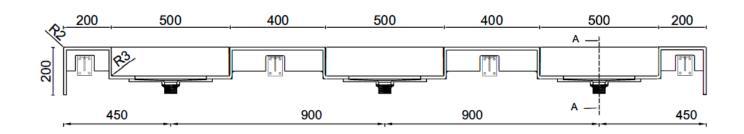


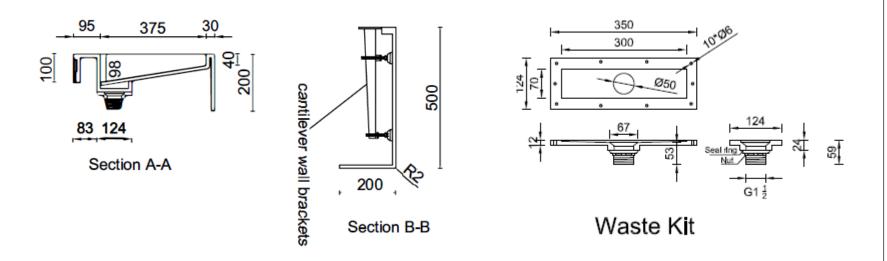

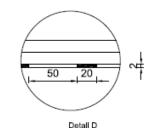

Drainage Line

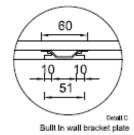

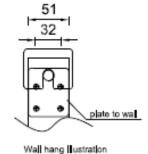





CASF Australia
Unit 3, 208 Walters Road, Arndell Park NSW 2148

Tel: 1300 795 044

Email: projects@casf.com.au