



Vanitys Made From Corian®

Installation Guide for PWD920 vanity


1. Please check the vanity is in perfect condition before proceeding to installation.
2. Please ensure all fixing brackets and screws/bolts are in the crate/box.
3. Ensure the structure / wall is sound and load bearing to take the weight of the unit. This vanity weights approximately 18KGs.
4. All required wall support fittings have been included with your product together with screws and plugs.
M6*60 screws for hanging brackets.
M8*80 expansion bolt for direct fixing.
Please ensure that you use a sharp masonry bit to drill the holes. The M8*80 bolt need drill $\phi 10\text{mm}$ holes.
5. Once the hanging supporting male brackets are securely fixed, slide the unit down onto the pre-installed unit fitting. Be sure all fixtures are seated into the fixings. And then fix the M8*80 expansion bolt.
6. If required, please make sure that you use a good quality silicone to seal where the back of the vanity meets the wall.

casf
your space your way

CORIAN®
SOLID SURFACE

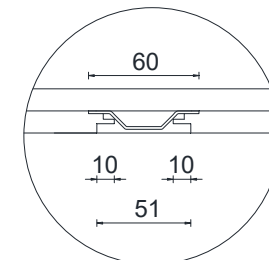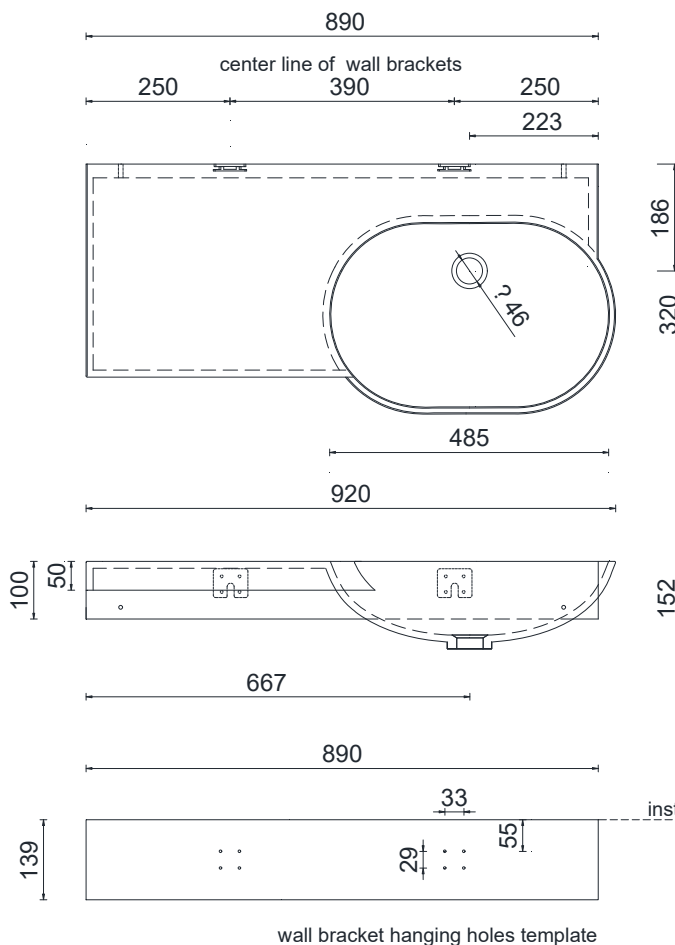

Built in wall bracket plate

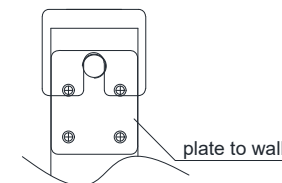

Wall hang illustration

