

Fitting Requirements

Before you start you will need

- Phillips Head Screwdriver
- Felt Tip Marker Pen
- Glass/Window Cleaner
- Masking Tape (optional)
- Cleaning Cloths

Fitting Instructions

Warning!!

Read instructions carefully before commencing.
Don't attempt to fit in wet or humid conditions.


Set 1.

To obtain maximum adhesion, clean the glass with a glass cleaner and cleaning cloth.

With isopropyl alcohol prep:

- 1). Thoroughly clean the glass where the clips are to be located
- 2). Clean the underside & perimeter of the base clips.


Additionally it is highly recommended after the alcohol has evaporated, buff the cleaned area with a clean cloth. **Do not touch the prepared surface.**

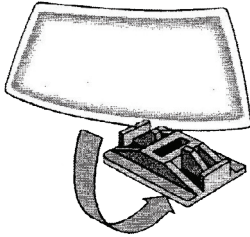

Set 2.


Leave backing paper on the side of the adhesive pads & attach them to the underside of the clip bases, taking care not to touch adhesive.

Rub backing paper firmly to ensure total adhesion.

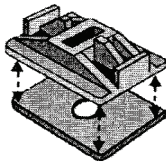


Set 3.

Place the louvre on the window making sure it is centred. Hold firmly in place (use masking tape to temporarily secure it if necessary) & mark the centre of each hole on the glass with a felt tip marker pen.

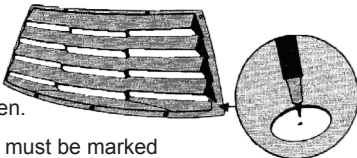

These holes must be marked accurately to avoid stains on the clips once the louvre is attached. After marking, remove the louvre. Attach the base clip to the glass one at a time by removing backing paper. Make sure the holes in the base clips line up exactly with the marks on the glass.

When in position, press firmly to the glass, leave clips for 24hr before attaching the louvre to allow adhesive to achieve maximum strength.

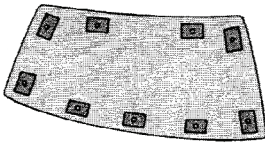


Set 4.

Push buttons through the louvre holes until they click (Replacement fitting kits are available).



Set 5.

Once the adhesive has achieved maximum strength, using firm pressure on the Phillips head screwdriver, turn each button a quarter turn clockwise to lock the louvre in place. To remove the louvre; turn the button a quarter turn anti-clockwise

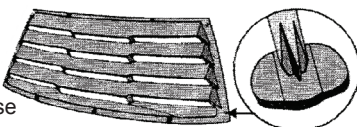

Fitting Requirements

Before you start you will need

- Phillips Head Screwdriver
- Felt Tip Marker Pen
- Glass/Window Cleaner
- Masking Tape (optional)
- Cleaning Cloths

Fitting Instructions

Warning!!

Read instructions carefully before commencing.
Don't attempt to fit in wet or humid conditions.


Set 1.

To obtain maximum adhesion, clean the glass with a glass cleaner and cleaning cloth.

With isopropyl alcohol prep:

- 1). Thoroughly clean the glass where the clips are to be located
- 2). Clean the underside & perimeter of the base clips.


Additionally it is highly recommended after the alcohol has evaporated, buff the cleaned area with a clean cloth. **Do not touch the prepared surface.**

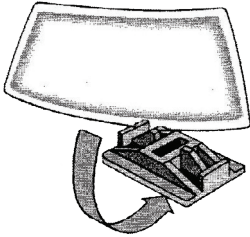

Set 2.


Leave backing paper on the side of the adhesive pads & attach them to the underside of the clip bases, taking care not to touch adhesive.

Rub backing paper firmly to ensure total adhesion.

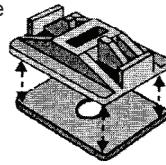


Set 3.

Place the louvre on the window making sure it is centred. Hold firmly in place (use masking tape to temporarily secure it if necessary) & mark the centre of each hole on the glass with a felt tip marker pen.

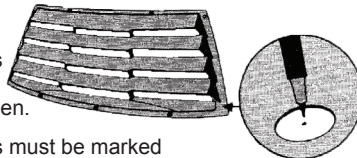

These holes must be marked accurately to avoid stains on the clips once the louvre is attached. After marking, remove the louvre. Attach the base clip to the glass one at a time by removing backing paper. Make sure the holes in the base clips line up exactly with the marks on the glass.

When in position, press firmly to the glass, leave clips for 24hr before attaching the louvre to allow adhesive to achieve maximum strength.

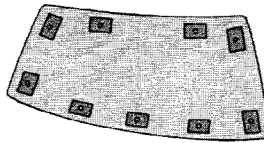


Set 4.

Push buttons through the louvre holes until they click (Replacement fitting kits are available).



Set 5.

Once the adhesive has achieved maximum strength, using firm pressure on the Phillips head screwdriver, turn each button a quarter turn clockwise to lock the louvre in place. To remove the louvre; turn the button a quarter turn anti-clockwise

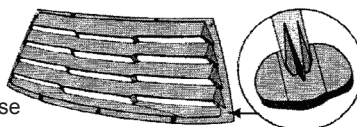

Fitting Requirements

Before you start you will need

- Phillips Head Screwdriver
- Felt Tip Marker Pen
- Glass/Window Cleaner
- Masking Tape (optional)
- Cleaning Cloths

Fitting Instructions

Warning!!

Read instructions carefully before commencing.
Don't attempt to fit in wet or humid conditions.


Set 1.

To obtain maximum adhesion, clean the glass with a glass cleaner and cleaning cloth.

With isopropyl alcohol prep:

- 1). Thoroughly clean the glass where the clips are to be located
- 2). Clean the underside & perimeter of the base clips.


Additionally it is highly recommended after the alcohol has evaporated, buff the cleaned area with a clean cloth. **Do not touch the prepared surface.**

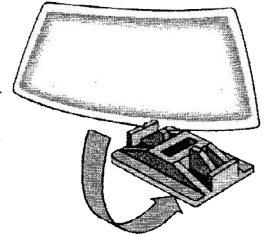

Set 2.


Leave backing paper on the side of the adhesive pads & attach them to the underside of the clip bases, taking care not to touch adhesive.

Rub backing paper firmly to ensure total adhesion.

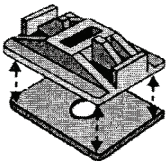


Set 3.

Place the louvre on the window making sure it is centred. Hold firmly in place (use masking tape to temporarily secure it if necessary) & mark the centre of each hole on the glass with a felt tip marker pen.

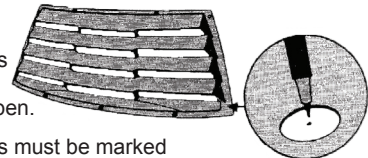

These holes must be marked accurately to avoid stains on the clips once the louvre is attached. After marking, remove the louvre. Attach the base clip to the glass one at a time by removing backing paper. Make sure the holes in the base clips line up exactly with the marks on the glass.

When in position, press firmly to the glass, leave clips for 24hr before attaching the louvre to allow adhesive to achieve maximum strength.

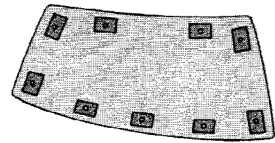

Set 4.

Push buttons through the louvre holes until they click (Replacement fitting kits are available).



Set 5.

Once the adhesive has achieved maximum strength, using firm pressure on the Phillips head screwdriver, turn each button a quarter turn clockwise to lock the louvre in place. To remove the louvre; turn the button a quarter turn anti-clockwise

