

# Toulouse Square Recessed

OUTDOOR  
WALL LIGHT

Product code M053

mondolux.com.au

**MONDOLUX™**

## Installation Manual



### Notes

- This fitting requires 220-240V AC/50Hz power input to the driver. Installation should be done by qualified electrician.
- Electrical Wiring and installation should always comply as per the local standards.
- It is recommended that all low voltage cables should be run in flexible conduit for extra protection. Where extra cable is required, please source and use the equivalent cable only.
- Wherever applicable - waterproof cable joints like junction boxes or heavy walled adhesive lined heat shrinks must be used, or warranty is void.
- Do not install any inductive loads such as exhaust fans or pond pumps etc. within the same lighting circuit of this fitting. Issues caused by such wirings are not covered under our warranty policy.
- Do not open or interchange any parts of this fitting or the warranty is void.
- If you have any questions about the installation of this product, please contact Mondolux at 1300 601 931.


### Care & Refinishing

Mondolux strongly recommends following cleaning procedures to maintain proper finish of the product.

- Do not use bleach or concentrated solvents under any circumstances.
- For Black or Grey finish: Wipe gently with a soft damp cloth or chamois. Do not use any abrasive compounds.

### Optional Accessories

- Toulouse step lights come with a non-dimmable integral 240V AC power supply with basis ON/OFF control only\*

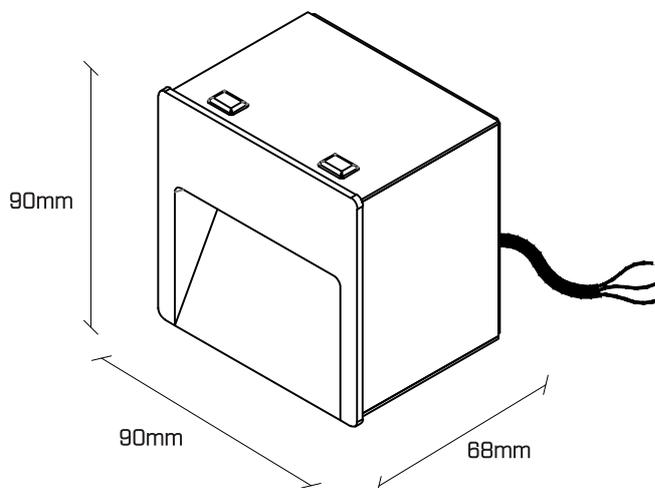

\*For specific accessory order details and installation guidelines, please contact Mondolux at 1300 601 931.

# Toulouse Square Recessed

OUTDOOR  
WALL LIGHT

Product code M053

mondolux.com.au

**MONDOLUX™**

## Installation Steps

1. Ensure the mains power is turned off.
2. Mark and drill the 2 holes in the wall with pre-wired position. See picture 1.
3. Open the recessed mounting box. Pay close attention to the orientation of the box to align with the main supply cable coming from the wall. See picture 2.
4. Secure the recessed box into the wall using suitable plastering or other methods. See picture 3
5. Pass the power supply cable through the gasket of the recessed mounting box. See picture 4.
6. Connect the wires on the supply side to the respective terminals of the driver using the adhesive lined heat shrink provided. See picture 4.
7. Don't forget to crimp these heat shrinks on both ends to ensure proper watertight connections. See picture 4.
8. Once securing the connections in this way, place the front panel into the recessed box in a aligned way. See picture 5
9. Installation is complete. Turn the mains on. See picture 6.

