

# T- Bar Lumo

PANEL

Product code MP02 MP23 MP24

mondolux.com.au

**MONDOLUX™**

## Installation Manual




CE RoHS




### Notes

- This fitting requires 100-240V AC/50HZ power input to the driver.
- Do not interchange any parts of this fitting.
- Do not touch fitting when in use.
- Do not cover with any form of heat proof material.
- If you have any questions about the installation of this product, please contact Mondolux.

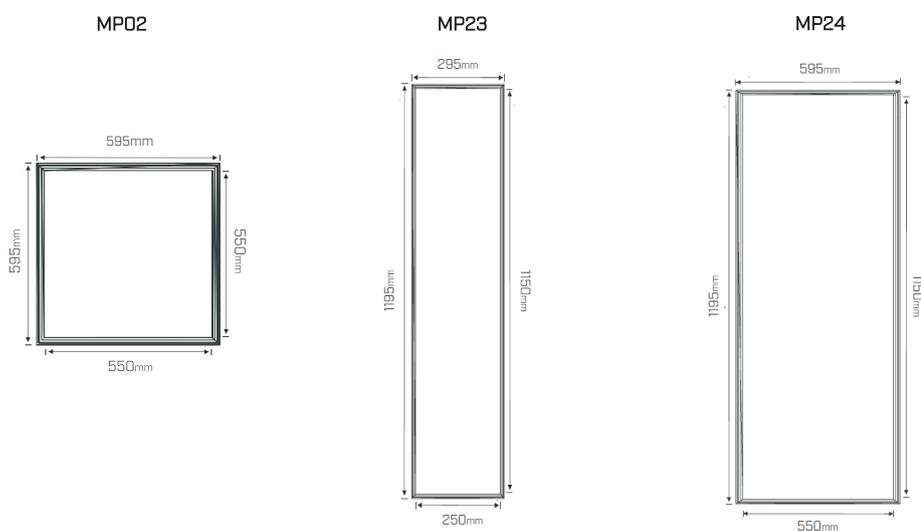

### Installation Steps - Recessed

1. Ensure the mains power is turned off.
2. Cut required holes in ceiling or remove the plaster board for existing ceiling. Ensure minimum space requirements between fitting and driver. See pictures 1a and 1b.
3. Insert and fix the recessed plaster frame into the cut-out. See pictures 2a and 2b.
4. Mount the fixture on to the recessed plaster frame and secure it. See picture 3.
5. Connect flex and plug to the power supply.
6. Installation is complete. See picture 4.

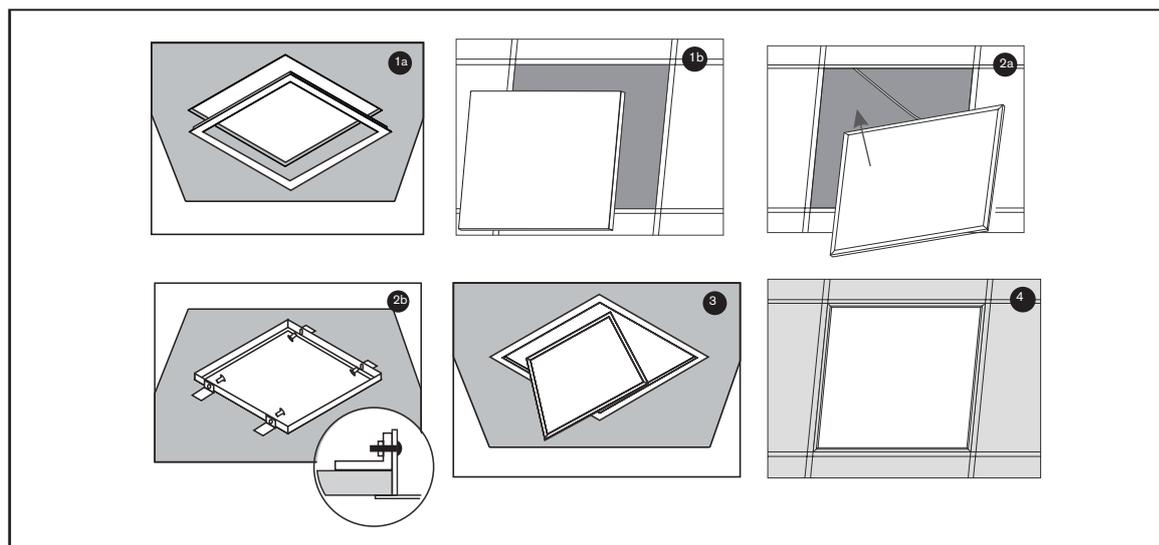

# T- Bar Lumo

PANEL


Product code MP02 MP23 MP24

mondolux.com.au

**MONDO**LUX™

## Installation Steps - Surface Mounted

1. Ensure the mains power is turned off.
2. Assemble 3 sides of the surface mounted frame and fix it to the ceiling. Ensure minimum space requirements between fitting and driver. See pictures 2a and 2b.
3. Slide the fixture from the 4th side into the surface mounted frame. See pictures 3a and 3b.
4. Screw and fix the 4th side of the surface mounted frame to secure the panel. See picture 4.
5. Connect flex and plug to the power supply.
6. Installation is complete. See picture 5.

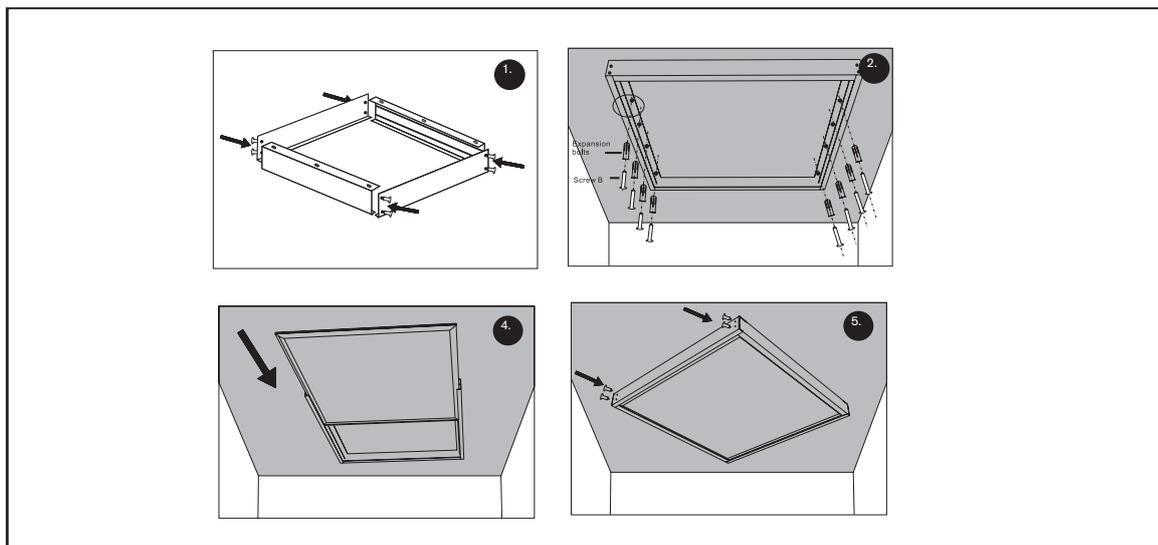

## Installation Steps - Suspended

1. Ensure the mains power is turned off.
2. Screw one end of the suspension cable into the ceiling.
3. Adjust and fix the suspension cable at desired length.
4. Fix the other end of the suspension cable on to the panel. See pictures 1a and 1b.
5. Repeat this process for all the sides of the panel.
6. Connect flex and plug to the power supply.
7. Installation is complete. See picture 2.

