


HOLLAND BENCH

DESIGNED BY METRICA

ASSEMBLY INSTRUCTION

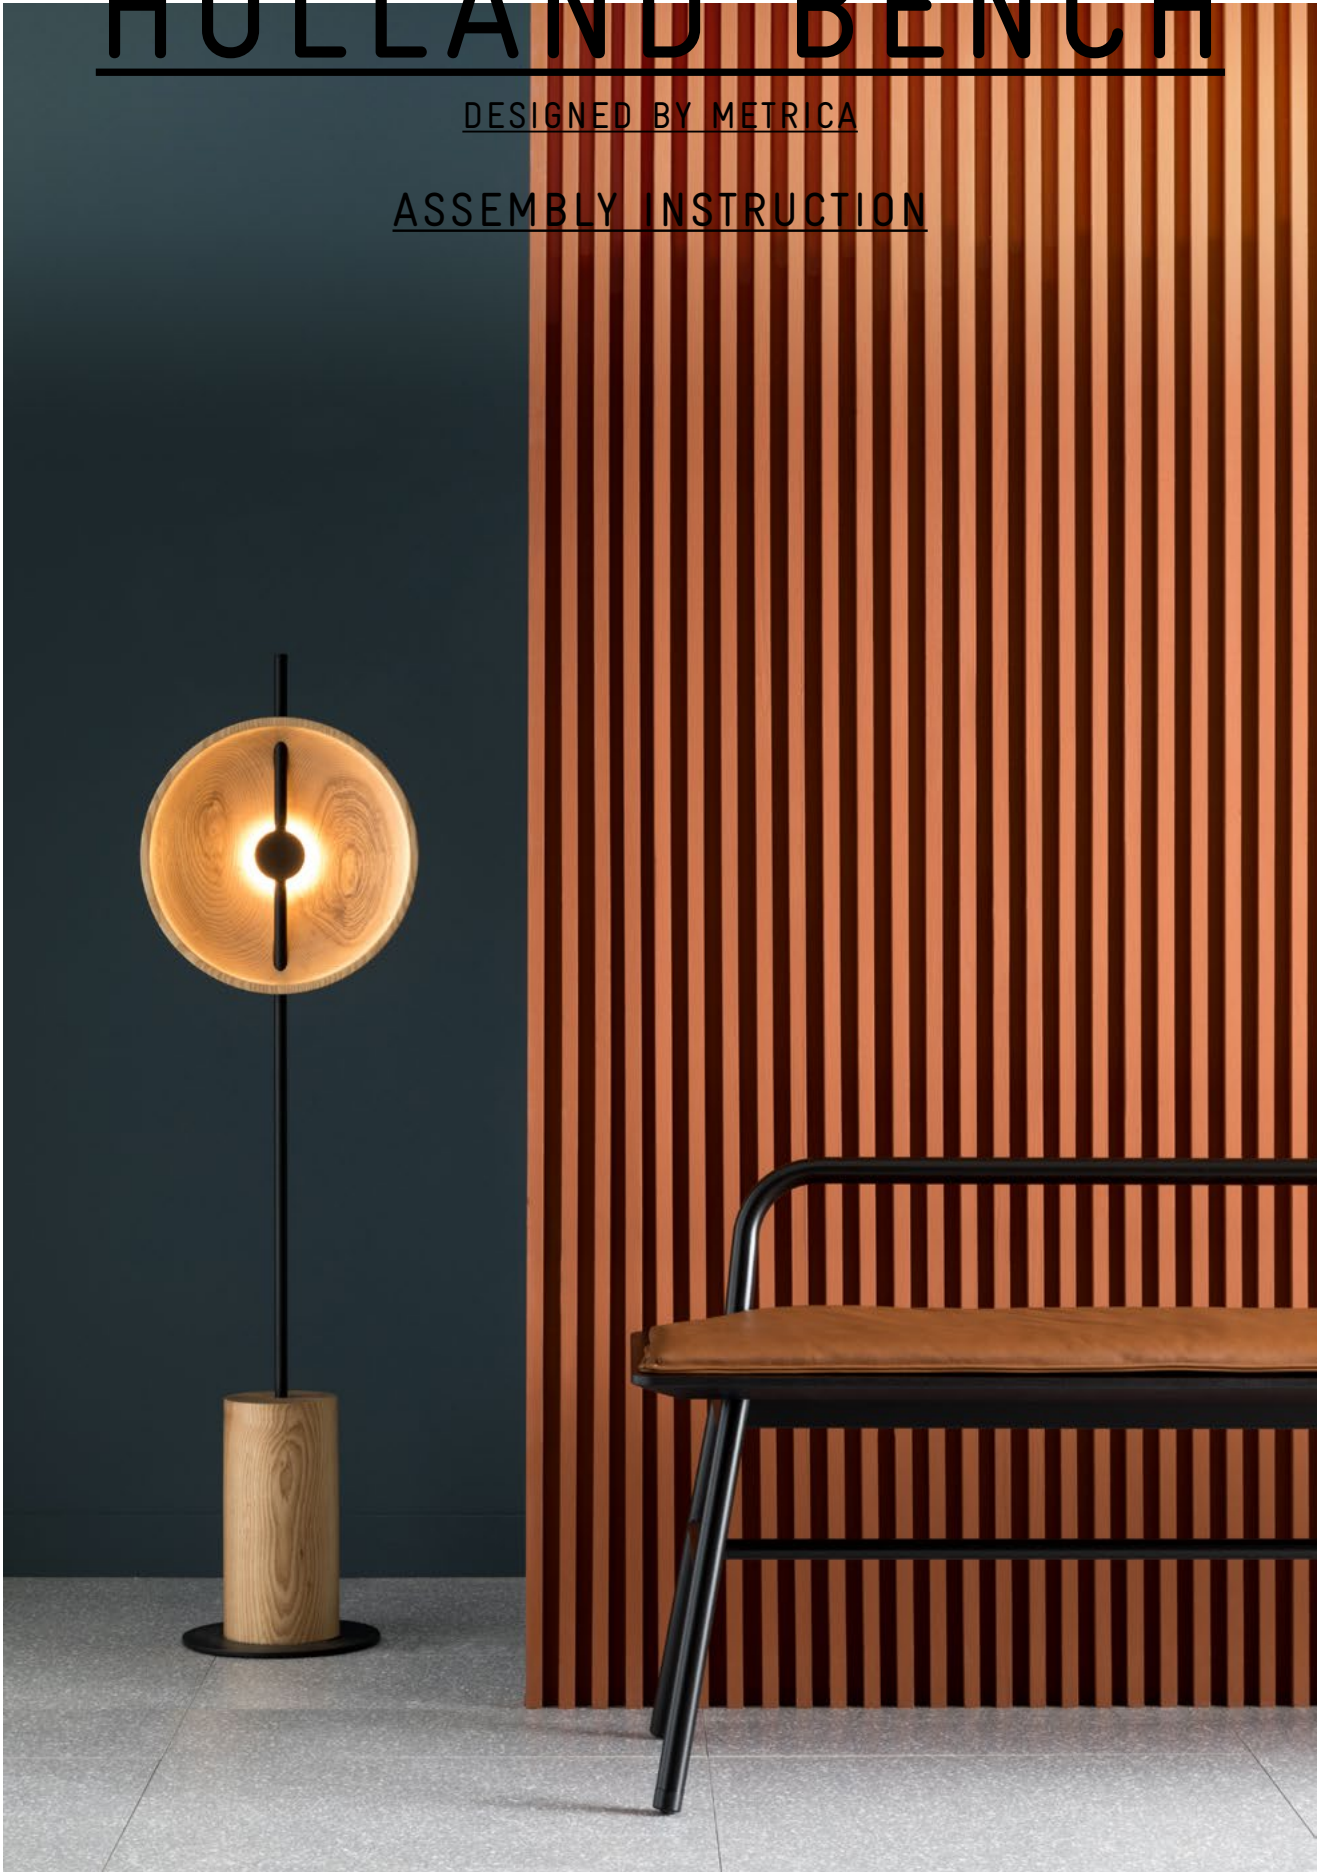

PACKAGING: BENCH WITHOUT BACKREST

- HARD CARDBOARD BOX WITH POLYSTYRENE ON ALL SIDES: WOODEN TOP PROTECTED BY BLUE MATERIAL
- EXTRA HARD CARDBOARD BOX WITH ASSEMBLED METAL BASE AND A BAG WITH 8 FELT GLIDERS, 6 SCREWS, 6 WASHERS, 1 ALLEN KEY
- OPTIONAL: CARDBOARD BOX WITH SOFT SEAT CUSHION IN A THIN PROTECTIVE BAG

PACKAGING: BENCH WITH BACKREST

- HARD CARDBOARD BOX WITH POLYSTYRENE ON ALL SIDES: WOODEN TOP WITH BACKREST HOLES PROTECTED BY BLUE MATERIAL
 - EXTRA HARD CARDBOARD BOX WITH ASSEMBLED METAL BASE AND A BAG WITH 8 FELT GLIDERS, 6 SCREWS, 6 WASHERS, 1 ALLEN KEY
 - CARDBOARD BOX WITH BACKREST TUBE AND A BAG WITH 2 METAL PLATES, 2 LONG SCREWS, 12 SHORT SCREWS, 1 ALLEN KEY
 - OPTIONAL: CARDBOARD BOX WITH SOFT SEAT CUSHION IN A THIN PROTECTIVE BAG
-

IMPORTANT NOTE

- ENSURE THAT ALL STEPS ARE FOLLOWED IN THE CORRECT ORDER AND THAT NO STEP IS LEFT OUT.
 - A MINIMUM OF TWO PEOPLE ARE REQUIRED FOR ASSEMBLY.
 - TO PREVENT ANY DAMAGE OF THE PRODUCT, DO NOT USE A CUTTER KNIFE/ SHARP OBJECT TO OPEN THE BOXES.
-

ASSEMBLY INSTRUCTIONS: BENCH WITHOUT BACKREST

1. REMOVE THE BASE FROM ITS PACKAGING
2. POSITION THE FELT GLIDERS AS SHOWN IN THE DESIGN, MAKING SURE THAT THE GLIDERS DO NOT COVER ANY HOLE
3. REMOVE THE WOODEN TOP FROM ITS PACKAGING AND LAY IT ON A BLANKET/ SOFT AND CLEAN SURFACE WHICH WILL NOT SCRATCH THE SURFACE WITH THE UNDERSIDE FACING UP
4. PLACE THE METAL BASE ONTO THE STRUCTURE
5. NOW INSERT THE SCREWS AND WASHERS FIXING THE STRUCTURE ONTO THE TOP USING THE PROVIDED ALLEN KEY
6. TIGHTEN ALL THE SCREWS AND PLACE THE BENCH ON ITS LEGS
7. OPTIONAL: REMOVE THE SOFT SEAT CUSHION FROM ITS PACKAGING AND PLACE IT ONTO THE WOODEN TOP

ASSEMBLY INSTRUCTIONS: BENCH WITH BACKREST

1. REMOVE THE BASE FROM ITS PACKAGING
2. ENSURE THAT THE LOGO POSITIONED IN THE MIDDLE OF THE LONG SIDE OF THE BASE IS POSITIONED AT THE BACK
3. POSITION THE FELT GLIDERS AS SHOWN IN THE DESIGN, MAKING SURE THAT THE GLIDERS DO NOT COVER ANY HOLE
4. REMOVE THE WOODEN TOP FROM ITS PACKAGING AND LAY IT ON A BLANKET/ SOFT AND CLEAN SURFACE WHICH WILL NOT SCRATCH THE SURFACE WITH THE UNDERSIDE FACING UP
5. REMOVE THE BACKREST TUBE WITH ITS HARDWARE BAG FROM ITS PACKAGING
6. POSITION THE METAL PLATE INSIDE THE HARDWARE BAG OF THE BACKREST TUBE INTO THE CUT-OUTS OF THE WOODEN TOP ENSURING THAT ALL HOLES MATCH
7. FIX THE METAL PLATE WITH THE 6 SHORT SCREWS ONTO THE WOODEN TOP WITHOUT TIGHTENING
8. TURN THE WOODEN TOP AROUND AND INSERT THE BACKREST TUBE CAREFULLY, ENSURING THAT THE ANGLE OF THE BACKREST FACES OUT
9. INSERT THE LONG CENTRAL SCREW WHICH FIXES THE BACKREST TUBE ONTO THE WOODEN SEAT AND TIGHTEN
10. PLACE THE ASSEMBLED SEAT ONTO THE STRUCTURE, PAY ATTENTION THAT THE BACKREST TUBE IS ALIGNED WITH THE LONG SIDE OF THE STRUCTURE WITH THE METAL LOGO
11. NOW INSERT THE SCREWS AND WASHERS FIXING THE STRUCTURE ONTO THE TOP USING THE PROVIDED ALLEN KEY
12. TIGHTEN ALL THE SCREWS
13. OPTIONAL: REMOVE THE SOFT SEAT CUSHION FROM ITS PACKAGING AND PLACE IT ONTO THE WOODEN TOP