





# Literature Sorter

## Assembly Instructions


1. Open outer and fold in end flaps.

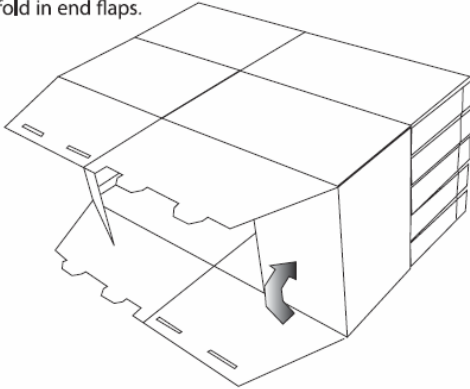


2. Interlock base flaps then push them back.

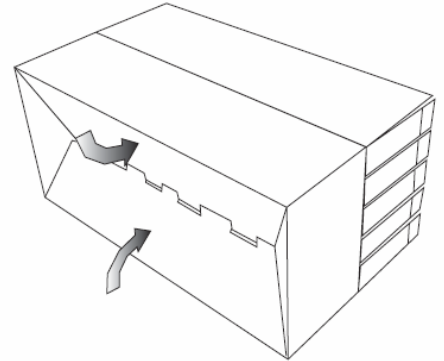

3. Assemble partitions, fold in long front flaps, then insert partitions.

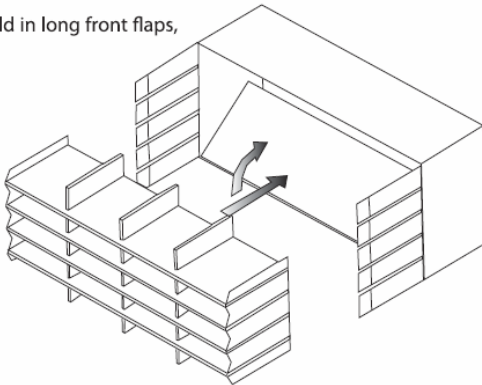

4. Complete unit.

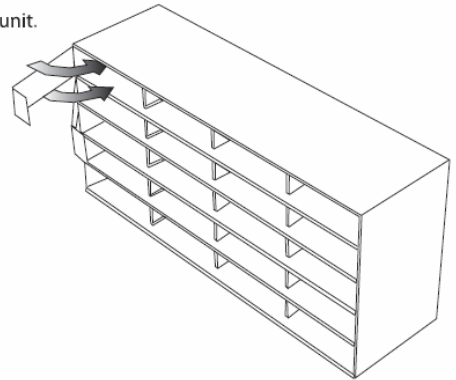

**Ref. No. 80035**

Made in Australia

Distributed by ACCO Australia

[www.marbig.com](http://www.marbig.com)