


# J.BURROWS

.....

## Assembly Instructions

EPSILON PU VISITOR CHAIR  
JBEPSILVBK

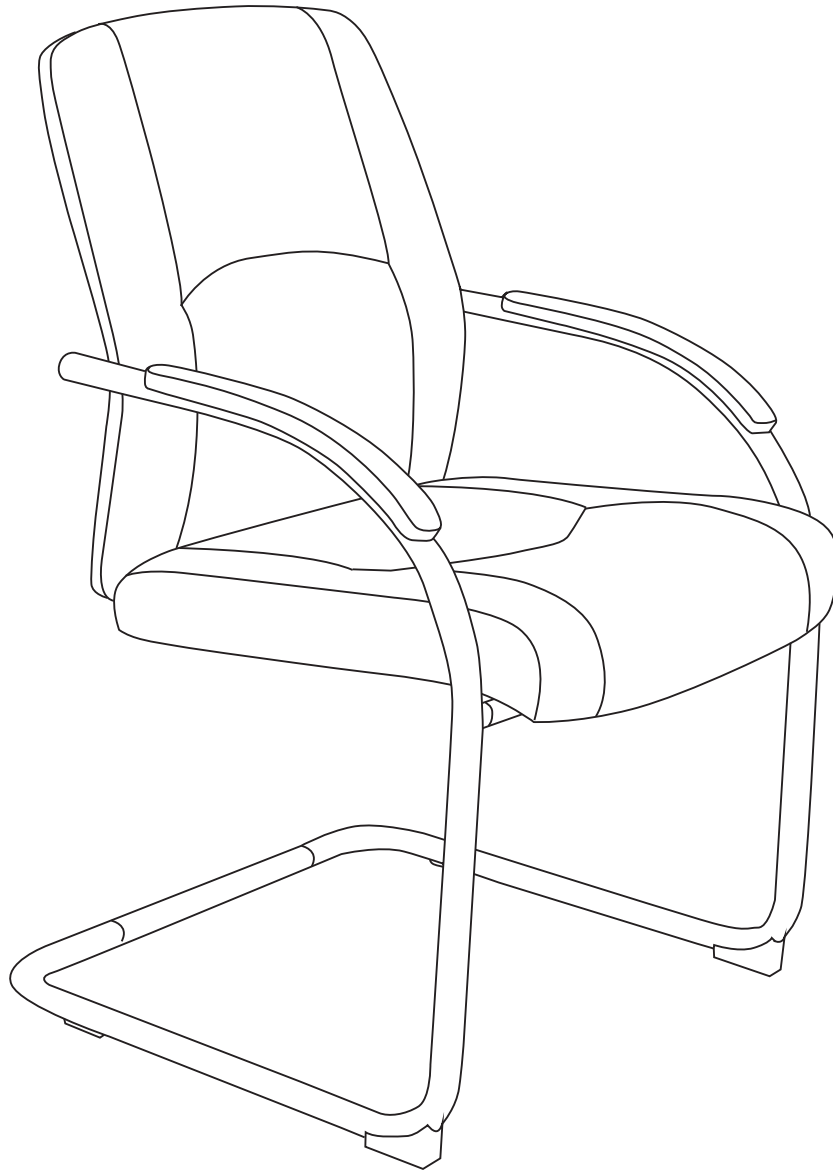


This chair has a load rating of 120kg

# Important


Estimated Assembly Time: 30min

Assemble Item On A Clean Flat Surface

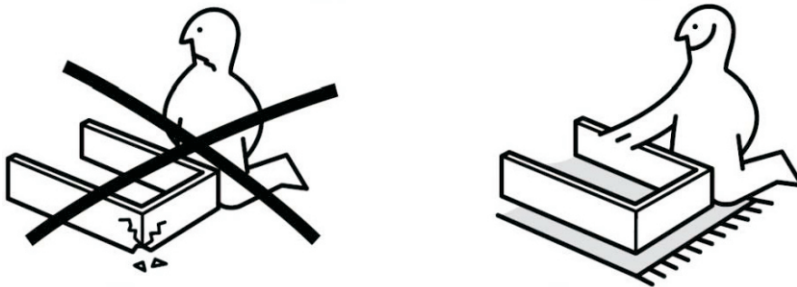


## PART LIST

A

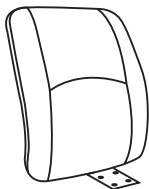


X1

B




X1

C (L/R)

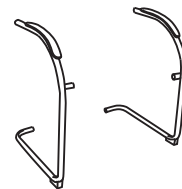


X1

D



X1

E



X1


## HARDWARE LIST

F(6x14mm)



x2

G(6x40mm)



x2

H(6x25mm)



x4

I(6x20mm)



x2

J(6x18mm)




x4

K(5mm)



X1

L(6mm)



X1

Please check you have all hardware components before assembling.


If you are missing any hardware components from the [Hardware List](#) please contact My Zone on

Tel: (03) 9310 3011 or Email: [hardware@myzone.net.au](mailto:hardware@myzone.net.au)

Please ensure you have the name of the item, store purchased from, hardware part required and quantity.


Please retain your receipt to validate warranty. Enjoy your new purchase!

## Step 1

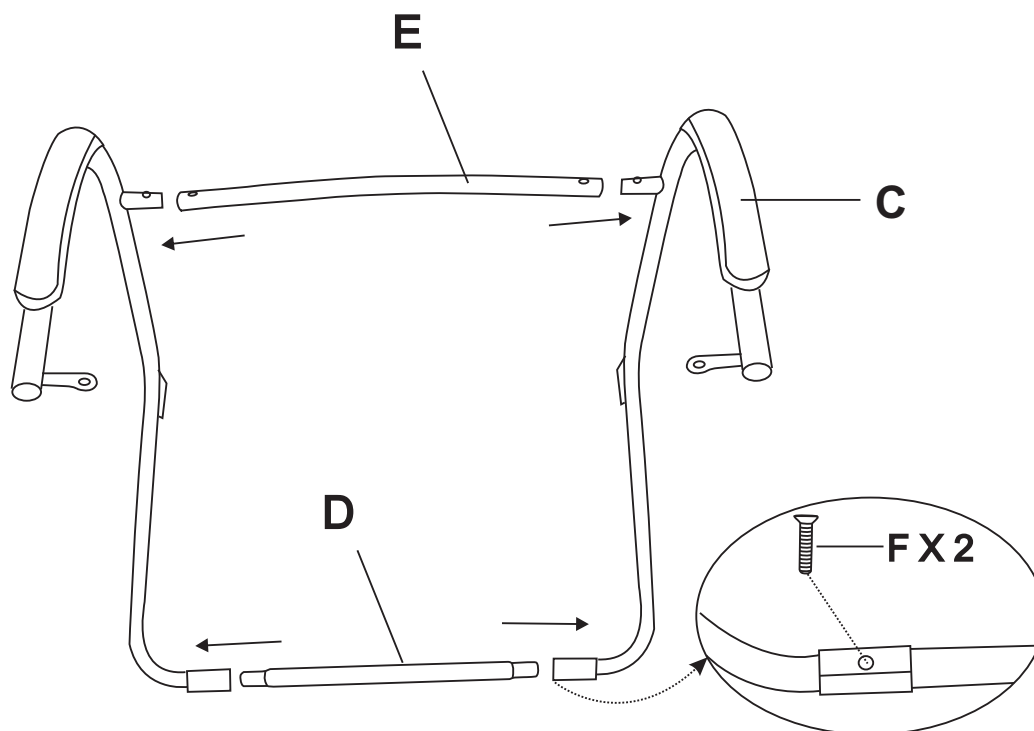


Note: Inset the rail (D) and the rail (E) into frame (C), put the screws (F) into the hole.

## Step 2

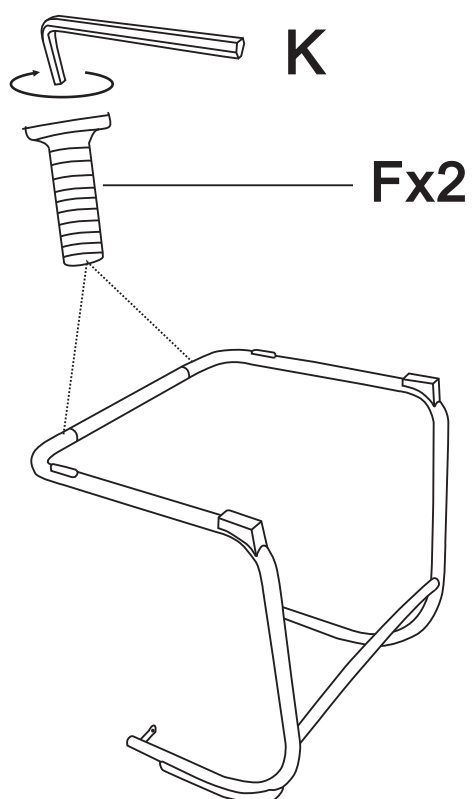


Note: Use allen wrench (K) to tighten the screws (F).

## Step 3

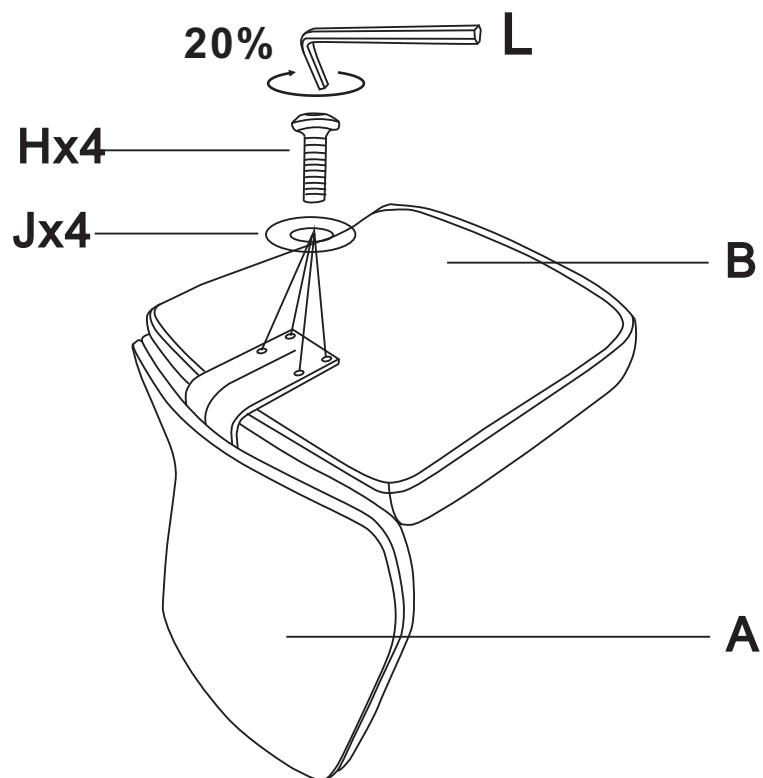


Note: Attach back support (A) to the seat cushion (B) using screws(H) and flat washers (J). Gently tighten screws with allen wrench (L).

## Step 4

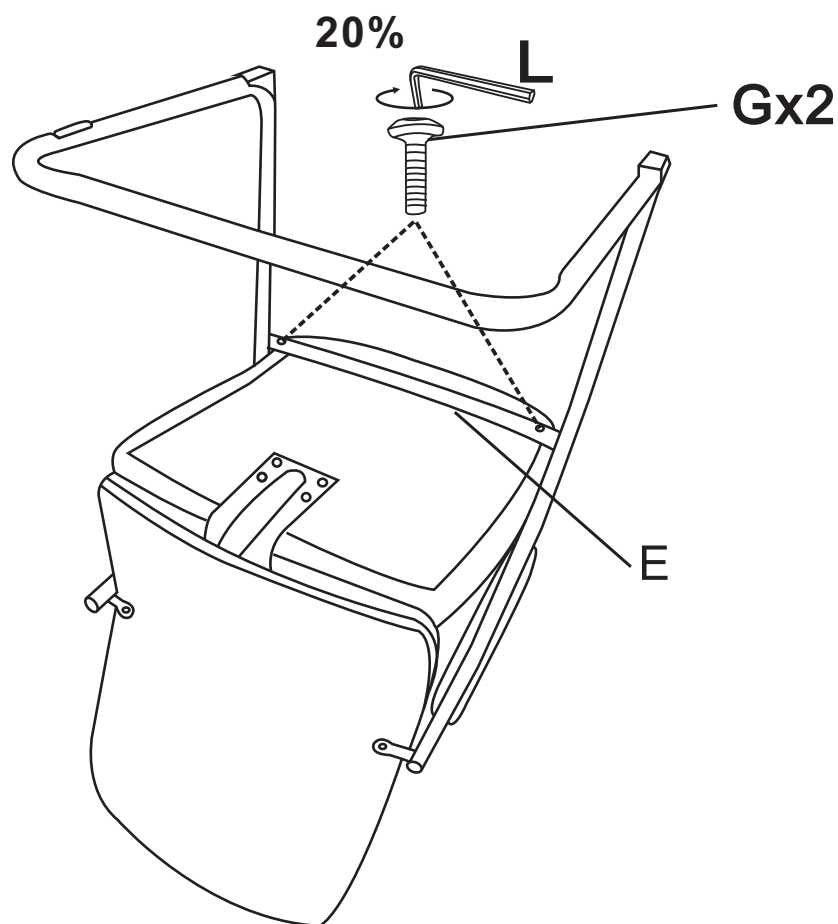


Note: Attach the rail (E) to the seat cushion (B) using screws (G). Gently tighten screws with allen wrench (L).

## Step 5

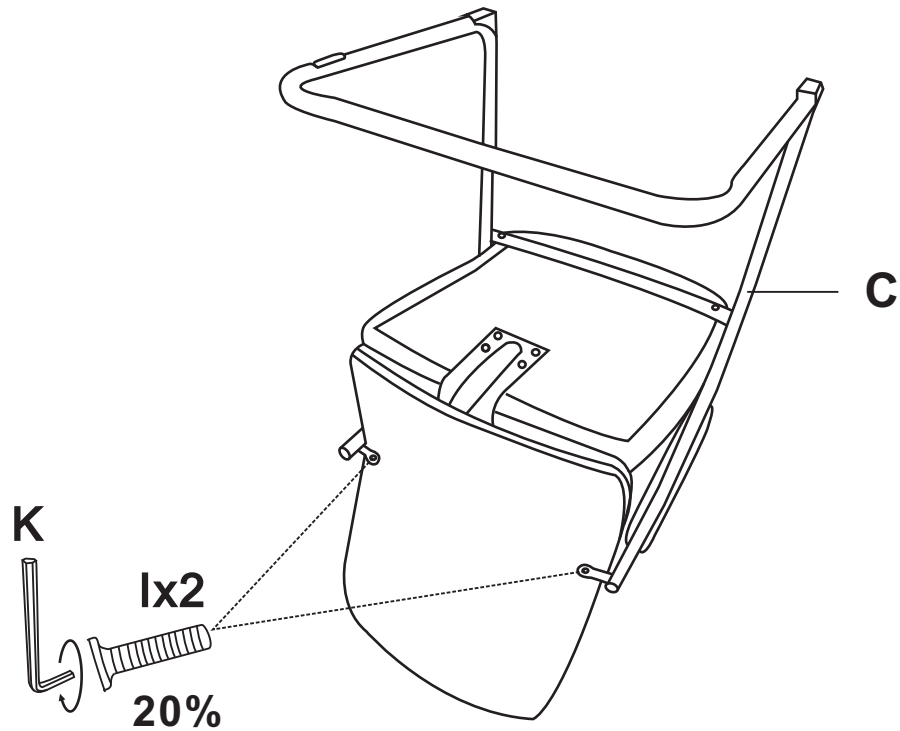

Note: Attach the frame (C) to the back cushion (A) using screws(I) .Gently tighten screws with allen wrench(K).

## Step 6

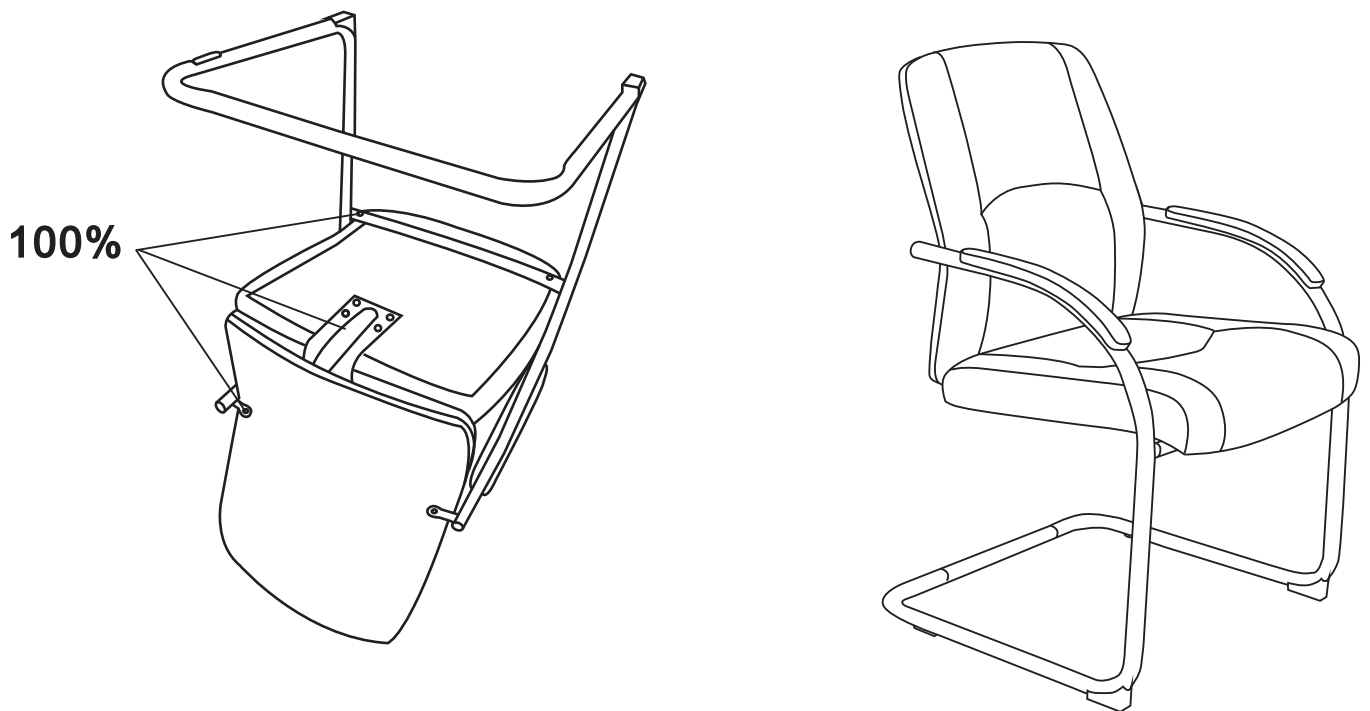

Note: Fully tighten all screws.

Your Epsilon PU Vistor Chair is now complete and ready for use.  
IMPORTANT NOTE: Periodically check and re-tighten screws.