


# HYSCREEN™ DESK GUARD

Modular design for your workplace to keep you safer from airborne droplets


This kit contains:




8 x Clips



4 x Brackets

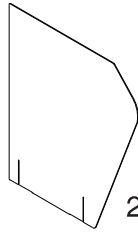

2 x Dividers

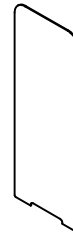


2 x 30cm  
Screens




1. Clear space for the screen on the desk & wipe down the surface.

2. Gently slide the brackets into the slots on the base of the divider, ensuring the foot faces inwards.

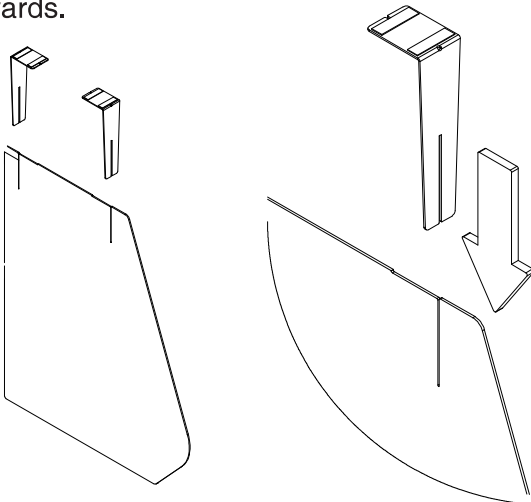


3. Test fit the screen in location without fixing it down.  
Maximum protection is achieved when the corner of the panel is positioned on the edge of the desk as shown.

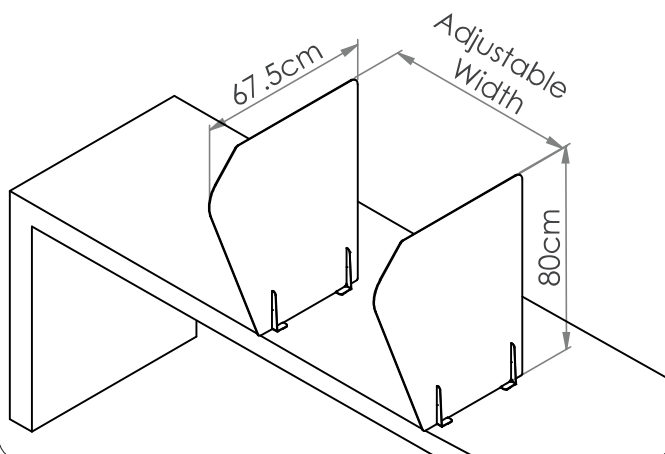


In order to avoid any damage to the desktop please ensure the feet are removed gently & with care. Mills Styrox Pty Ltd. T/A HyScreen do not accept any liability for damage caused during installation & removal.

Australian Registered design numbers: 202012033, 202012433, 202012434 & 202012435.

4. Peel off the protective film from both sides of the panels & the red backing tape on the feet.

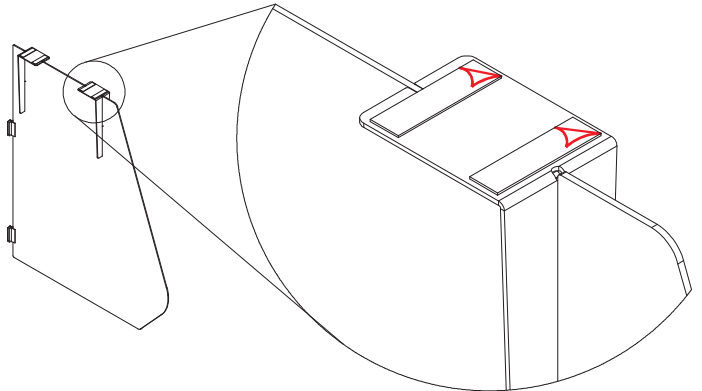

5. Add clips to join dividers if extra panels are being added.

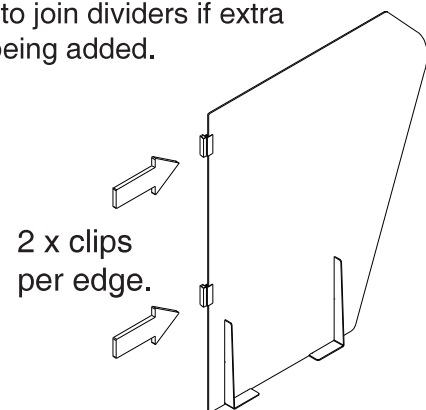

6. Carefully lower divider into position while holding the brackets. Push down firmly on the base of the brackets.

7. Repeat for extra dividers or spine panels, clipping them to each other as you go

8. Use 30cm Screens for deeper desks where required.

## REMOVAL:

1. Pull screen upwards away from the brackets
2. Gently pull brackets away from surface on an angle.
3. Any residue can be removed with a damp cloth