

J.BURROWS



ASSEMBLY INSTRUCTIONS

Heavy Lifting
Assistance Required




This installation
requires at least
two people.



NOTICE

* Do not use permanent marker.

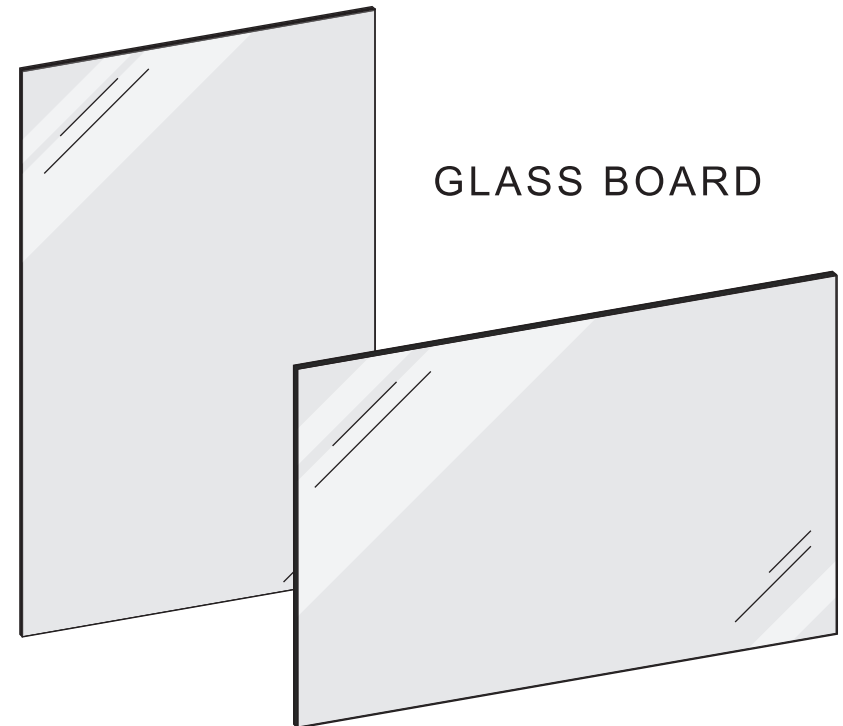
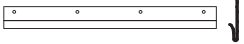




These assembly instructions are suitable for product codes:
JBB90120WH (90X120cm); JBB90120BK(90X120cm)

www.officeworks.com.au



TOOLS NEEDED:

Drill, Hammer, Pencil, Phillips Head Screwdriver, Tape Measure

PART LIST & Qty		
Applicable Product Size (mm)	[1] Board 	[2] J Rails 
900x1200	1 Pc	885mm/2 Pcs

HARDWARE LIST & Qty		
Applicable Product Size (mm)	[A] Screw 	[B] Plastic Anchor 
900x1200	8 Pcs	8 Pcs

STEP 5

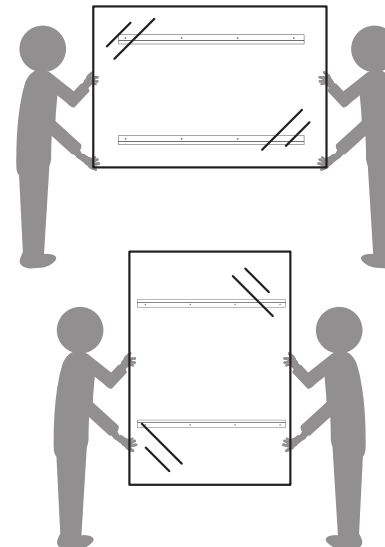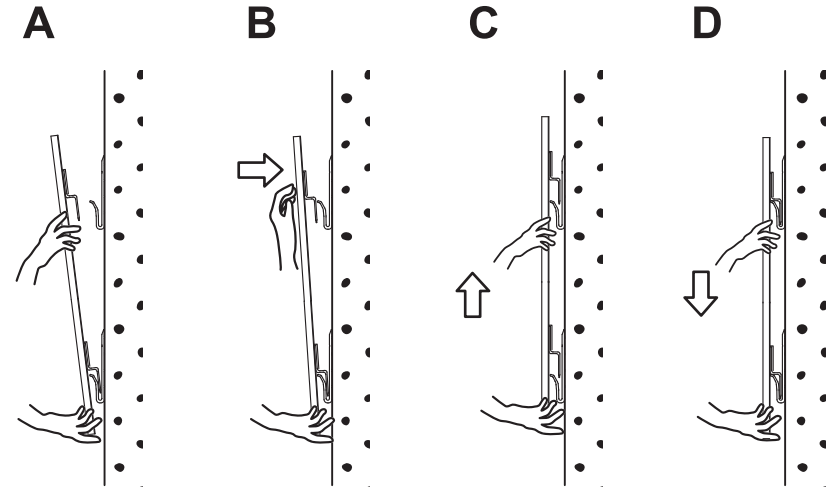

Hang the board on the 2 J Rails [2].

Tips

A: Hang lower brackets into lower J rail. Ensure all lower brackets are into J rail.


B: Push board against the wall.

C: Lift board up slightly.

D: Install upper brackets into upper J rail.

E: 900x1200 can be mounted either horizontally or vertically.

STEP 2

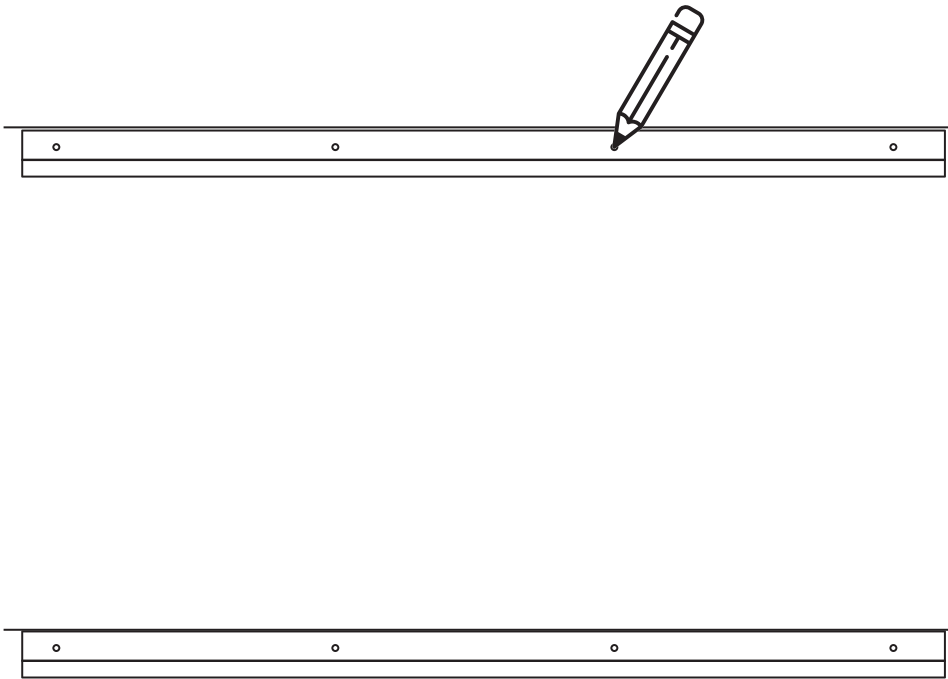


Align the J Rails [2] under each line. Using the J Rails [2] as a template, mark the hole positions for each rail using a pencil.

STEP 3



Drill 6mm diameter holes on each of the marked positions on the wall. Then hammer a Plastic anchor [B] into each hole.


STEP 4

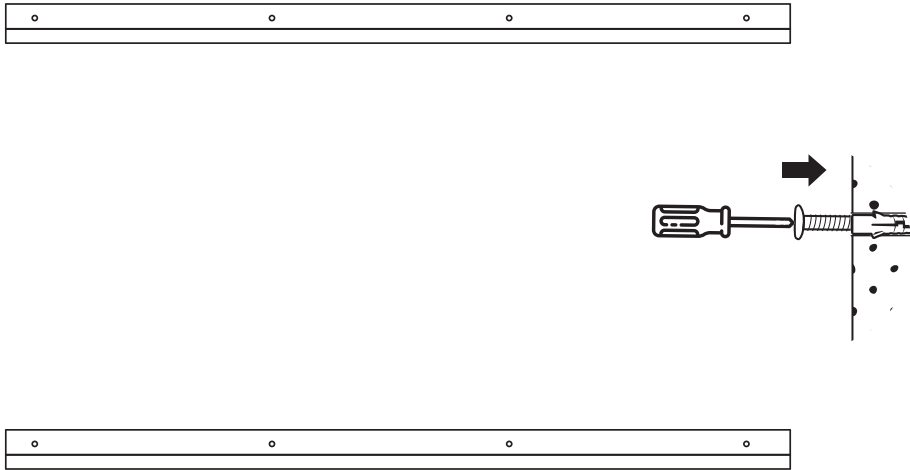

Use total 8pcs of screws for 90x120cm board.

Mount the J Rails [2] to the wall using the Screws [A].

STEP 1

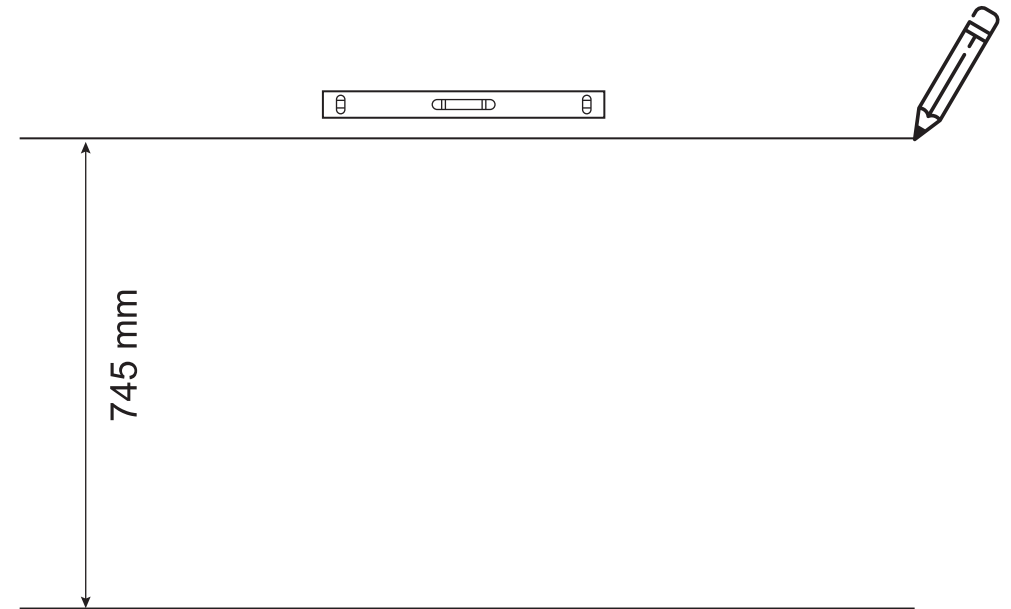

Draw 2 parallel lines the same length as the J Rails [2] at the desired height. Keep the distance between the 2 lines at 745mm for either horizontal or vertical mounting.