


J.BURROWS

• • • • •

Assembly Instructions


MATRIX 4P WKSTN 2800X1400 3CTN

JBMA4PBBWS

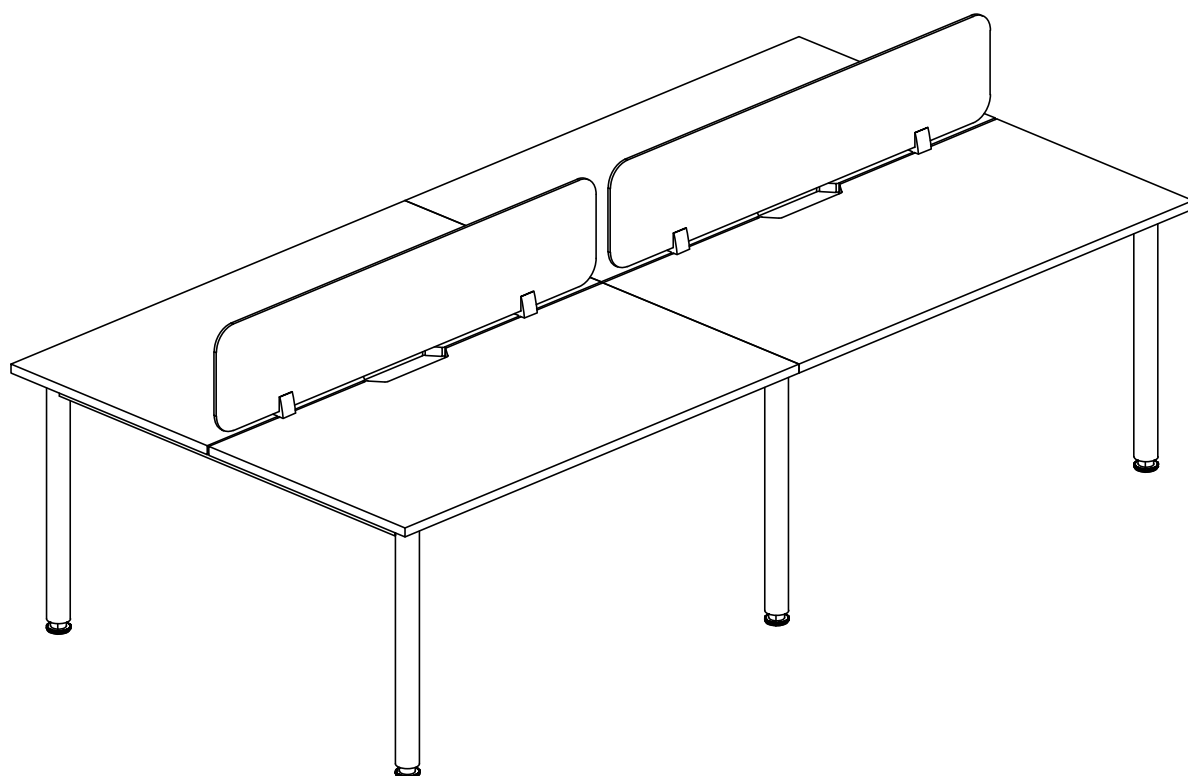

Important

Estimated Assemble Time:75min

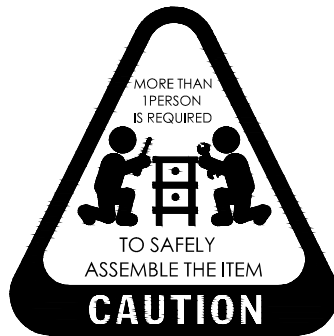

MORE THAN 1 PERSON
IS REQUIRED TO SAFELY
ASSEMBLE THE ITEM




HOTLINE



ASSEMBLE ON A CLEAN,
FLAT SURFACE

Tools Required For Assembly

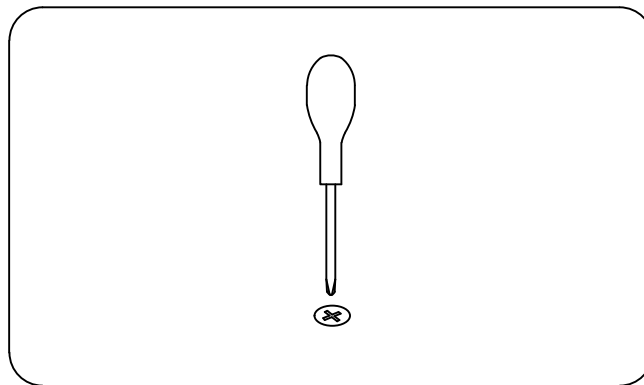

Please check you have all hardware components before assembling.


If you are missing any hardware components from the Hardware List please contact My Zone on Tel:(03)9310 3011 or Email:hardware@myzone.net.au

Please ensure you have the name of the item,store purchased from,hardware part required and quantity

If you are missing any panels from the Panel List Please contact your store of purchase.

Please retain your receipt to validate warranty.Enjoy your new purchase!

Part List

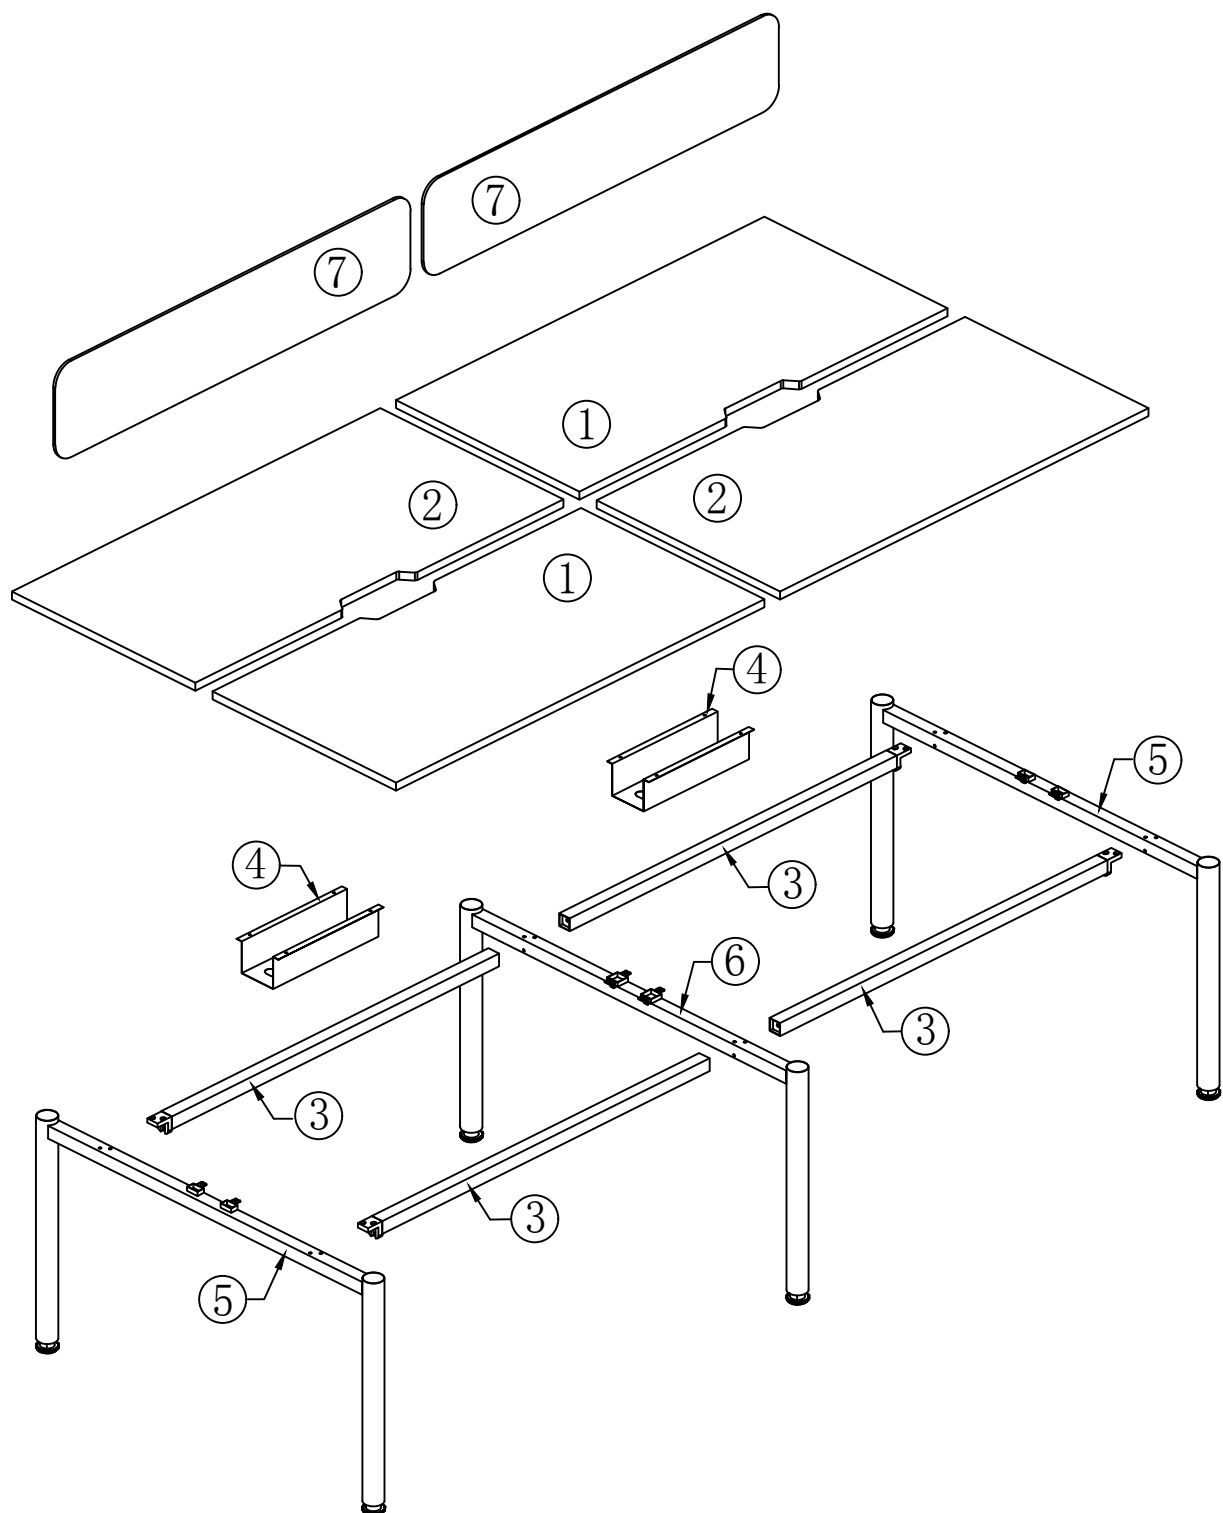

Hardware List

A




M8x30mm
x4pcs

B



M6x20mm
x20pcs

C




M6x16mm
x32pcs

D



M4x16mm
x16pcs

E




M8
x1pc

F



M6
x1pc


G



M6
x1pc

H

H1




H2



M6x20mm


Bracket set
x4sets

I

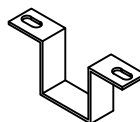

x8pcs


J

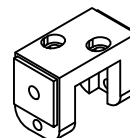


x2pcs

Step 1


2X

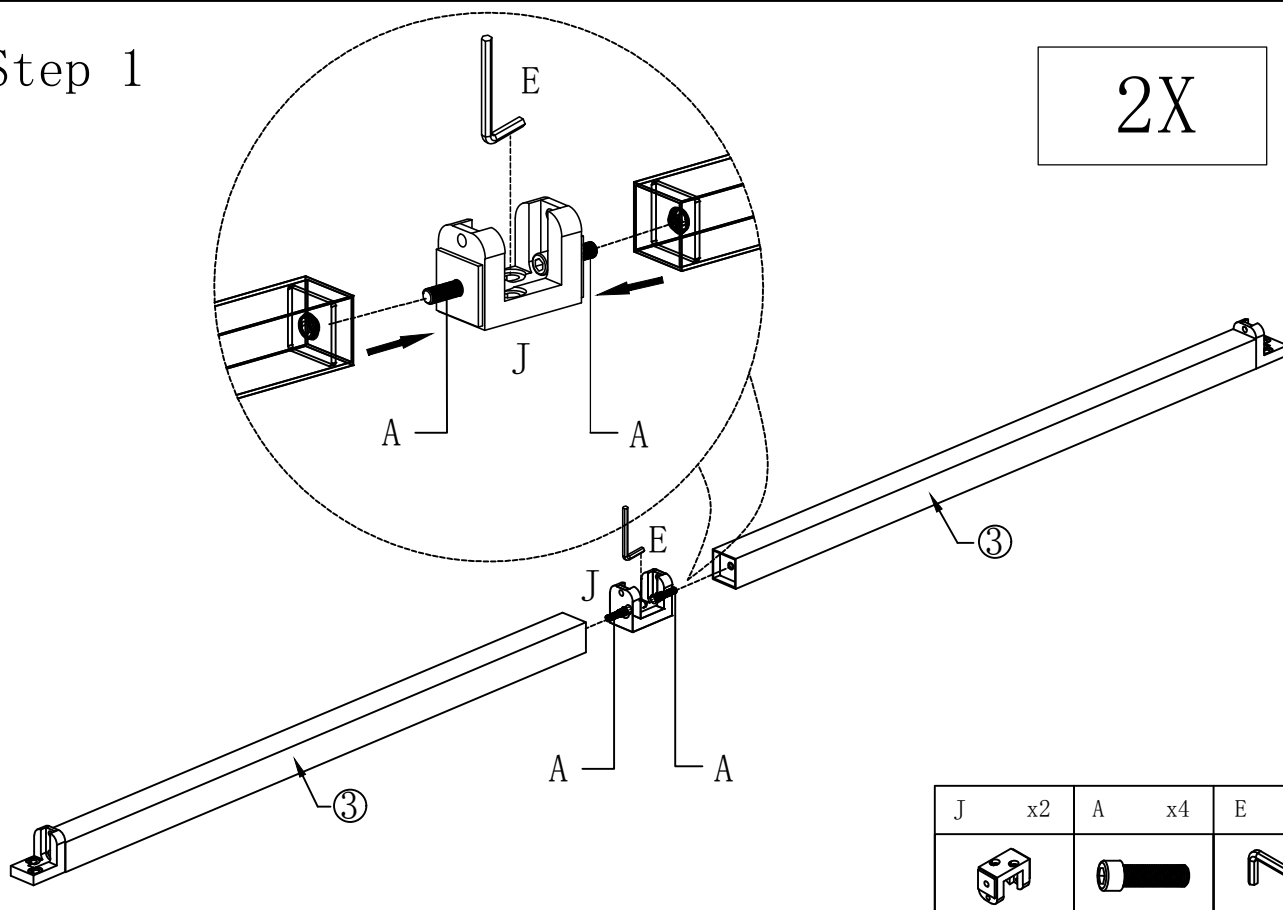

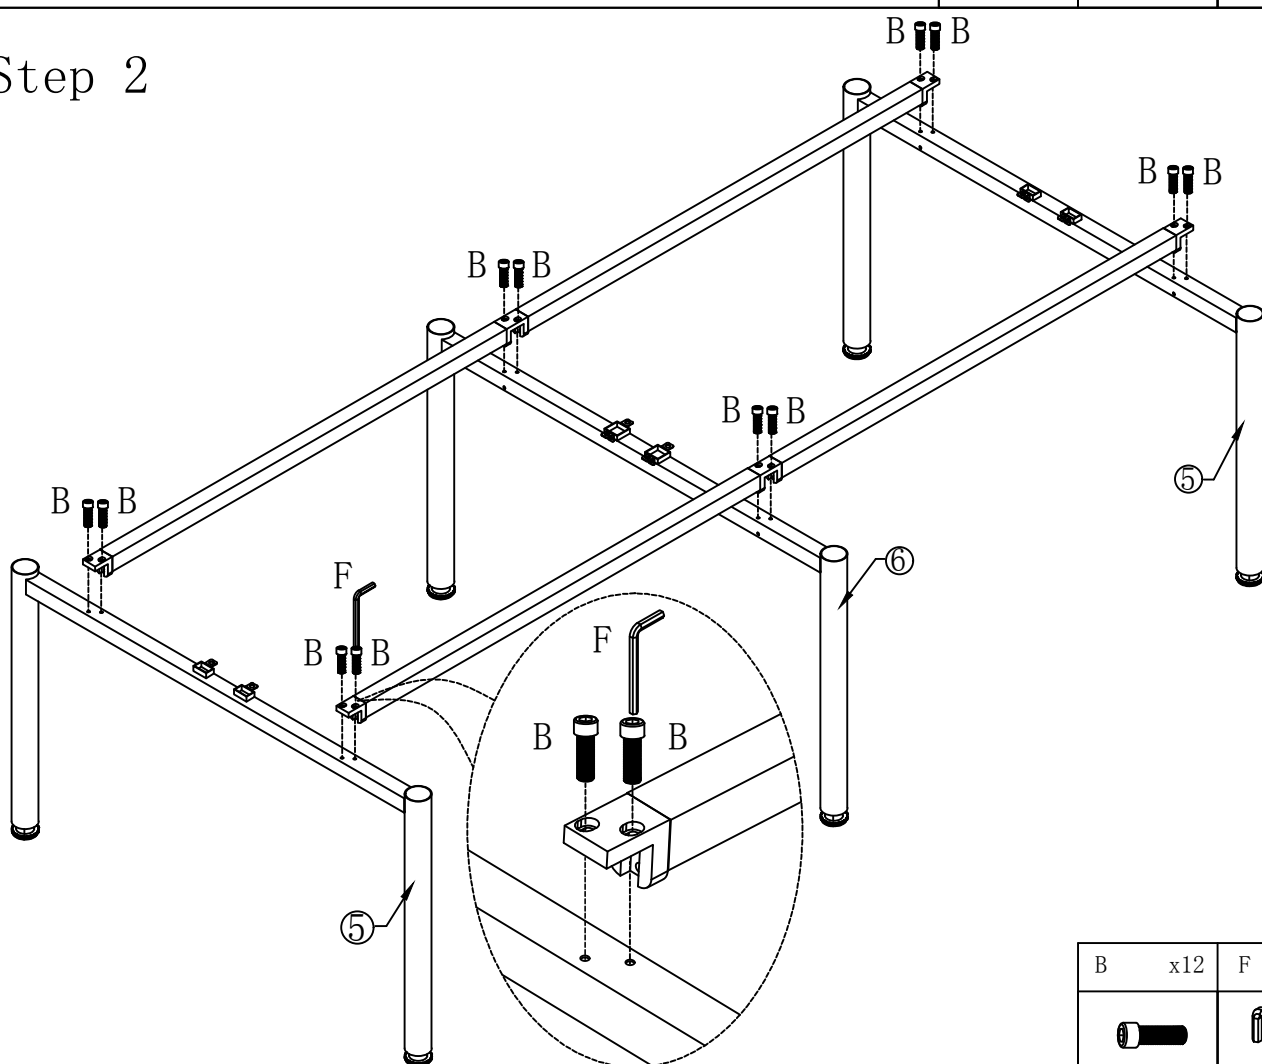

Step 2

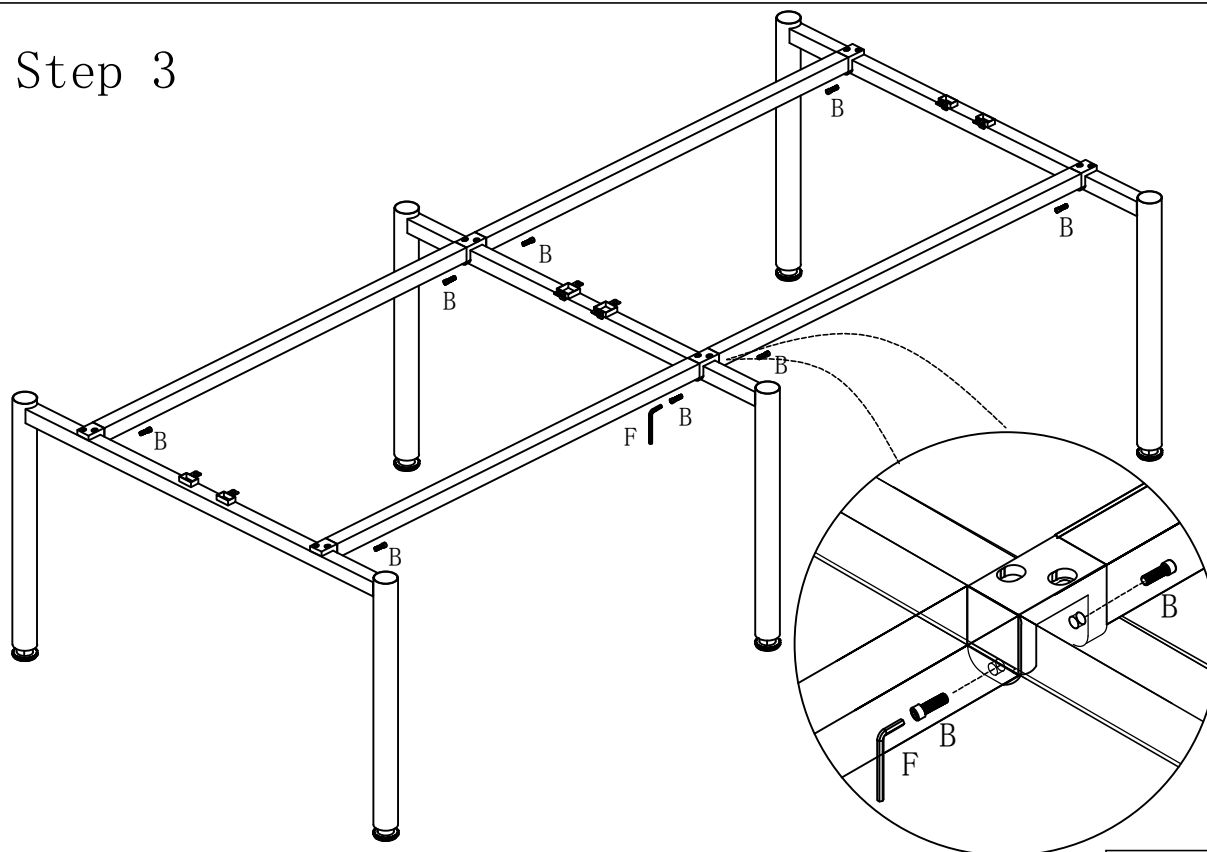






Step 3




B	x8	F	x1
			

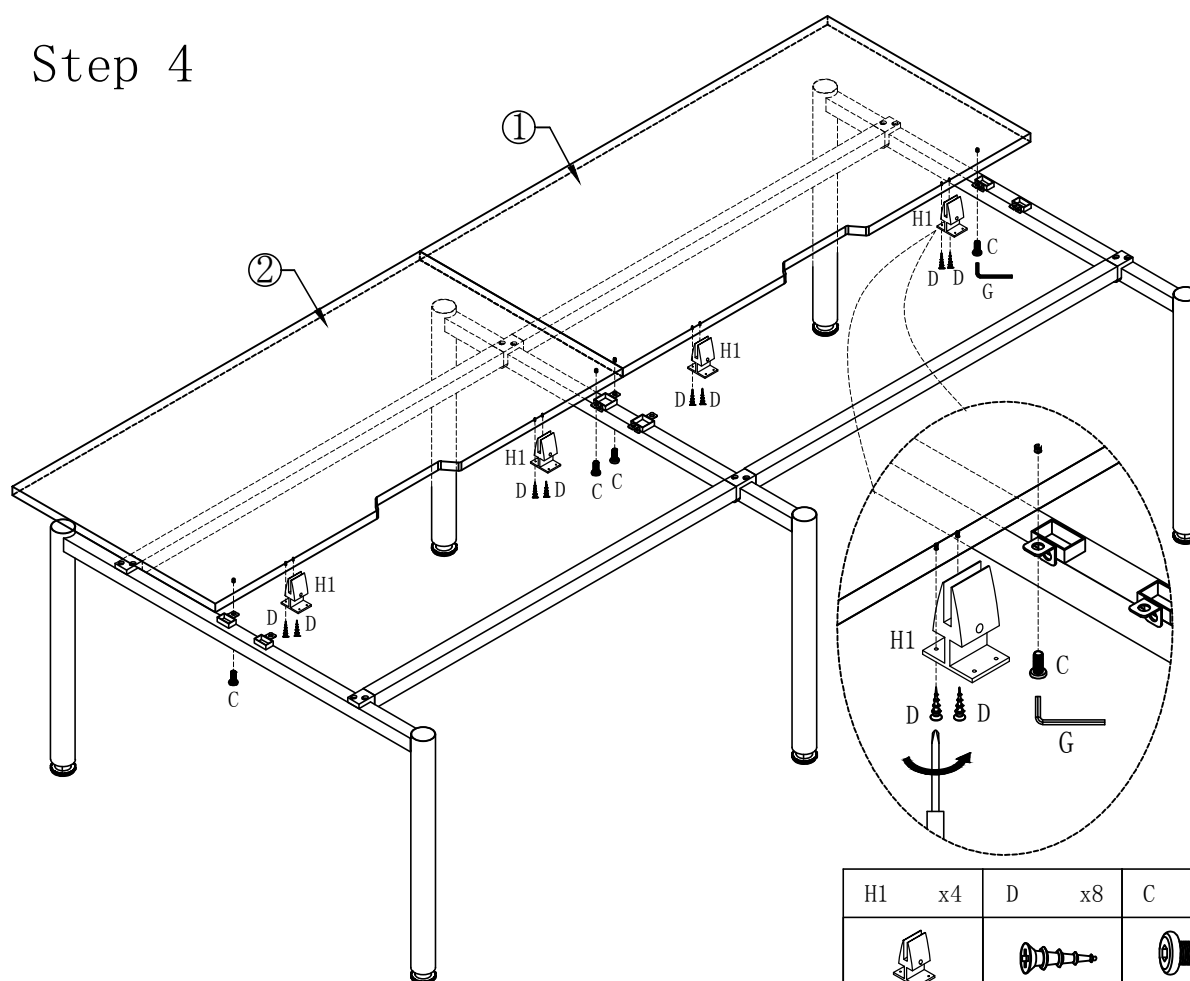


Step 4




H1	x4	D	x8	C	x4	G	x1
							

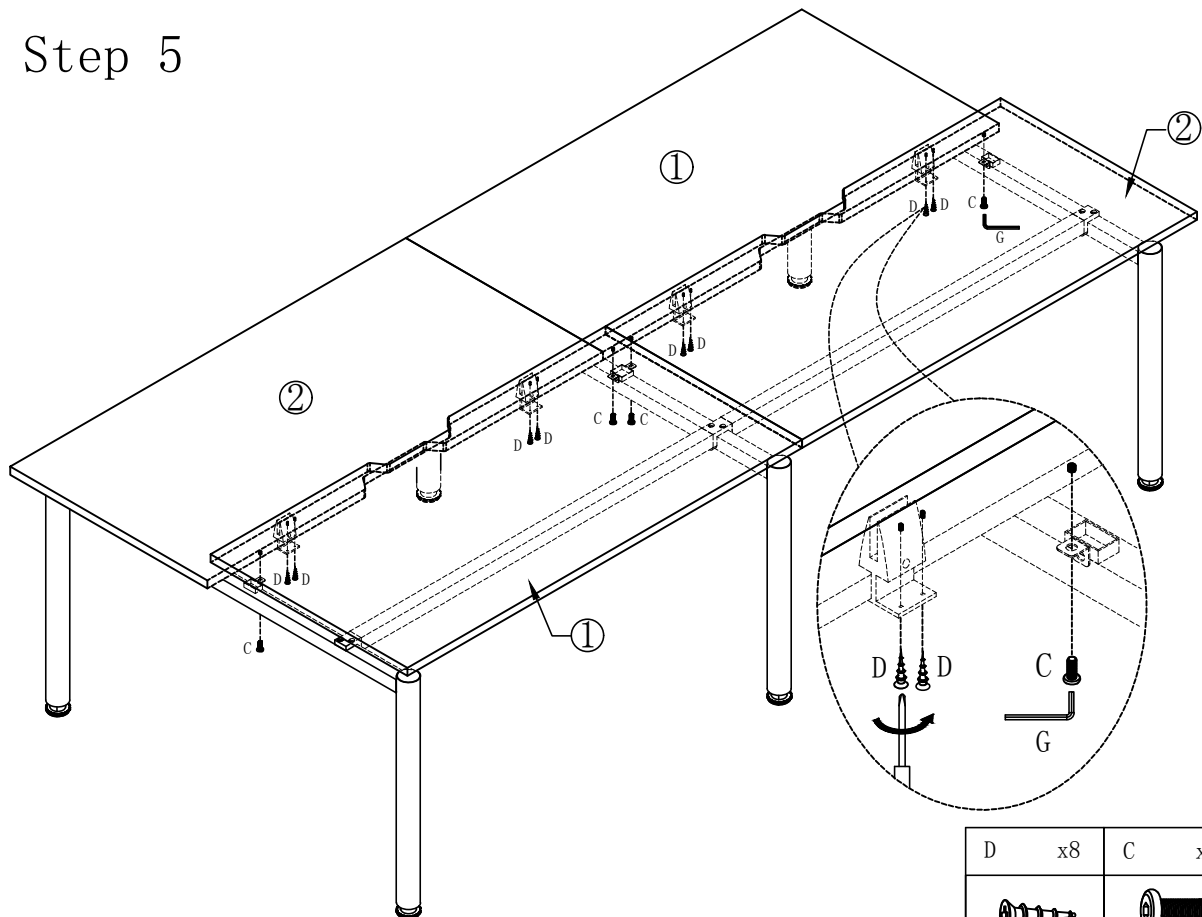


Step 5




D	x8	C	x4	G	x1
					

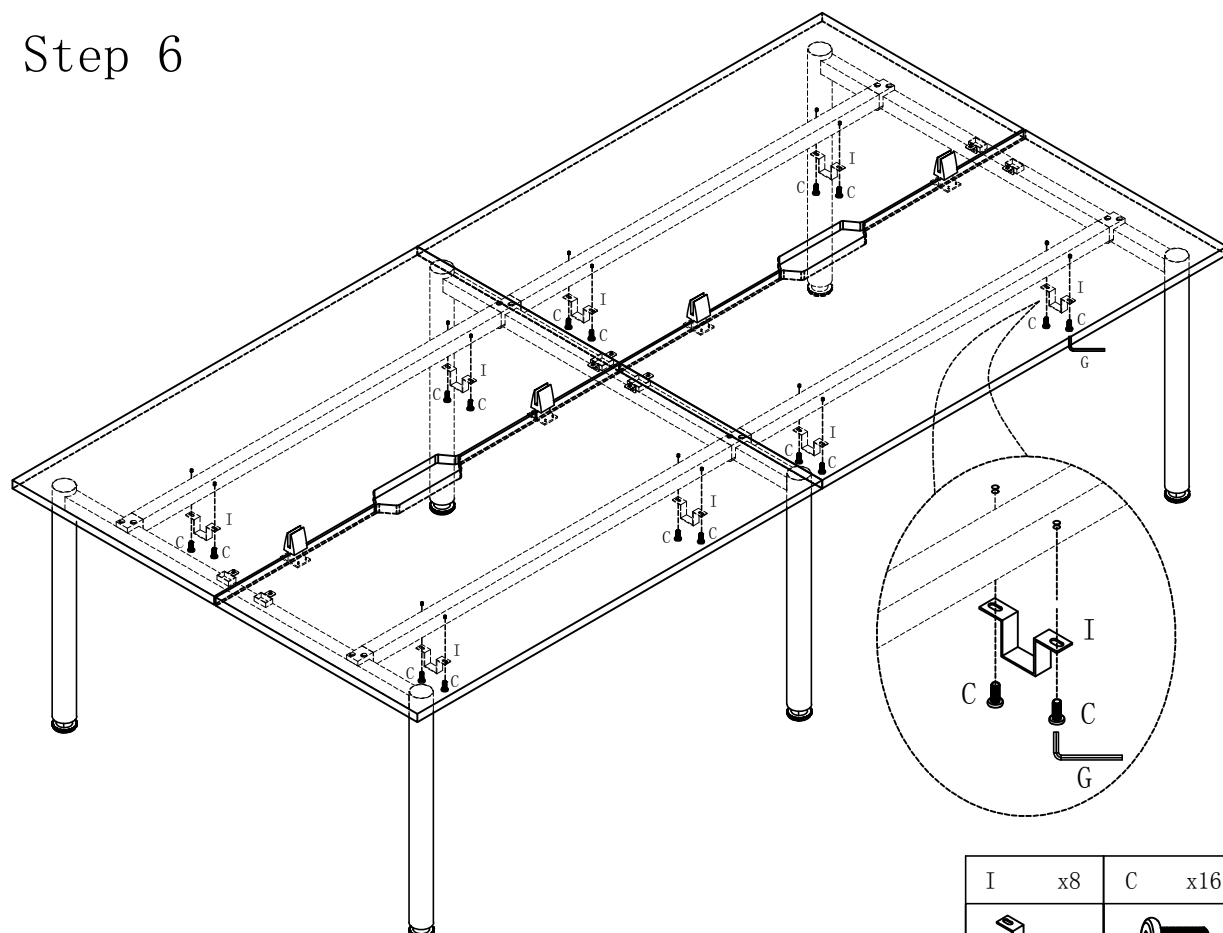

Step 6




I	x8	C	x16	G	x1
					

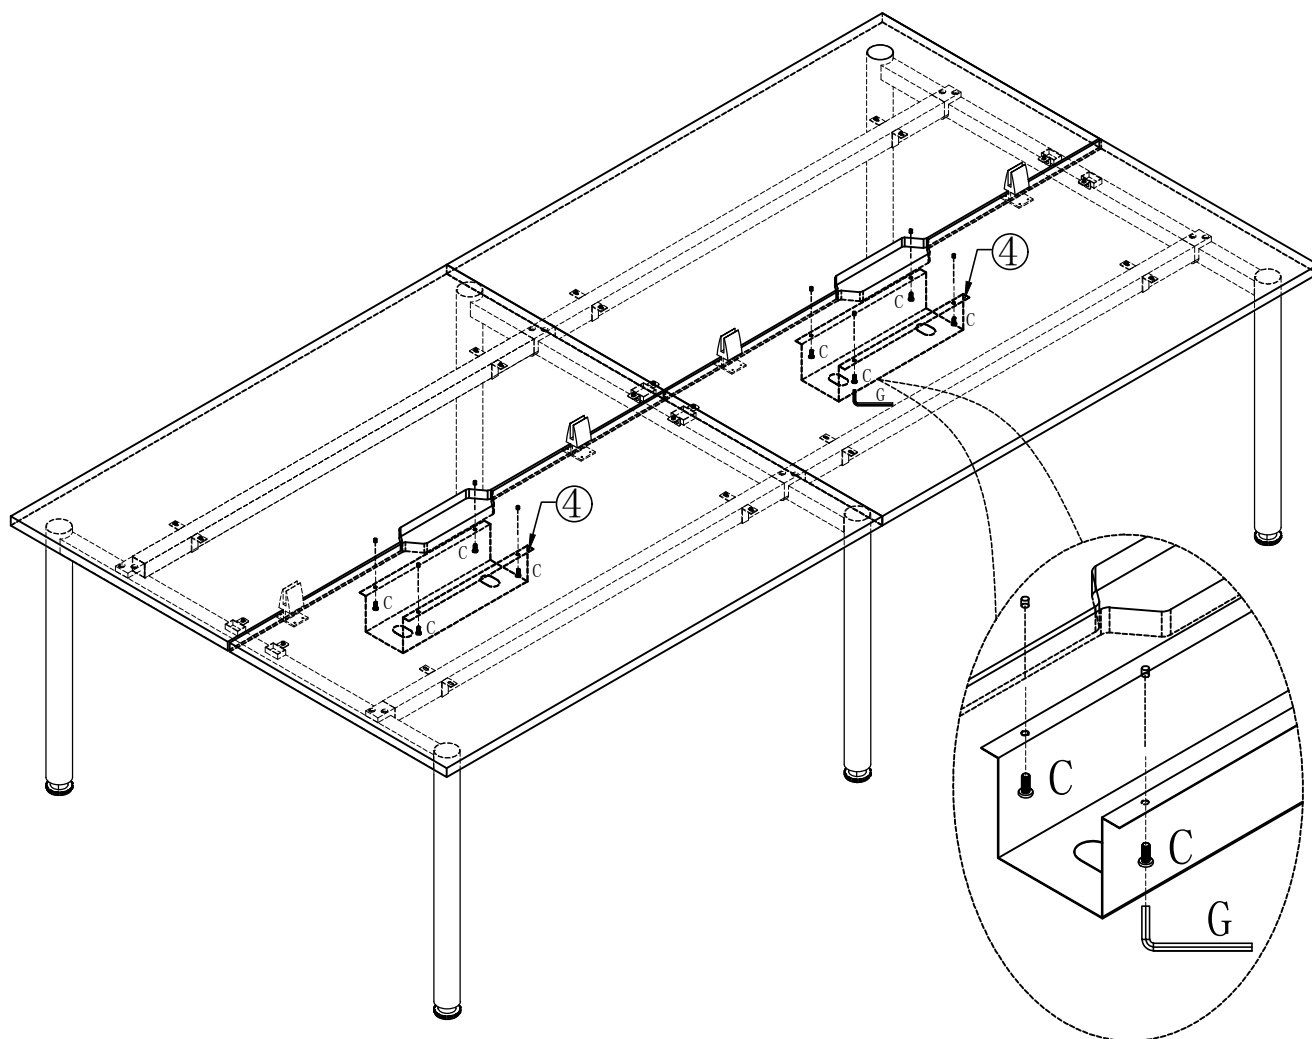Step 7






C	x8	G	x1
			

Step 8

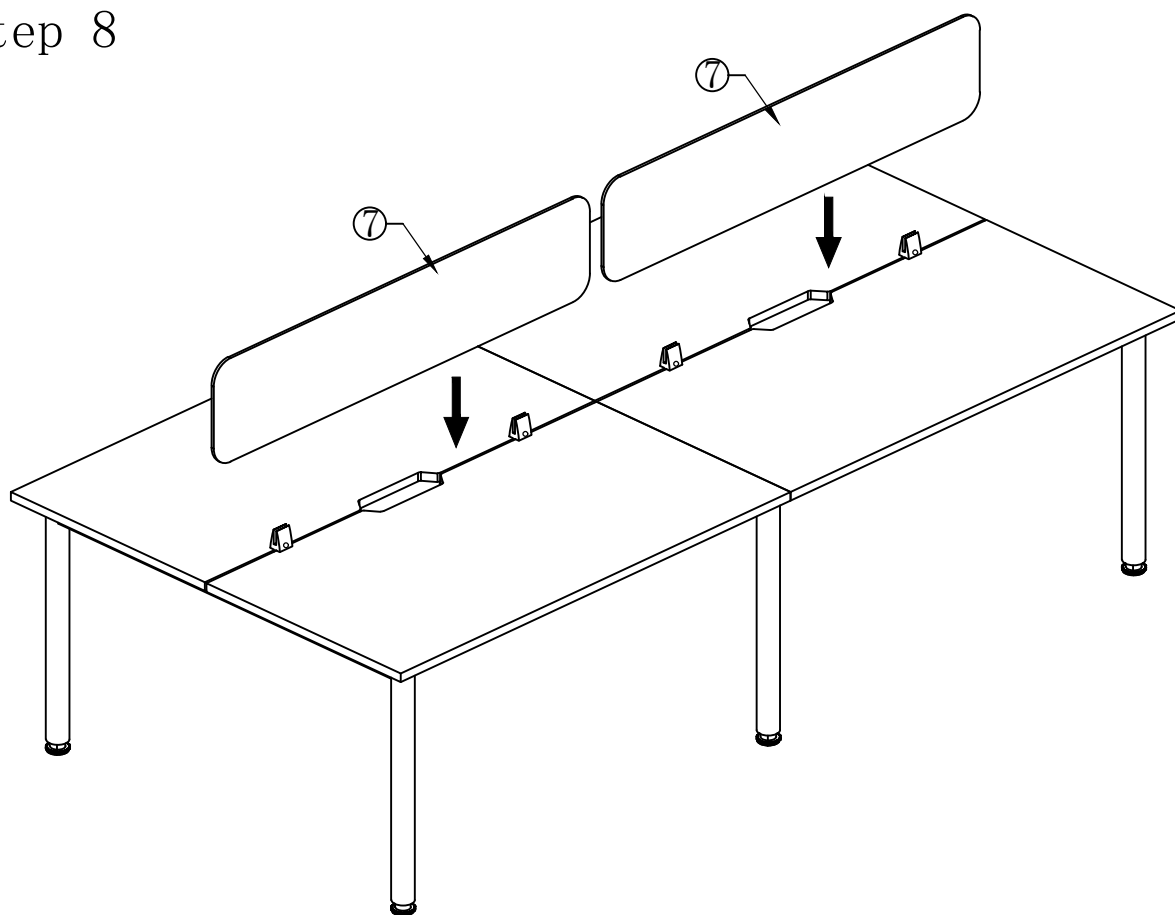


Step 9

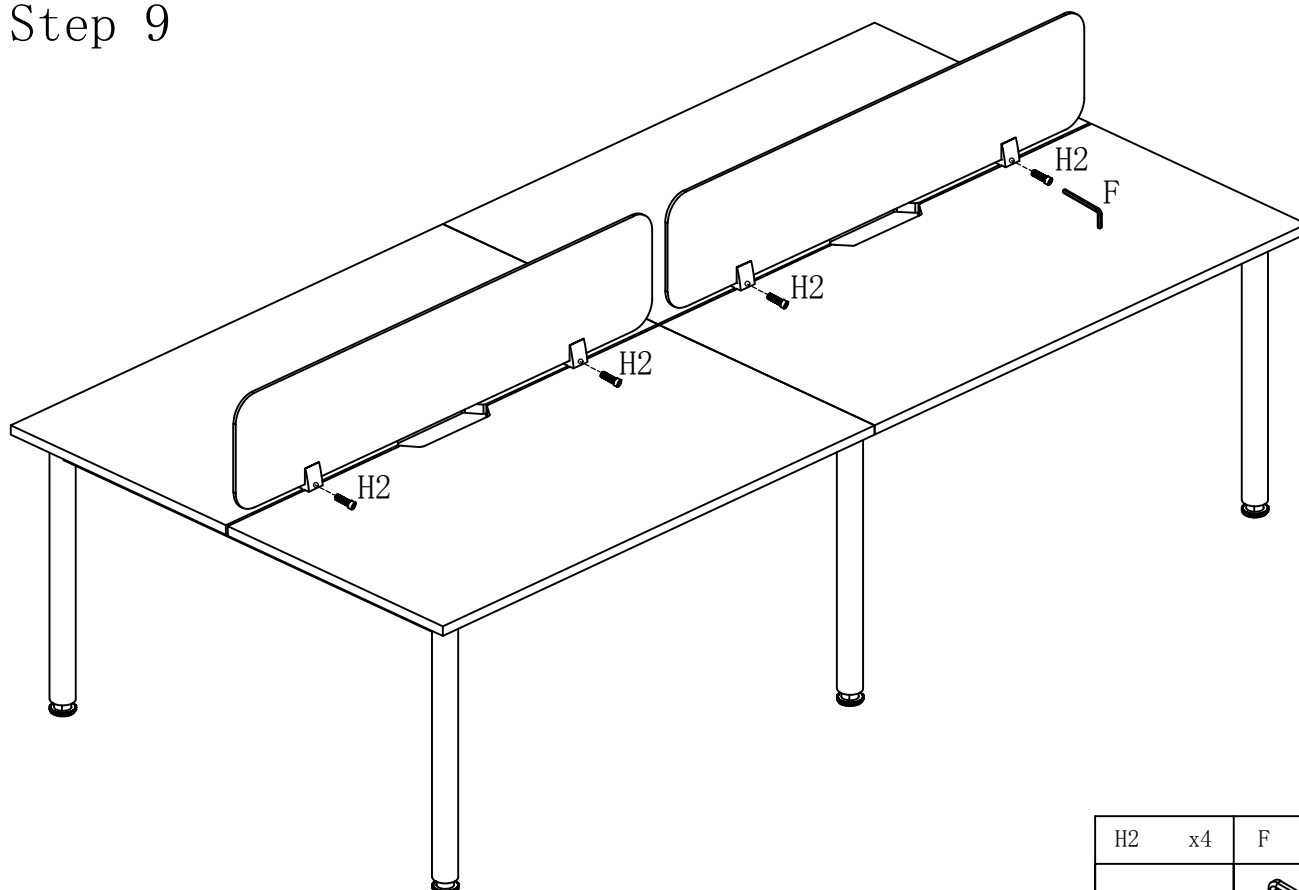

H2	x4	F	x1
			

Maximum Load Capacity:50kg

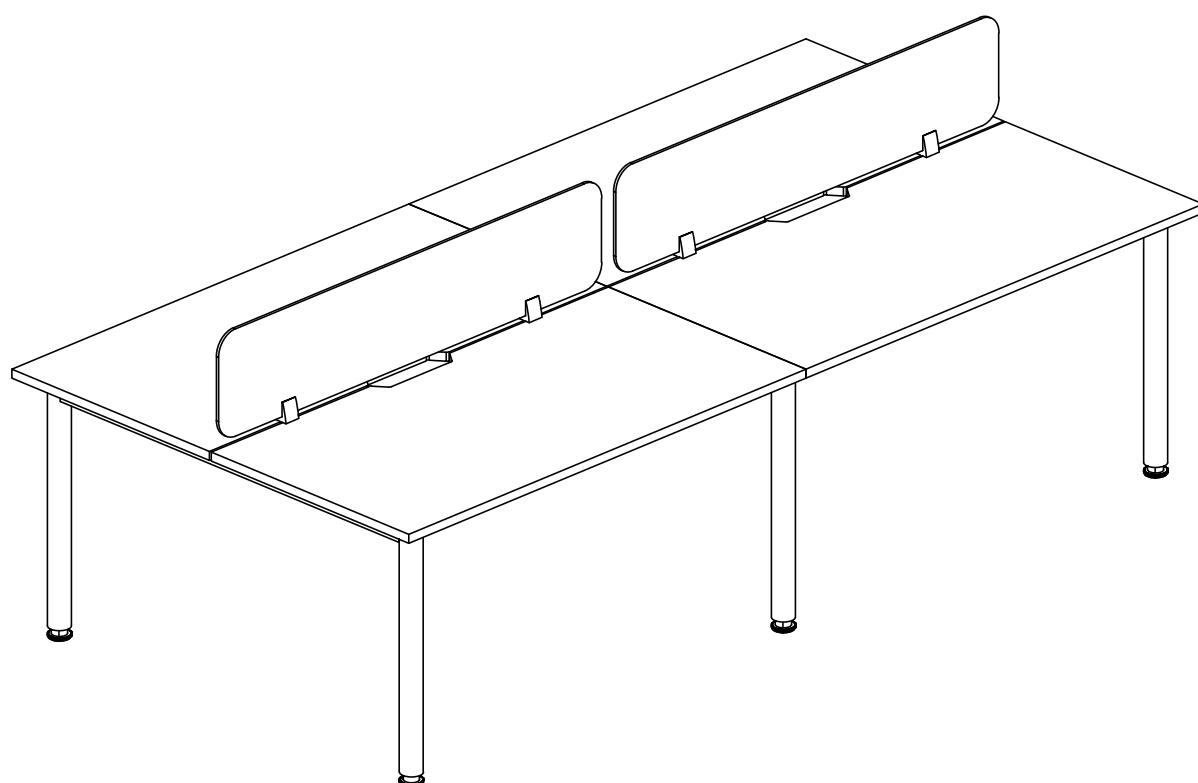

Your MATRIX 4P WKSTN 2800X1400 3CTN is now complete and ready for use

Officeworks Superstores Pty Ltd. | 236-262 East Boundary Road | East Bentleigh | 3165 AUSTRALIA.