


J.BURROWS
.....

ASSEMBLY INSTRUCTIONS


MATRIX MANUAL HEIGHT ADJ DESK

JBMAHADK

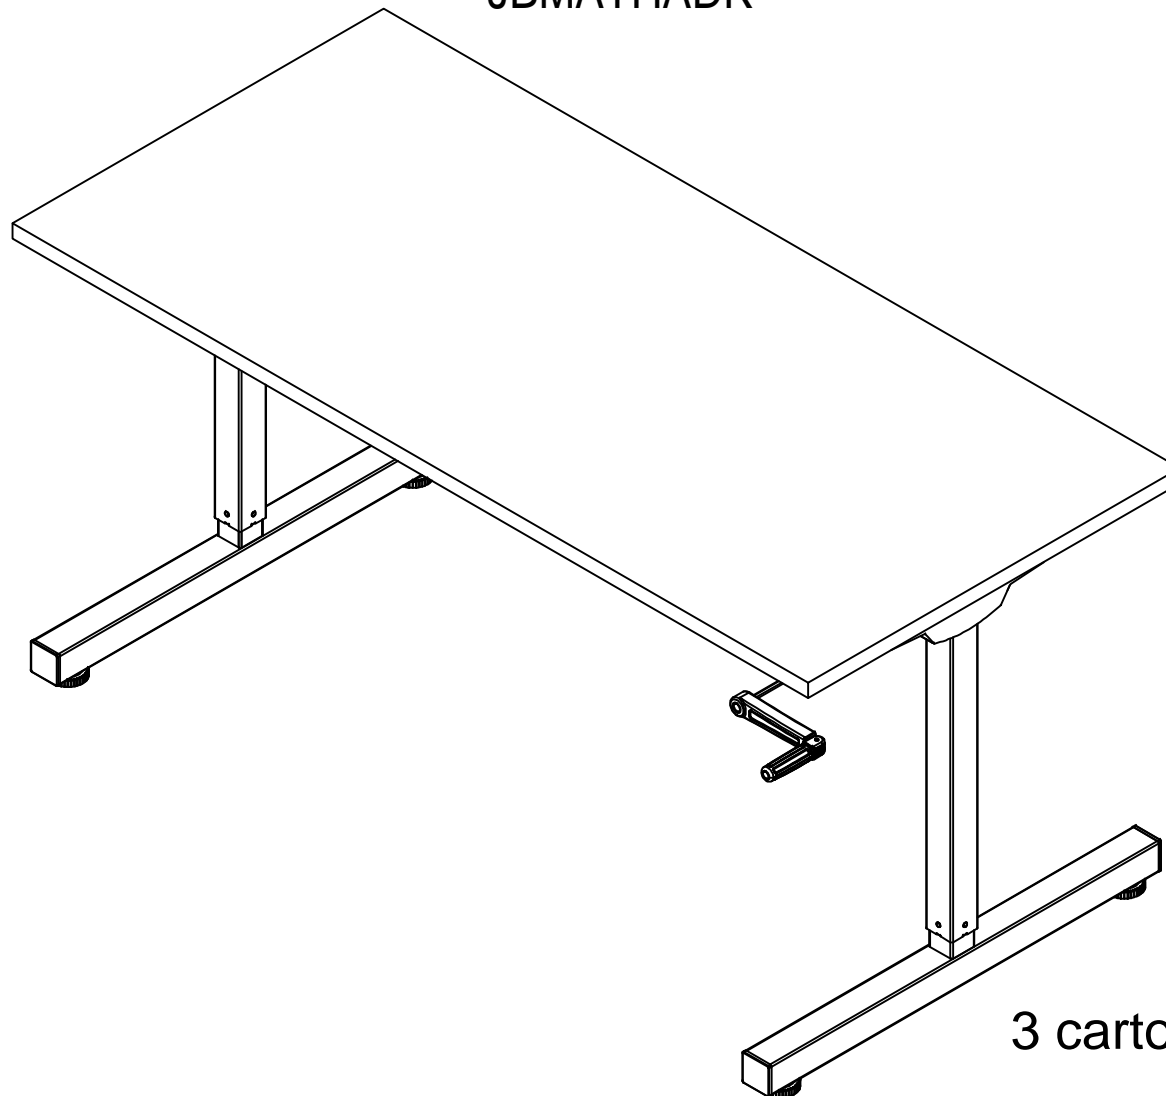

3 cartons

Tools Required




Assemble Item On a Clean Flat Surface









Need Two Or More People To Complete

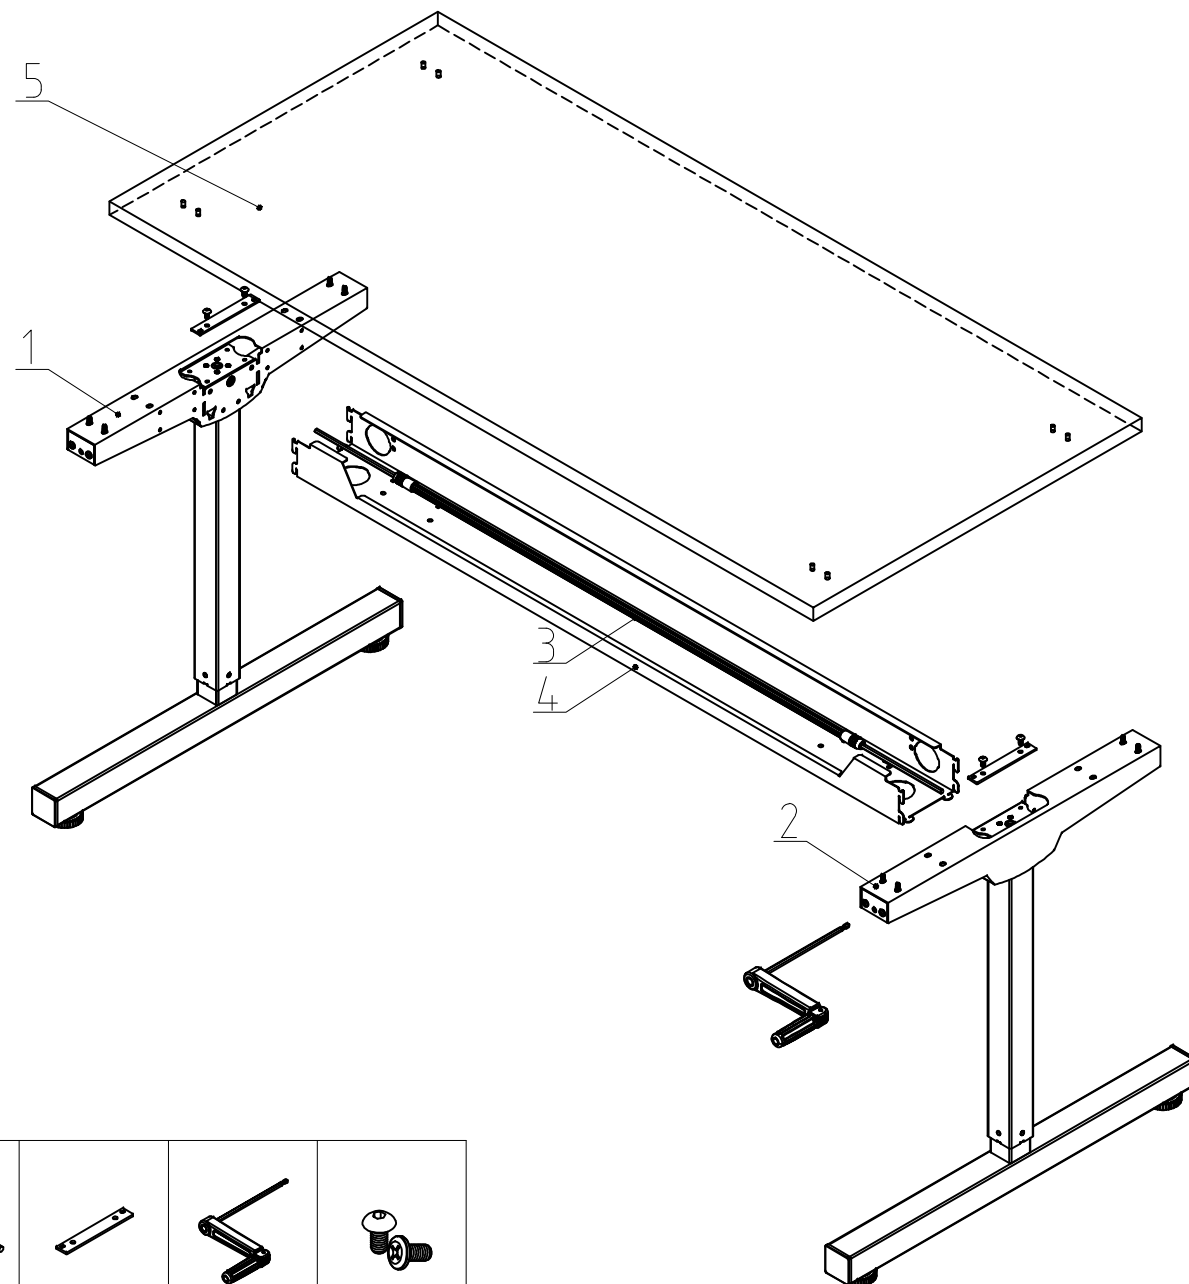





- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase




					
Ax4(M6x12)	Bx8(M6x12)	Cx1(4mm)	Dx2	Ex1	Spare Part

Step 1

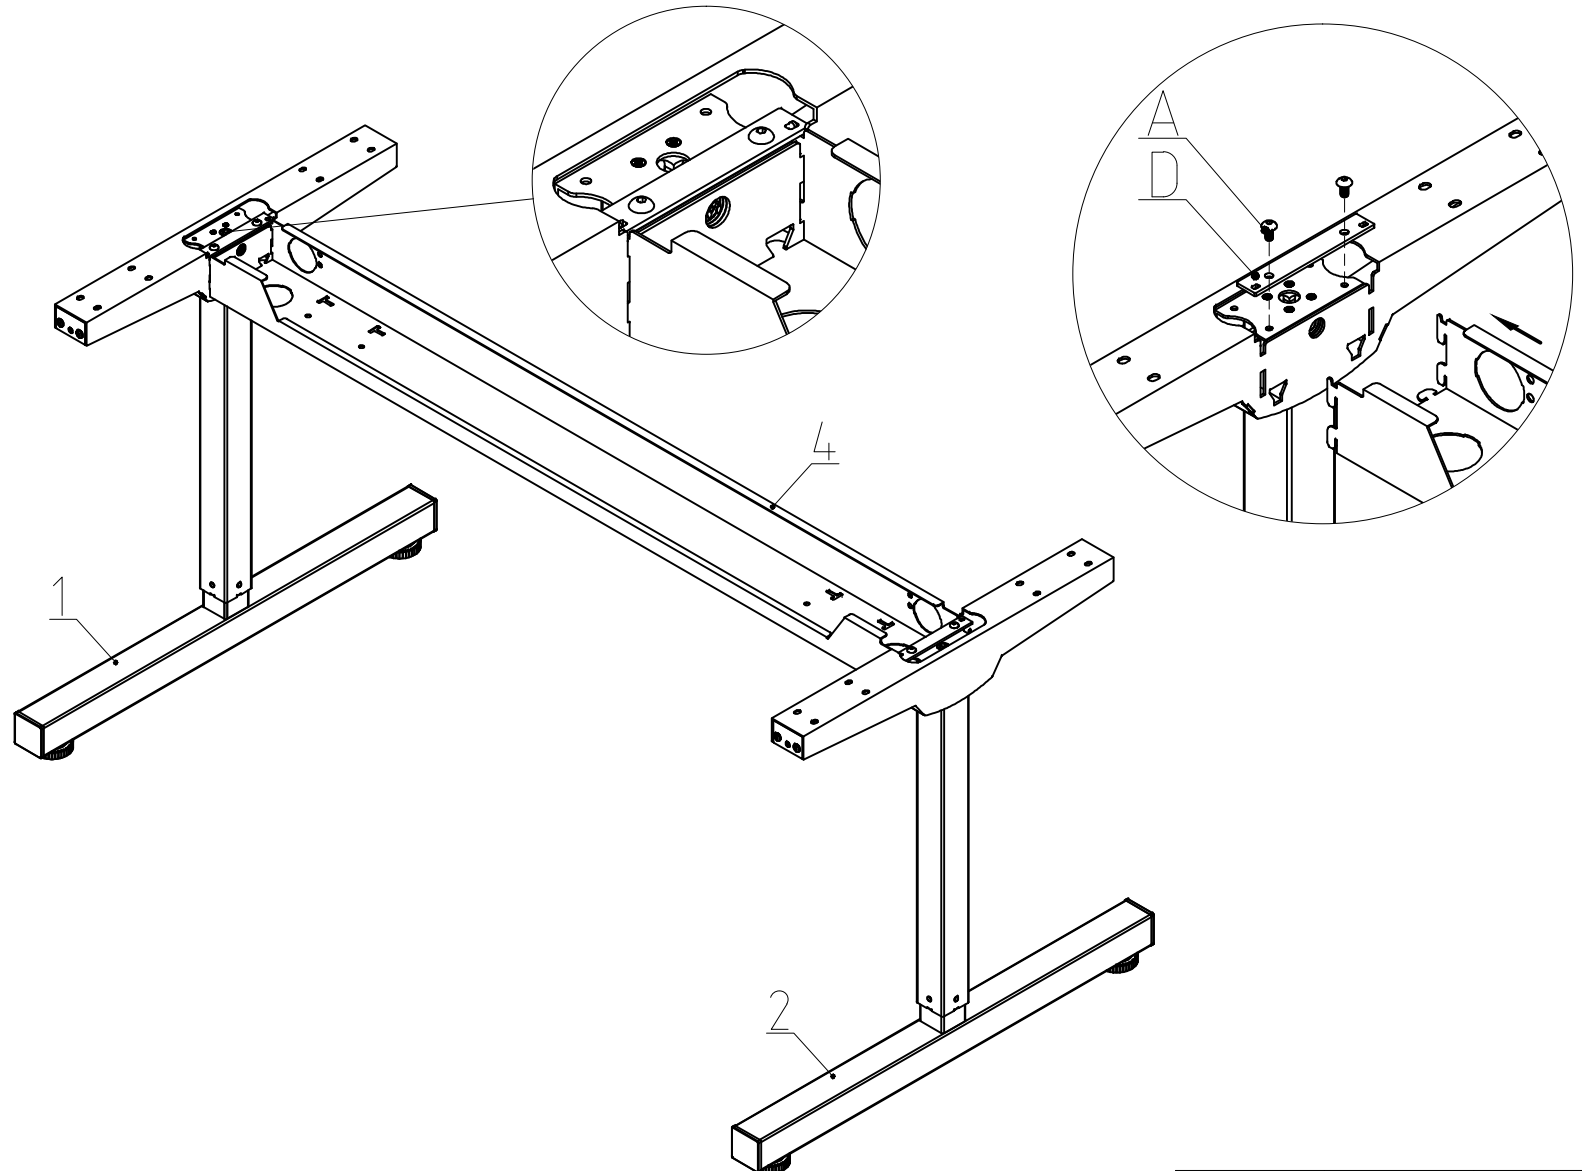


		
Ax4 (M6x12)	Cx1(4mm)	Dx2

Step 2

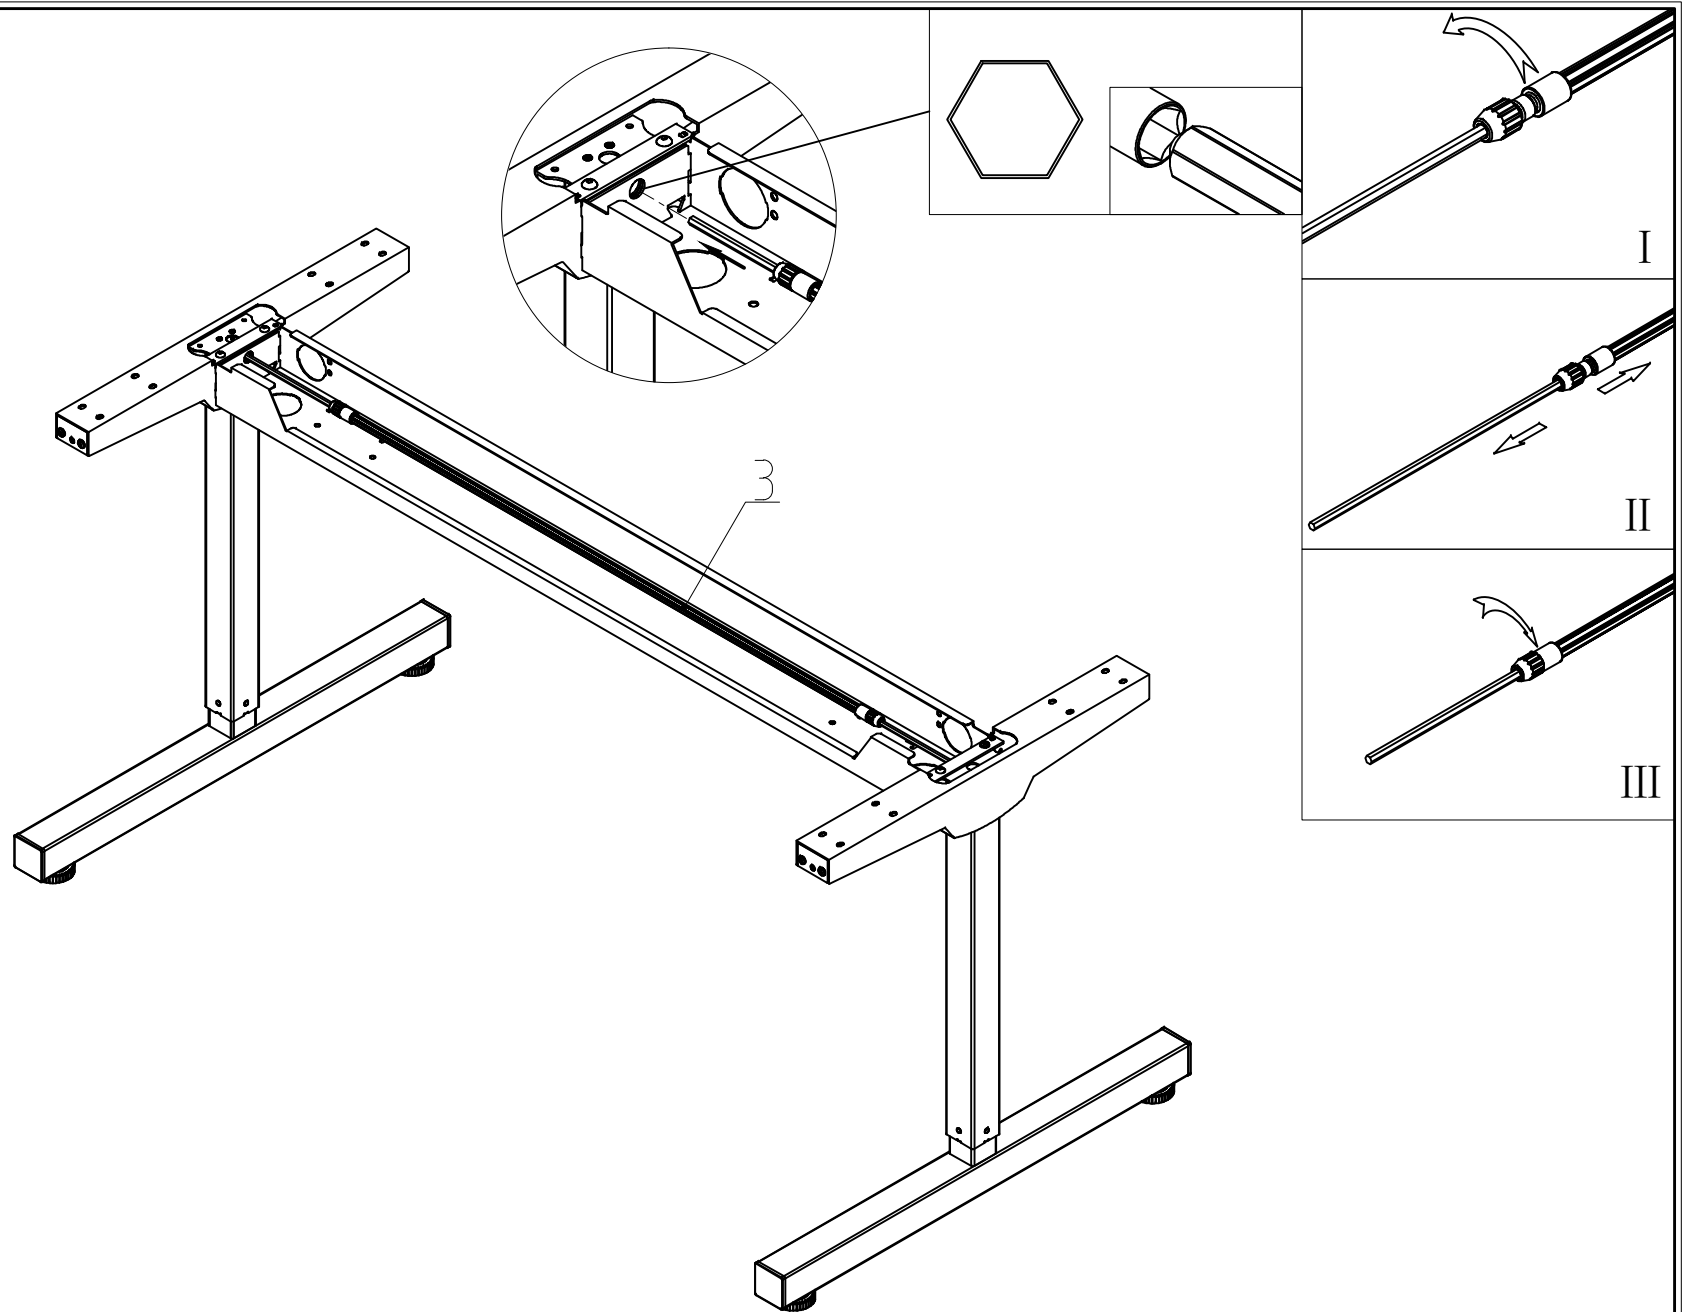



Step 3

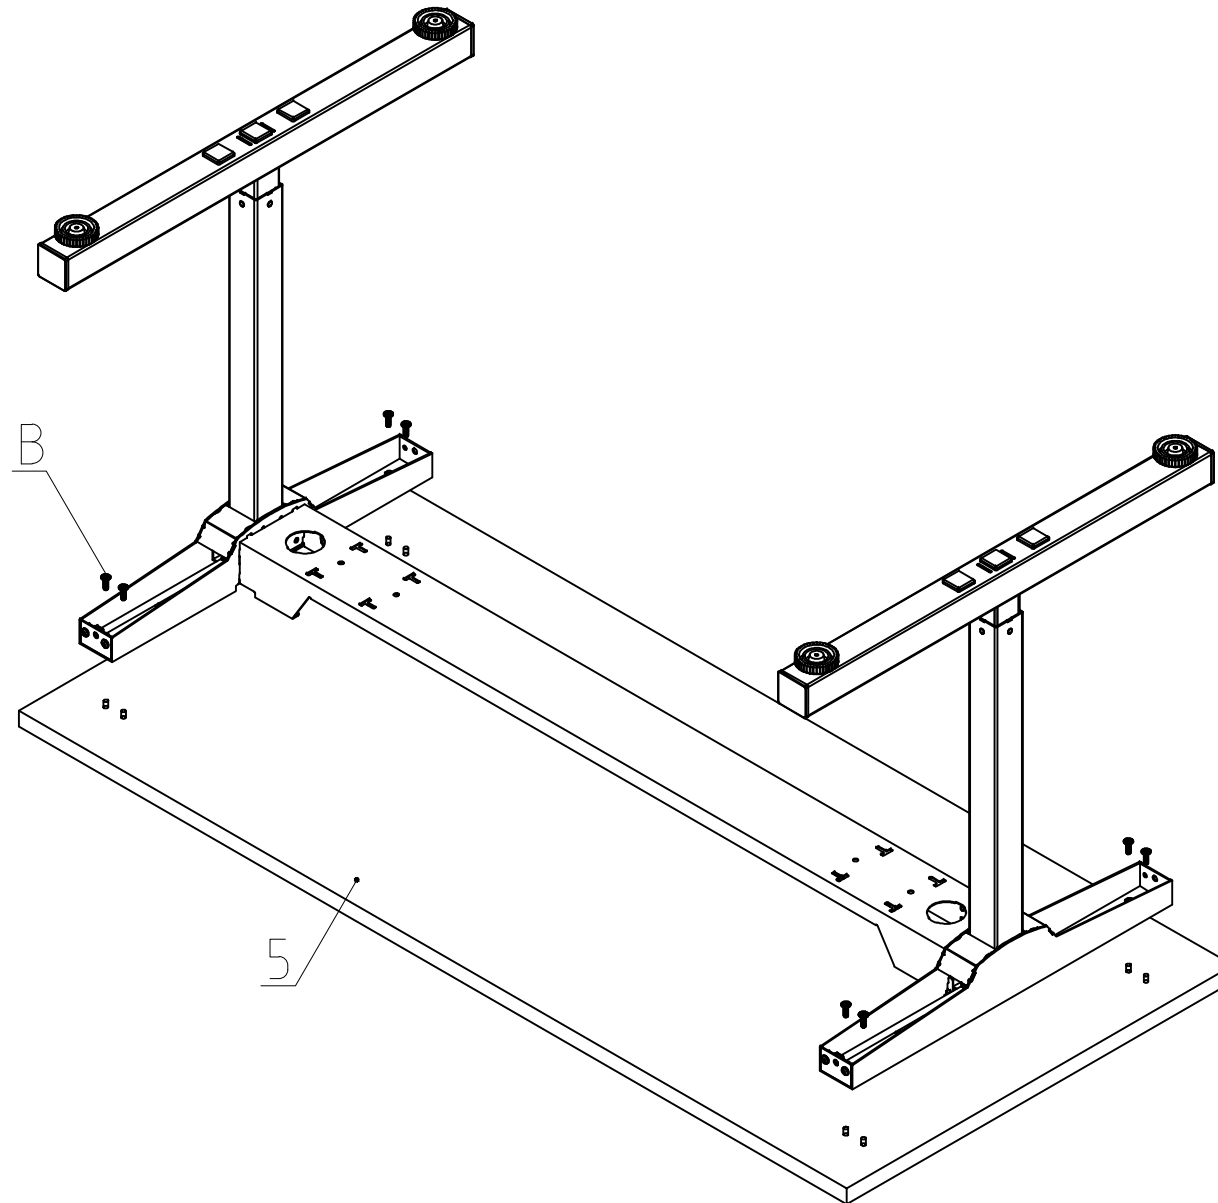

Bx8(M6x12)

Step 4

WALL

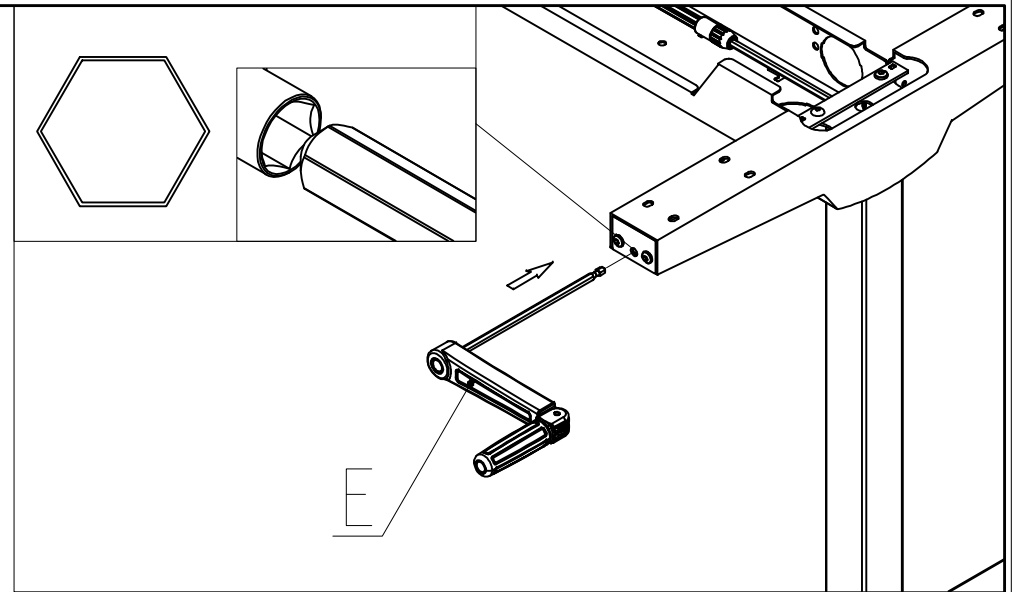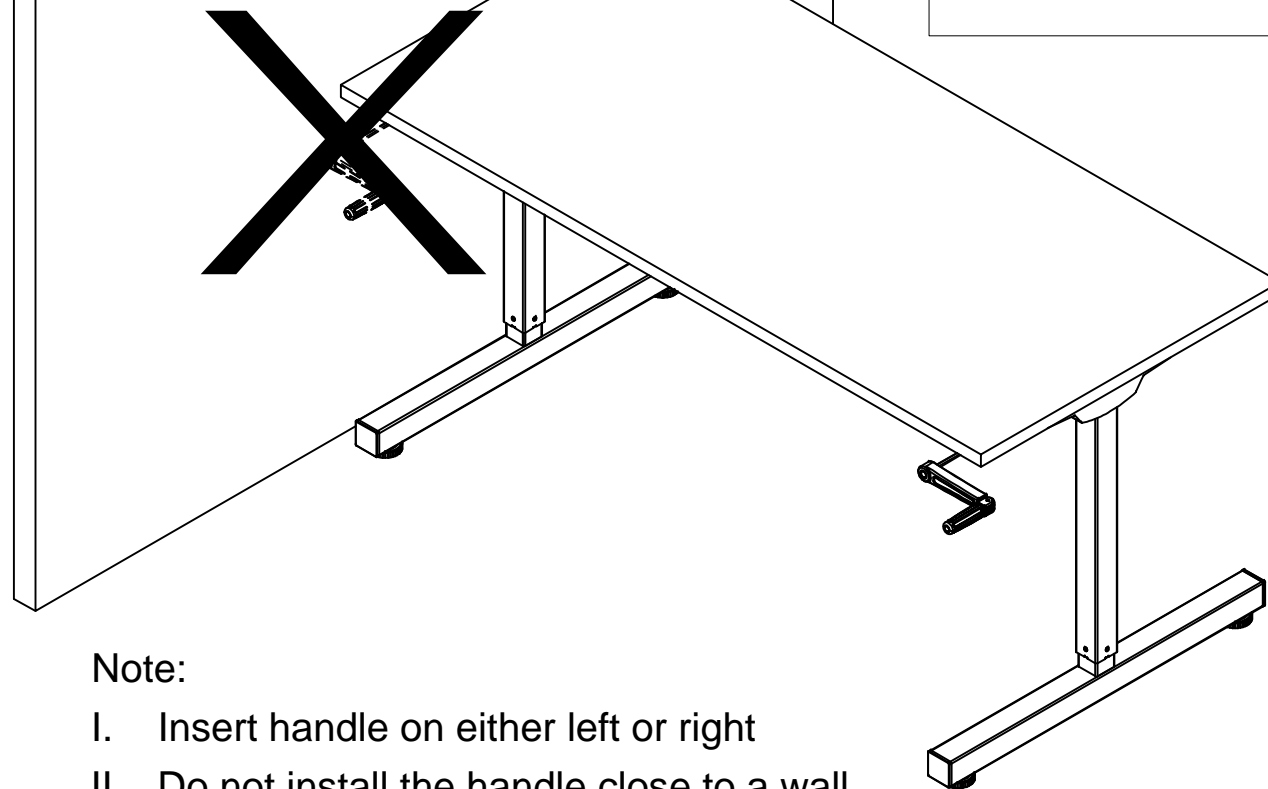

Note:

- I. Insert handle on either left or right
- II. Do not install the handle close to a wall



Ex1