Klik & Kleen Basket Installation Guide

NORTHFORK

Tools Required(fig.1):

❖ Power Impact Drill	❖ Drilling Bit, D6.5mm	♦ Hex-sock Driver #8	❖ Miller Hummer
Marker			

Install Accessary (not included), (fig.1)



fig-1

Step 1: Determine an installation location and mark the screw locations (4x) (fig2.)



fig-4



fig-2

Step 2: Drill the holes (4x) (fig3)



fig-3

Step 4: Drive (4) screws on half-way only (fig5)

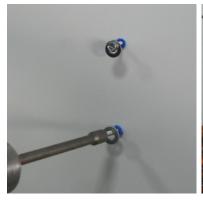


fig-5.1



fig-5.2

Step 5: Install the rack, Tight up all the screws



fig-6.1



fig-6.2