
STILFORD

ASSEMBLY INSTRUCTIONS

PROFESSIONAL PORTABLE LECTERN
OAK BLACK / WHITE

Product Number: STPRLECTOB, STPRLECTWE

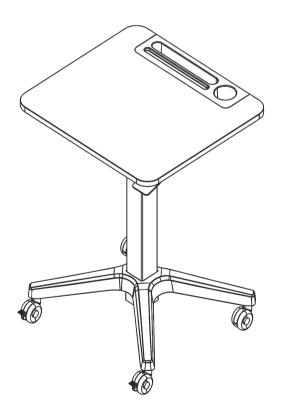



LIFTING WEIGHT CAPACITY



STATIC LOADING CAPACITY

This design and instruction booklet is subject to copyright. www.officeworks.com.au

1 Carton

Estimated Assembly Time: 30minutes

Assembly Video

- To view an assembly video, go to https://www.officeworks.com.au/
- Search the product by item code or name:



Click on the icon to watch the video.



Customer Service Contact Details



Spare Parts & Hardware


1300 OFFICE





General Advice



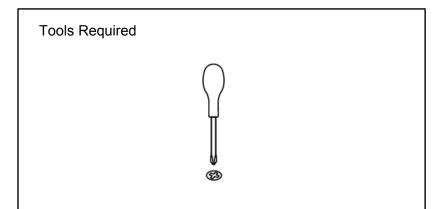

CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact the store of purchase.
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.


WARNING


- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.


DANGER


CHILDREN MUST BE SUPERVISED.


Officeworks Ltd. I 236-262 East Boundary Road I East Bentleigh I 3165 I AUSTRALIA

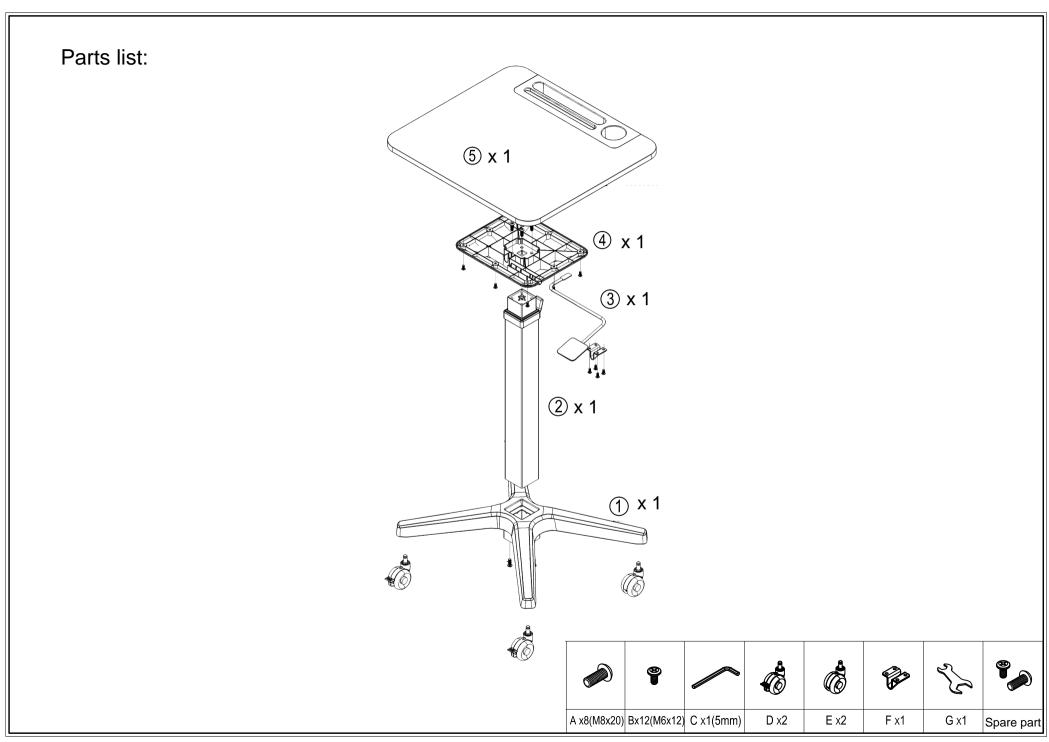


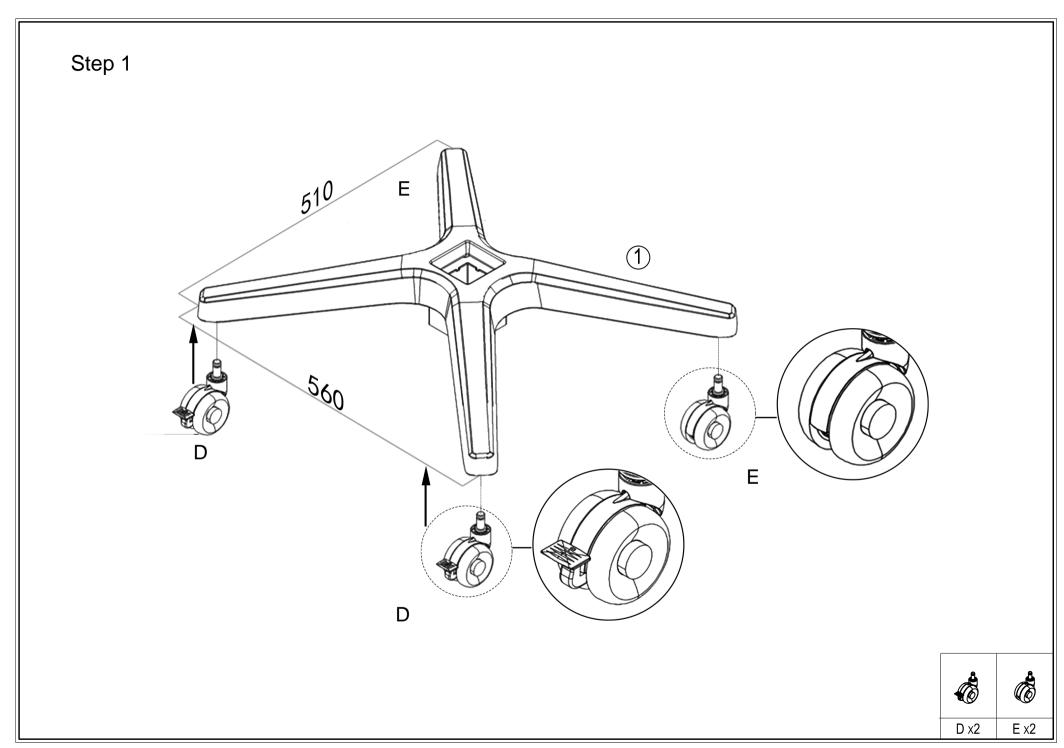


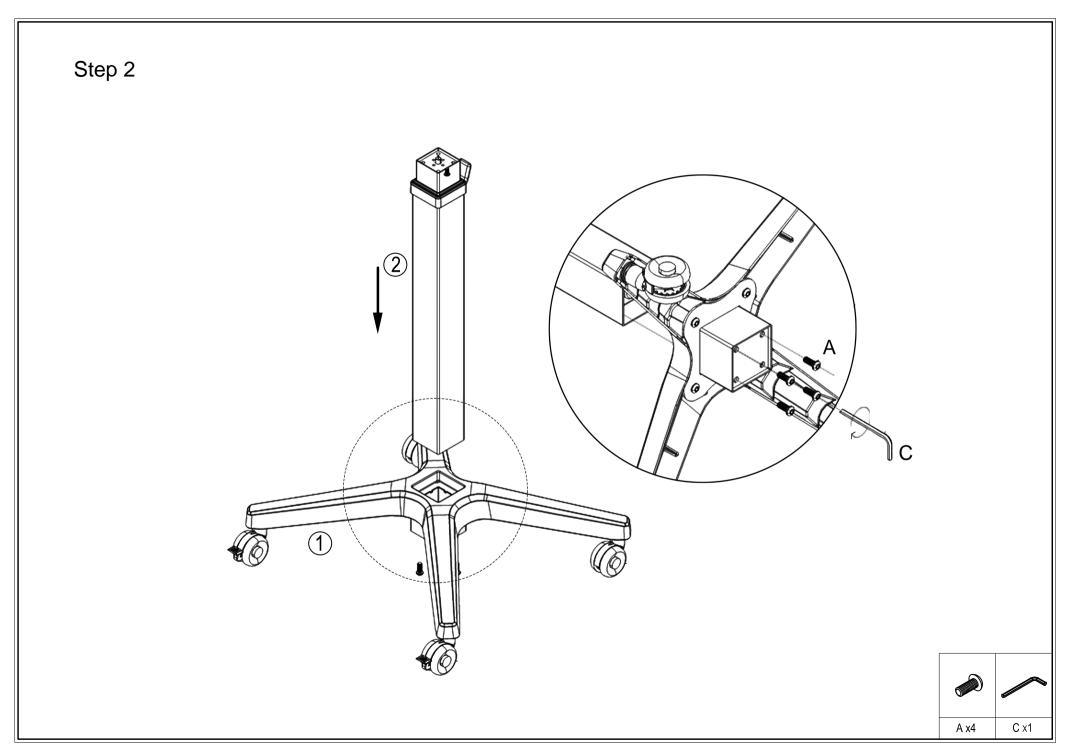

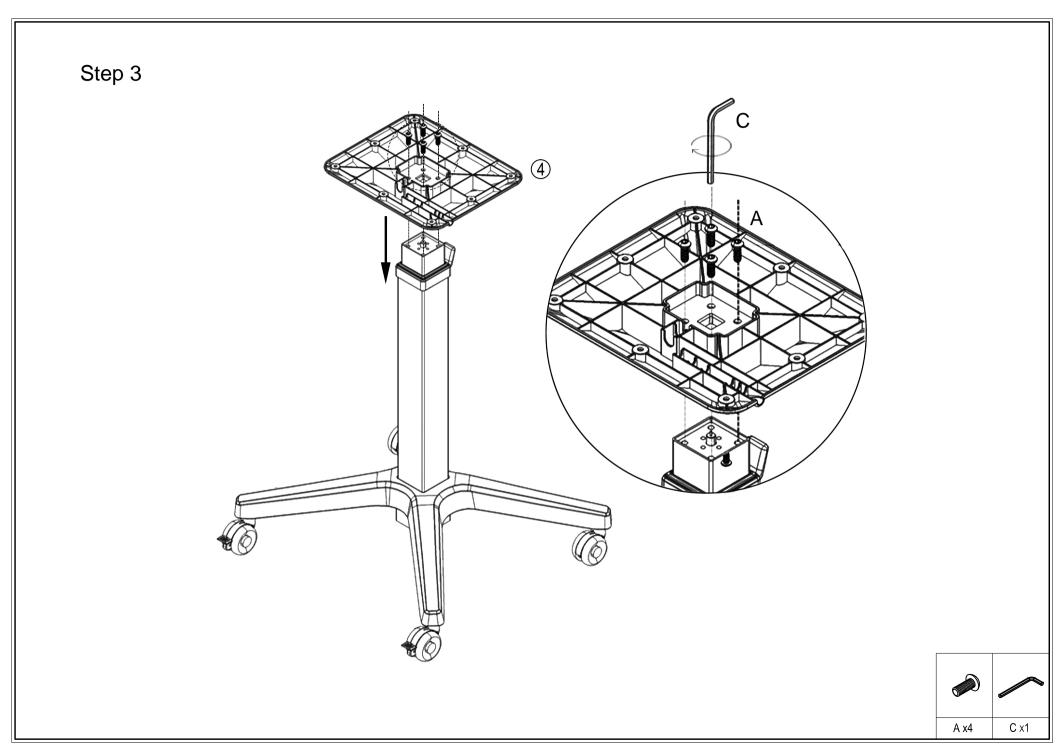

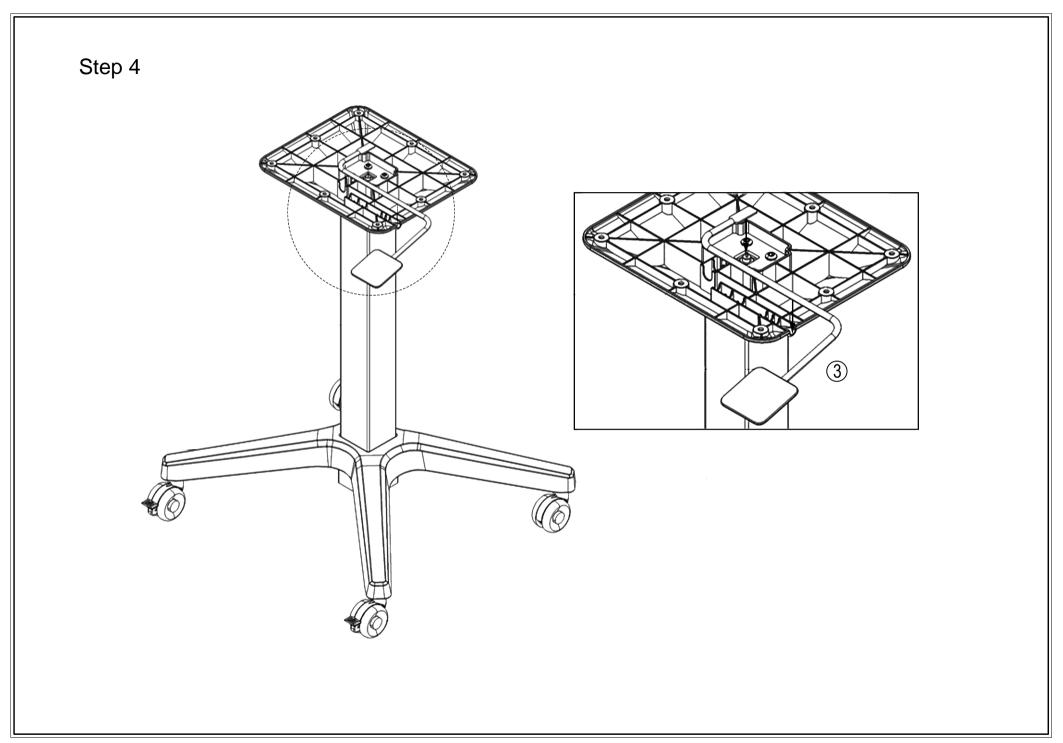

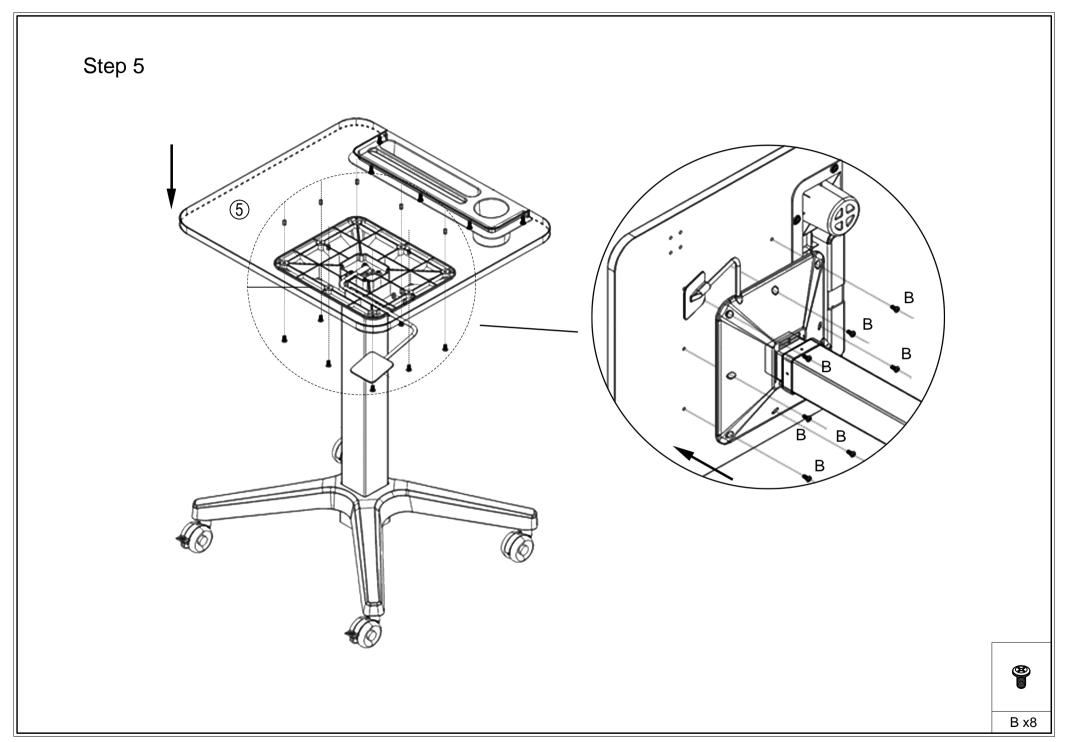

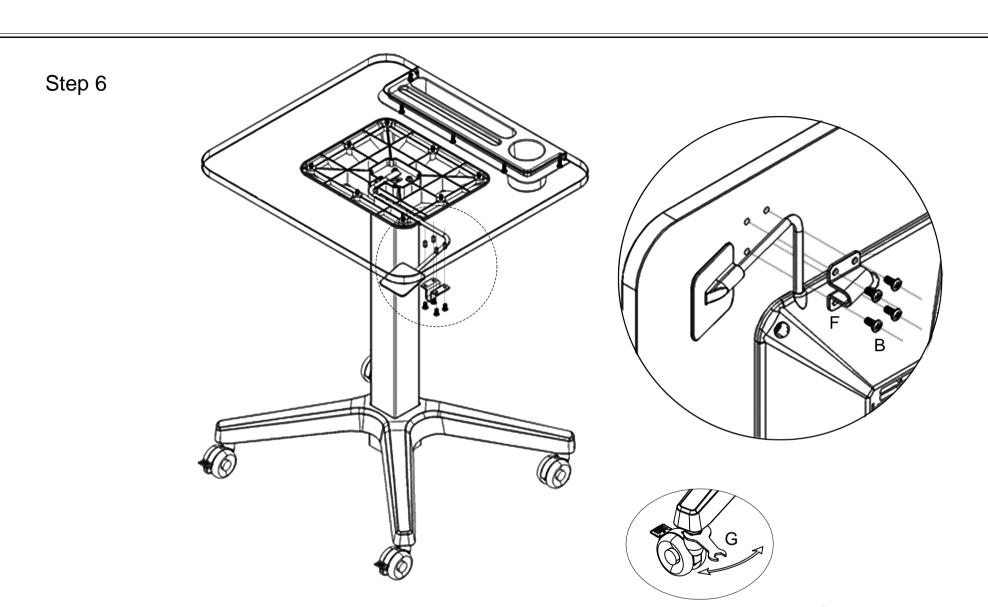

Adjust the wheel height with part G.

Thank you for your purchase. Please retain your receipt to validate warranty. If you would like to know more about our furniture products, please visit www.officeworks.com.au

3		N. S.
B x4	F x1	G x1