
J.BURROWS

ASSEMBLY INSTRUCTIONS

STILFORD SCREEN DOCUMENT TRAY JBSCDOCTBK / JBSCDOCTWE

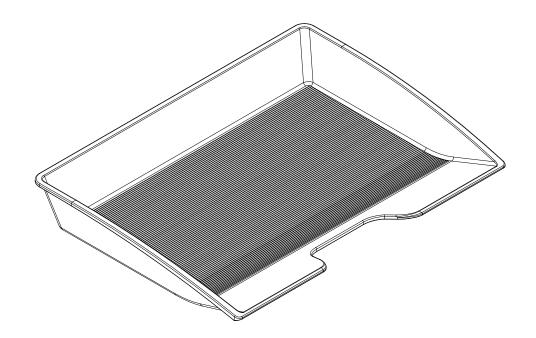


This design and instruction booklet is subject to copyright. www.officeworks.com.au

1CTN

Step 1

Put the tray hang on the Stilford screen

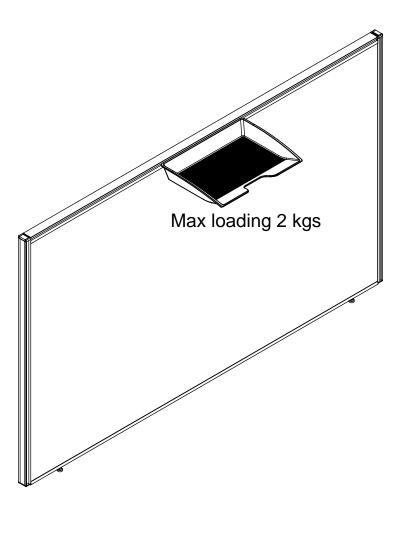

Officeworks Ltd I 236-262 East Boundary Road I East Bentleigh I 3165 I AUSTRALIA