





# ASSEMBLY INSTRUCTIONS

## SPC12


**rapidline**  
FURNITURE FOR TODAY  
2011-8-25

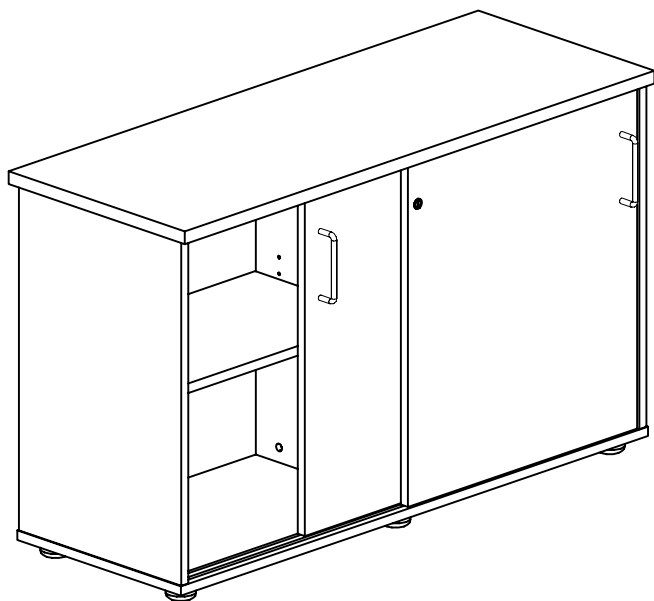


pin 1 20PCS	6x35 CAM 2 20PCS
Cam Cover 3 20PCS	Bolt Nut 4 8PCS
T-Handle 5 2PCS	Screw 6 4PCS
CUSHION 7 6PCS	Screw 8 4PCS
LOCK 9 1PCS	Screw 10 2PCS

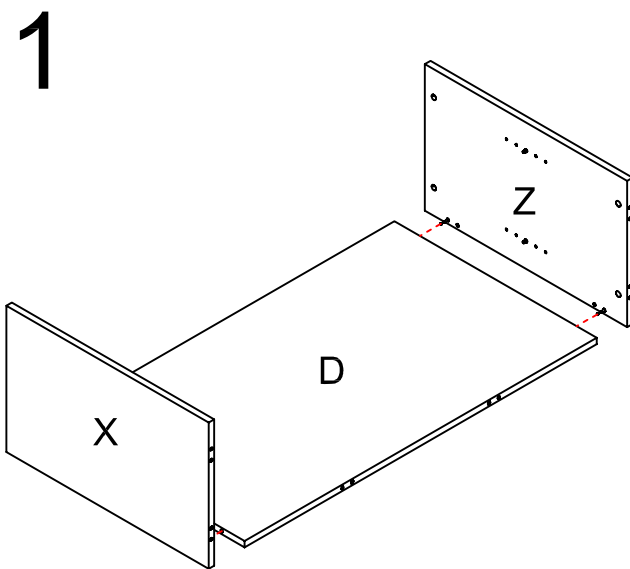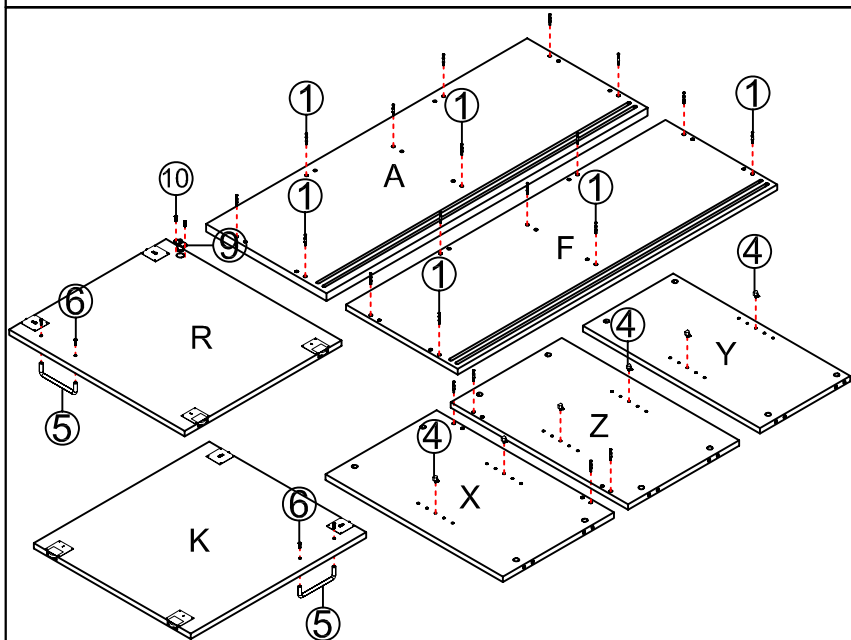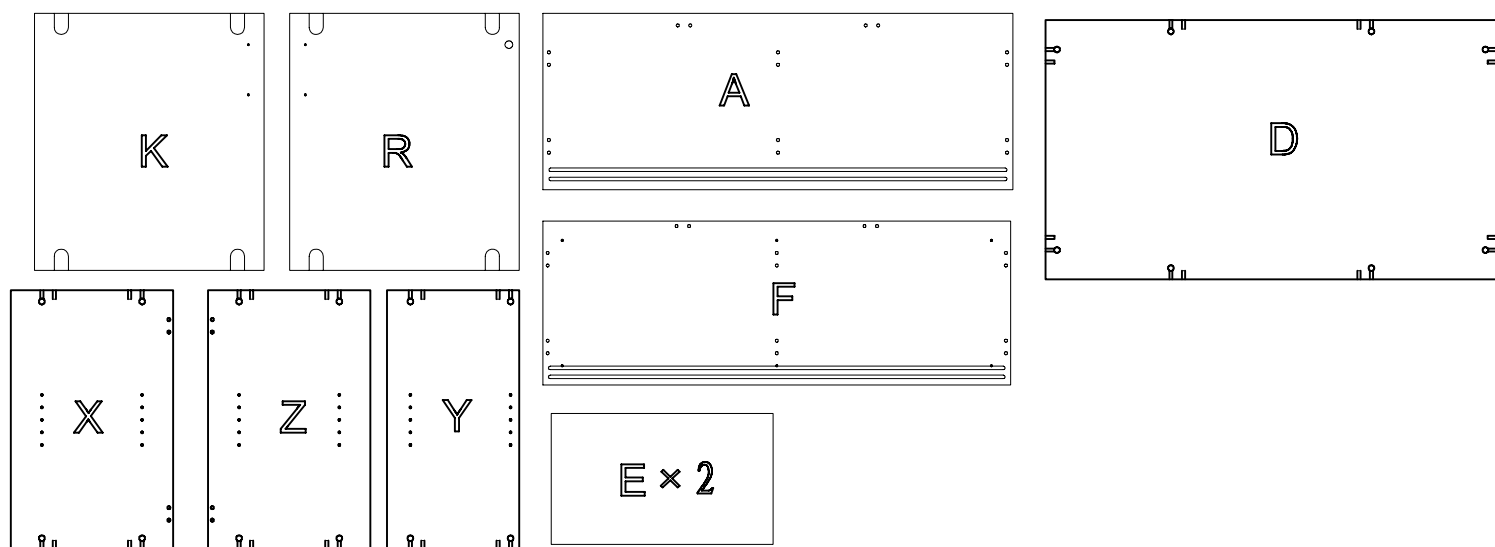


2

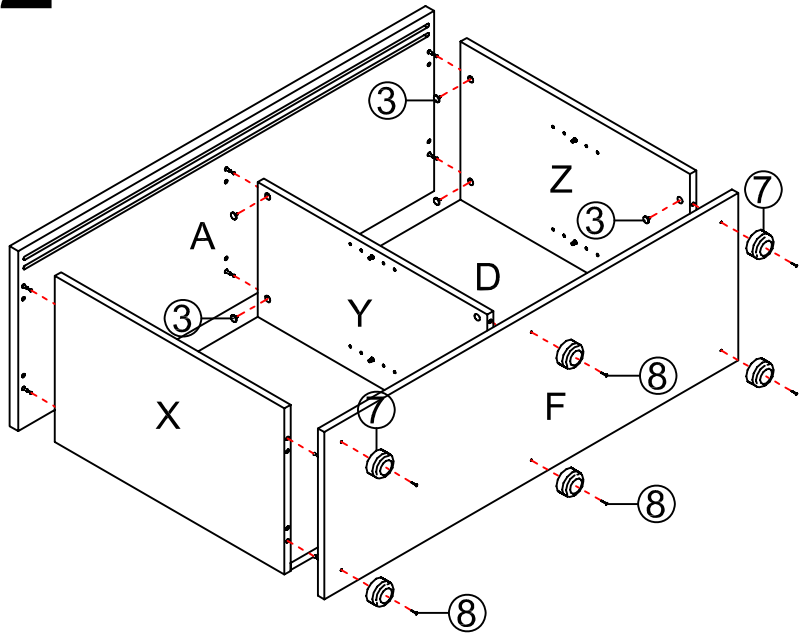


3

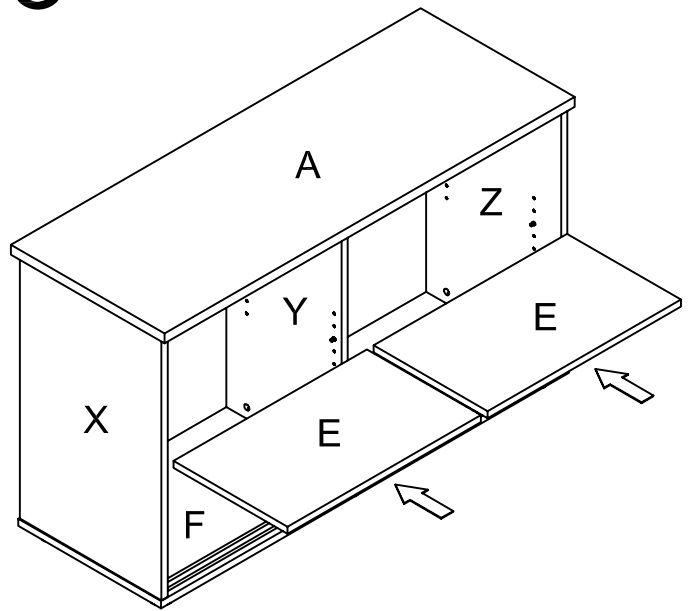

4

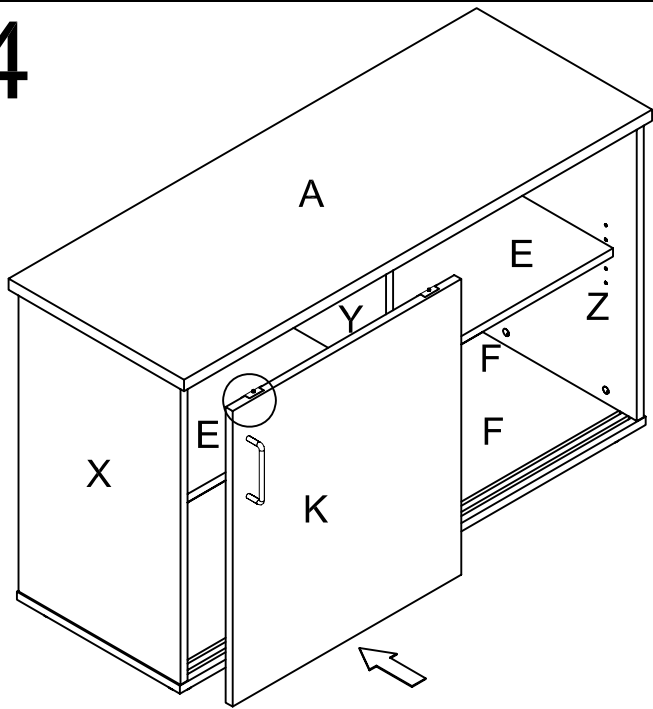

5

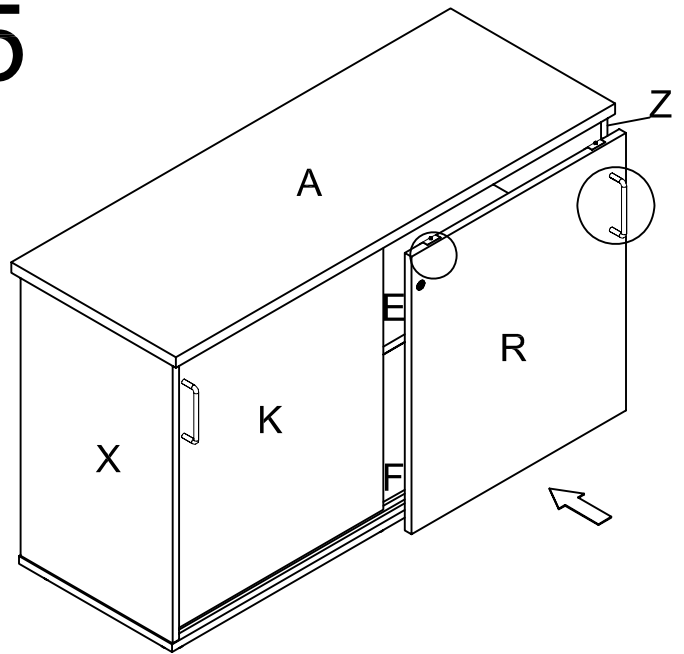

6

