

# PO500 CHAIR



**rapidline**  
FURNITURE FOR TODAY

WORKSTATIONS - FURNITURE - SEATING - STORAGE - ACCESSORIES


1. Open Gas lift packaging and Insert gas lift into the 5 star base with castors



2. Place the bellows over the gas lift and press down



3. Fit the seat on top of the gas lift

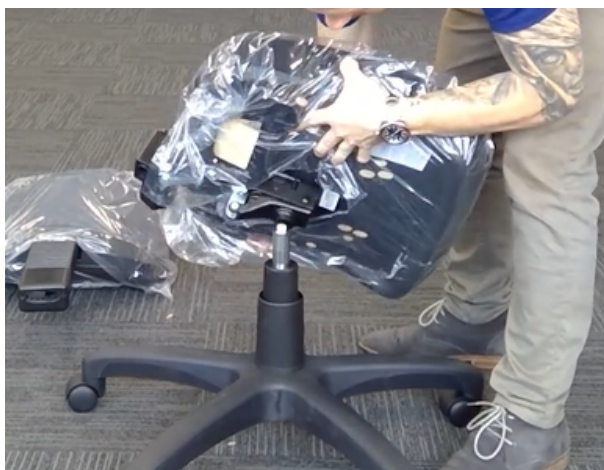

4. Slide the bar of the back into the insert of the mechanism at the back of the seat.

\*But first pull out the plastic lug then slide the bar in



5. Place the plastic lug back into place



6. Tighten the knob once reached the desired height.

