


J.BURROWS
.....

ASSEMBLY INSTRUCTIONS


AA-STILFORD 3D PEDESTAL WHITE/SILVER/BLACK

JBST3DPDWE/BK/SR

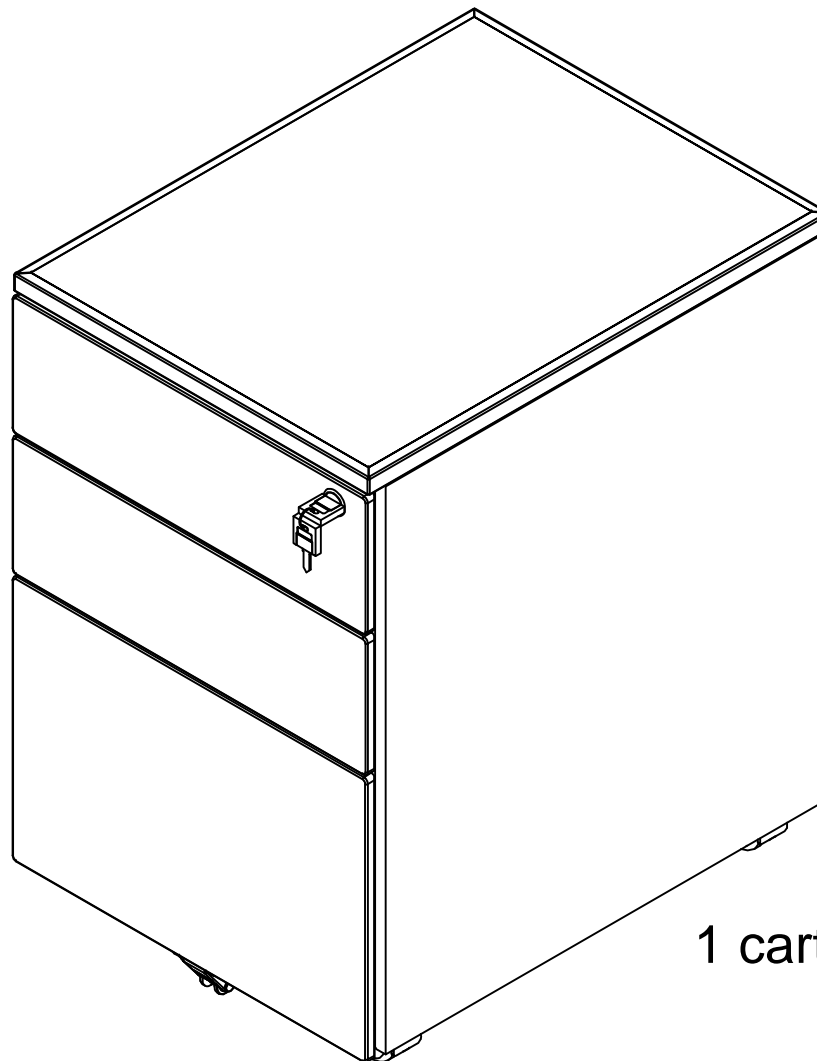

1 carton

Tools Required

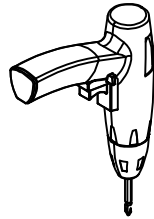


Assemble Item On a Clean Flat Surface



Need Two Or More People To Complete



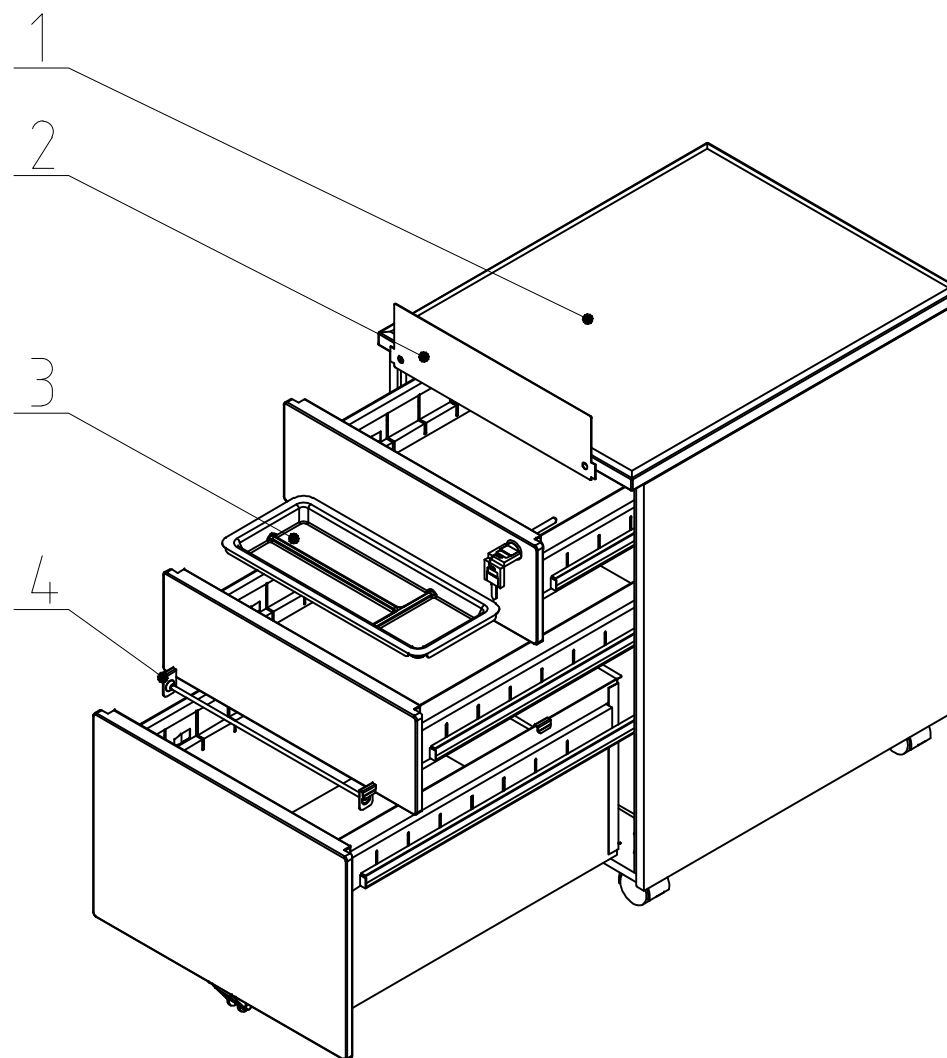





- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase




Note:

1.Pedestal is locked packing, need get key and item2 from bottom






2.Unlock the drawer and get castor to assemble

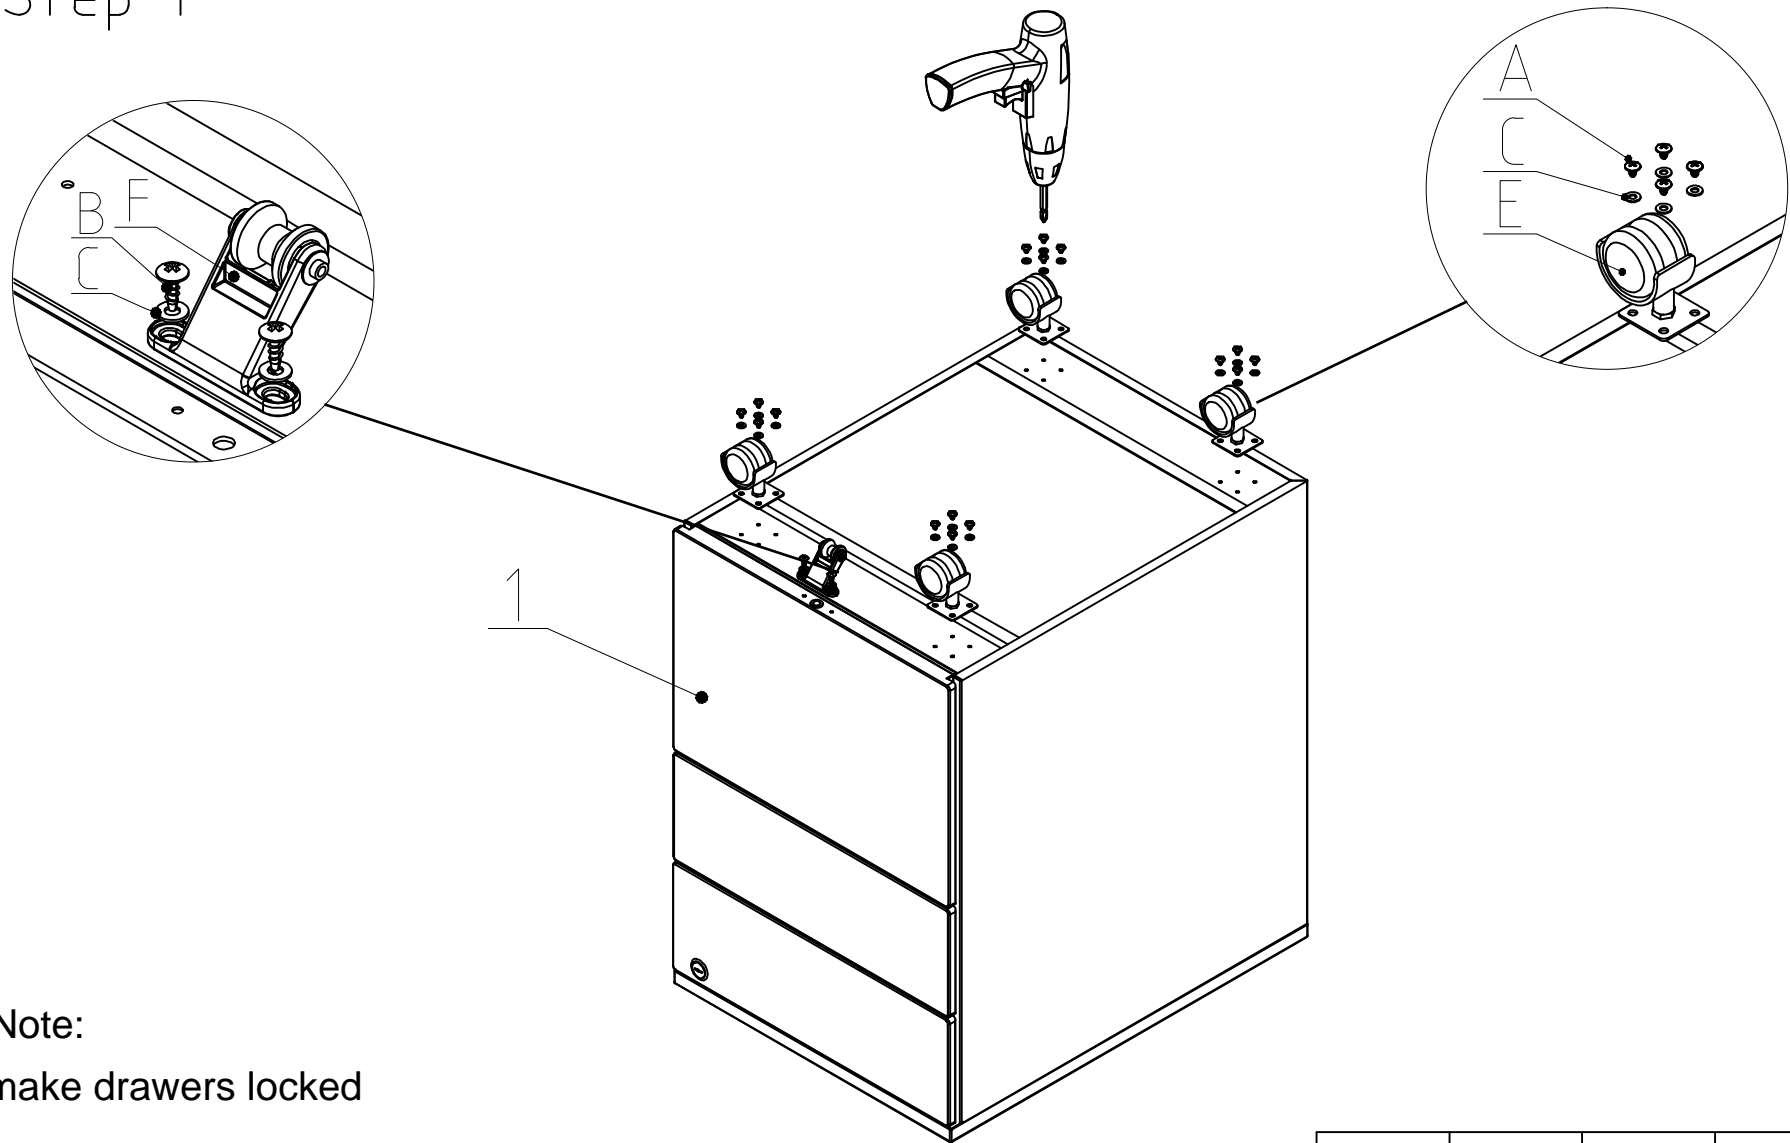					
Ax16(ST4.2x6)	Bx2(ST4.2x12)	Cx18	Dx1	Ex4	Fx1



Step 1



Note:
make drawers locked



				
A x 16 (ST4.2 x 6)	B x 2 (ST4.2 x 12)	C x 18	E x 4	F x 1

Step 2


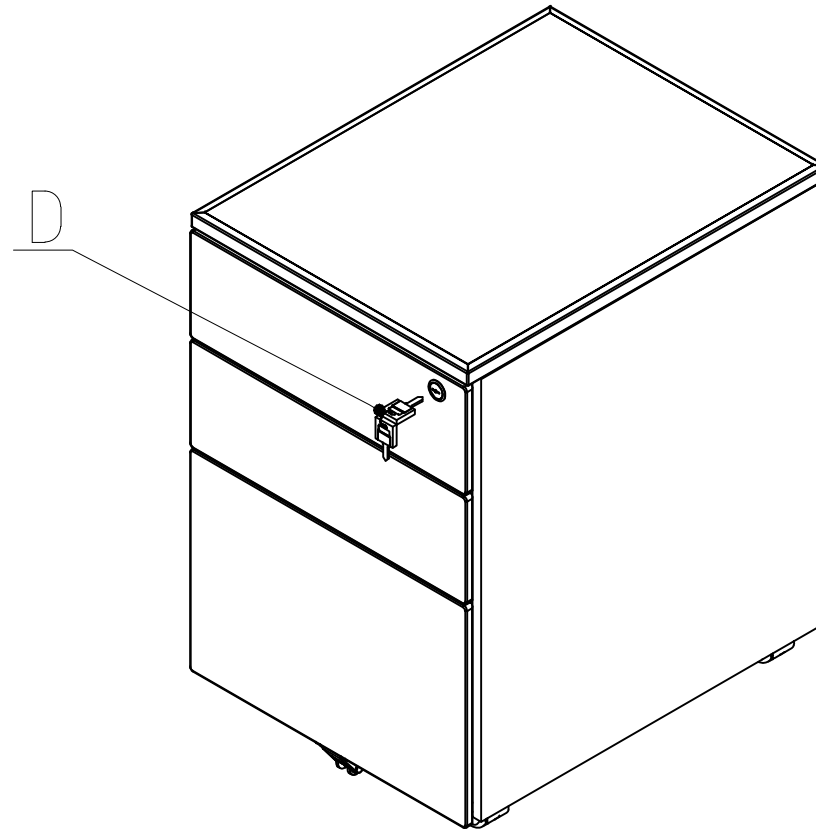


Dx1


Step 3

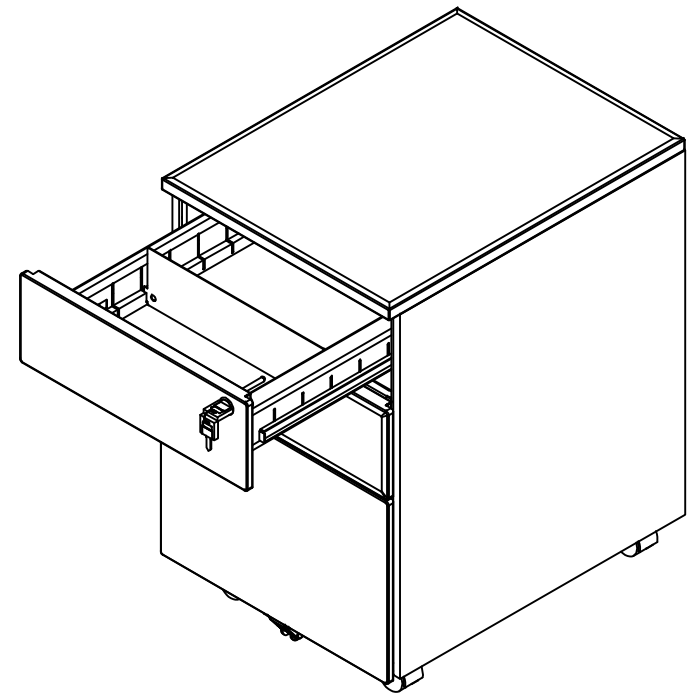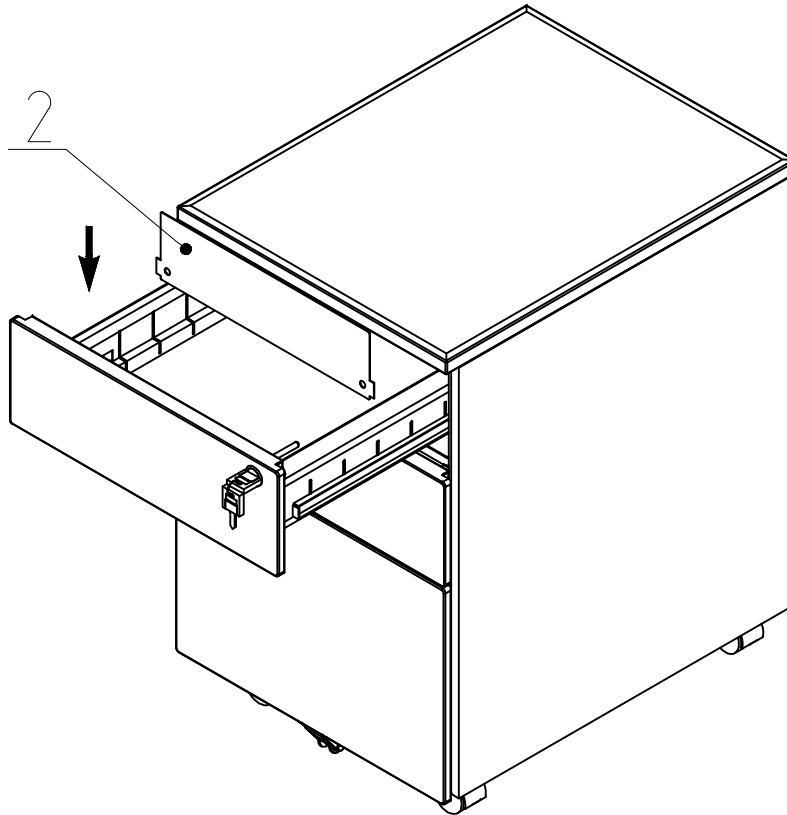

Step 4

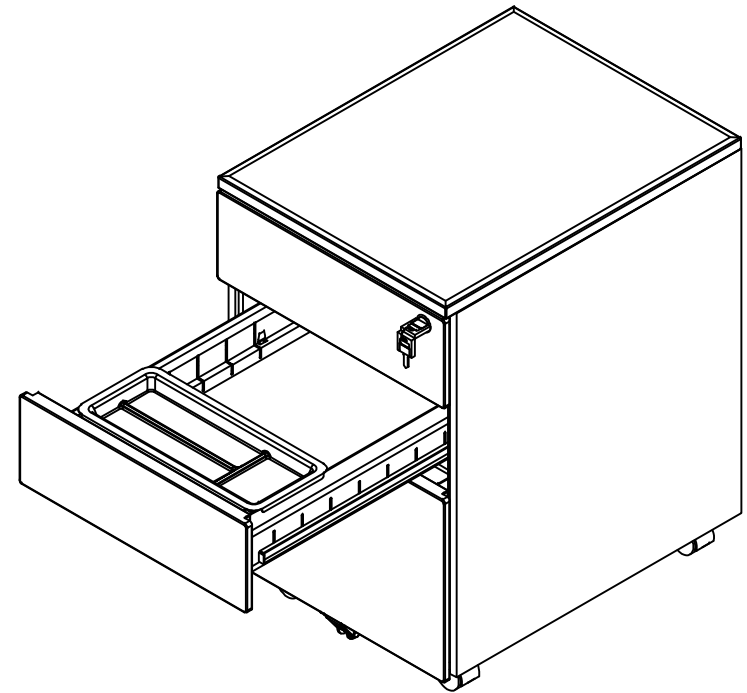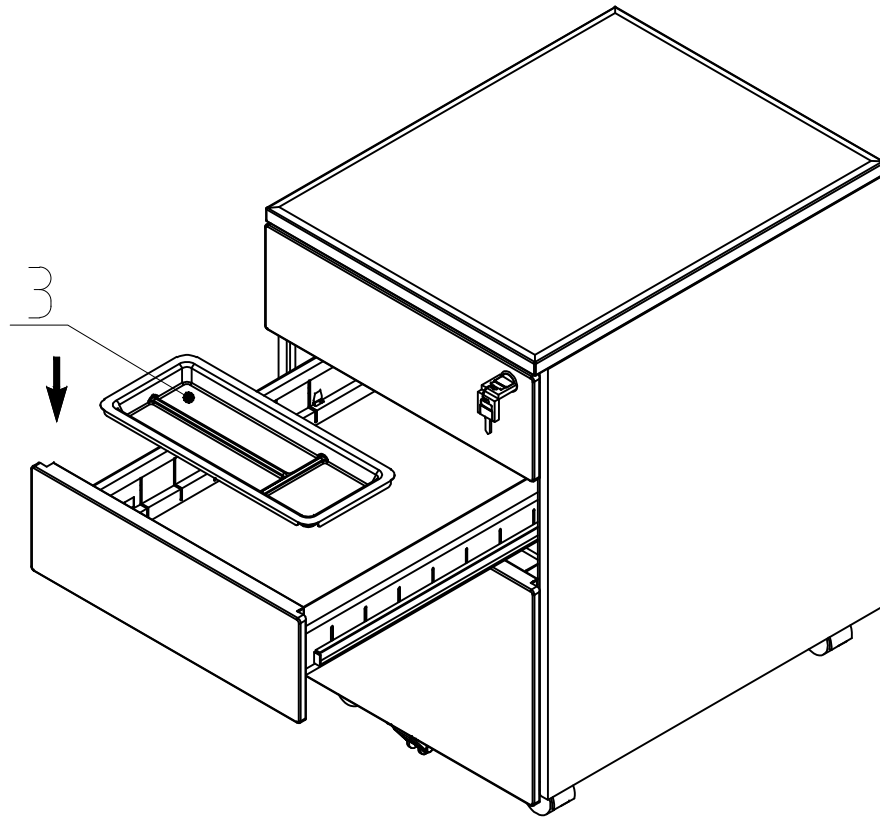

Step 5

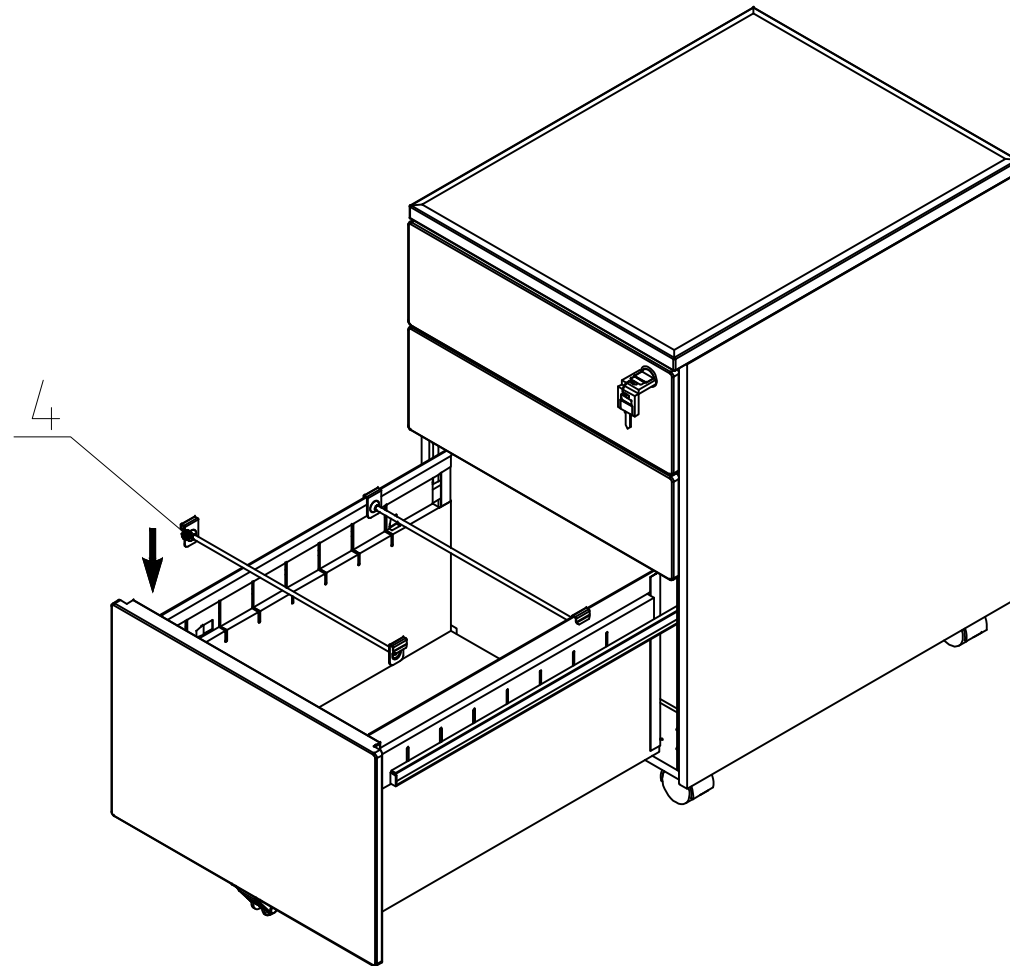

Optional: for use with A4 suspension files