





ASSEMBLY INSTRUCTIONS
ST PRO VERTICAL CABLE TRAY
JBSVERCTBK/JBSVERCTWE

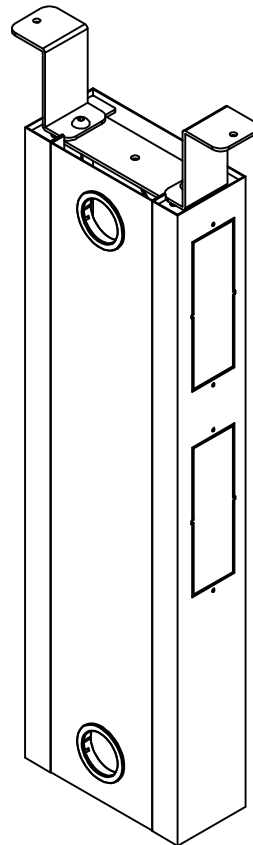

Tools Required



Assemble Item On a Clean Flat Surface







Need Two Or More People To Complete



- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase



Parts list

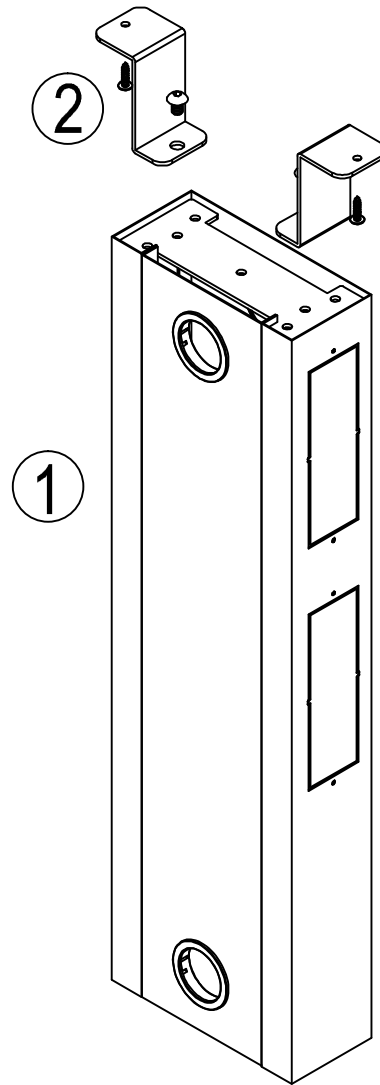


		
A x2(M8x12)	Bx2(ST4.8x20)	Cx1(5mm)



For 2P back to back desk.

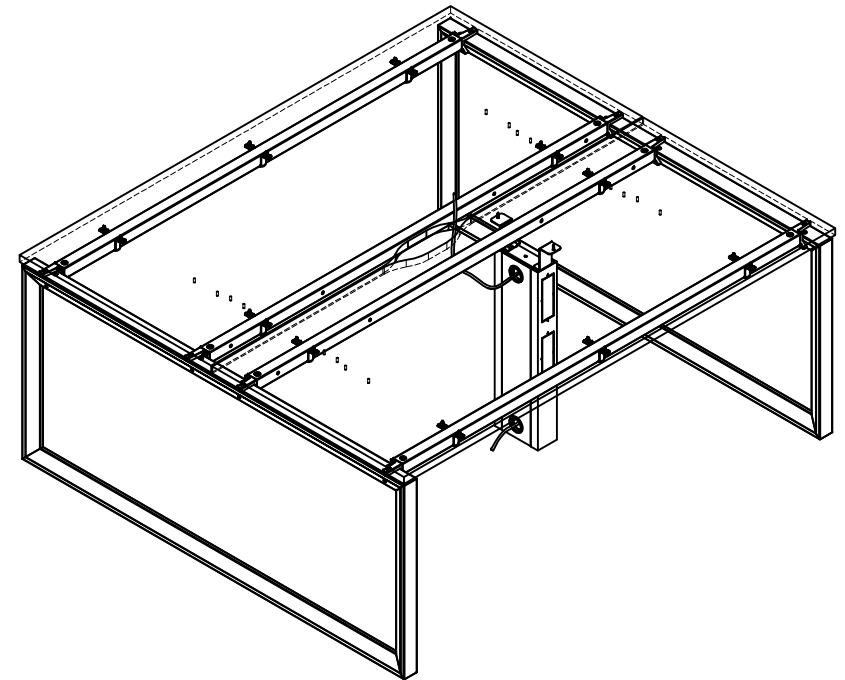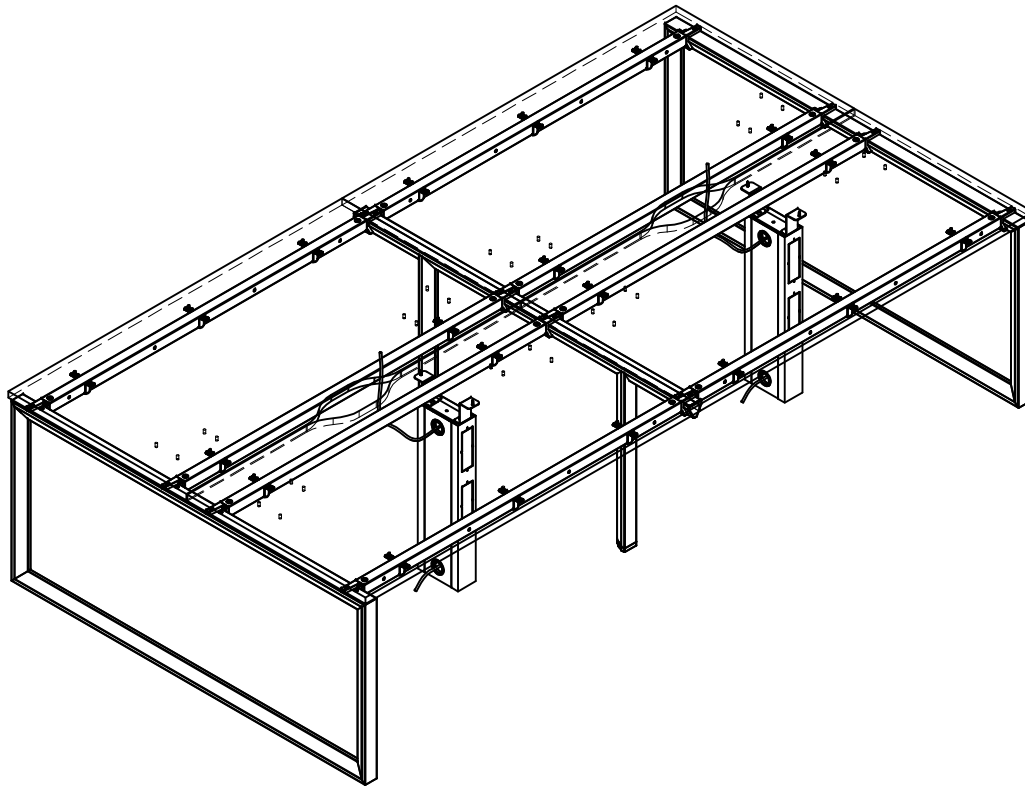For 4P back to back desk.

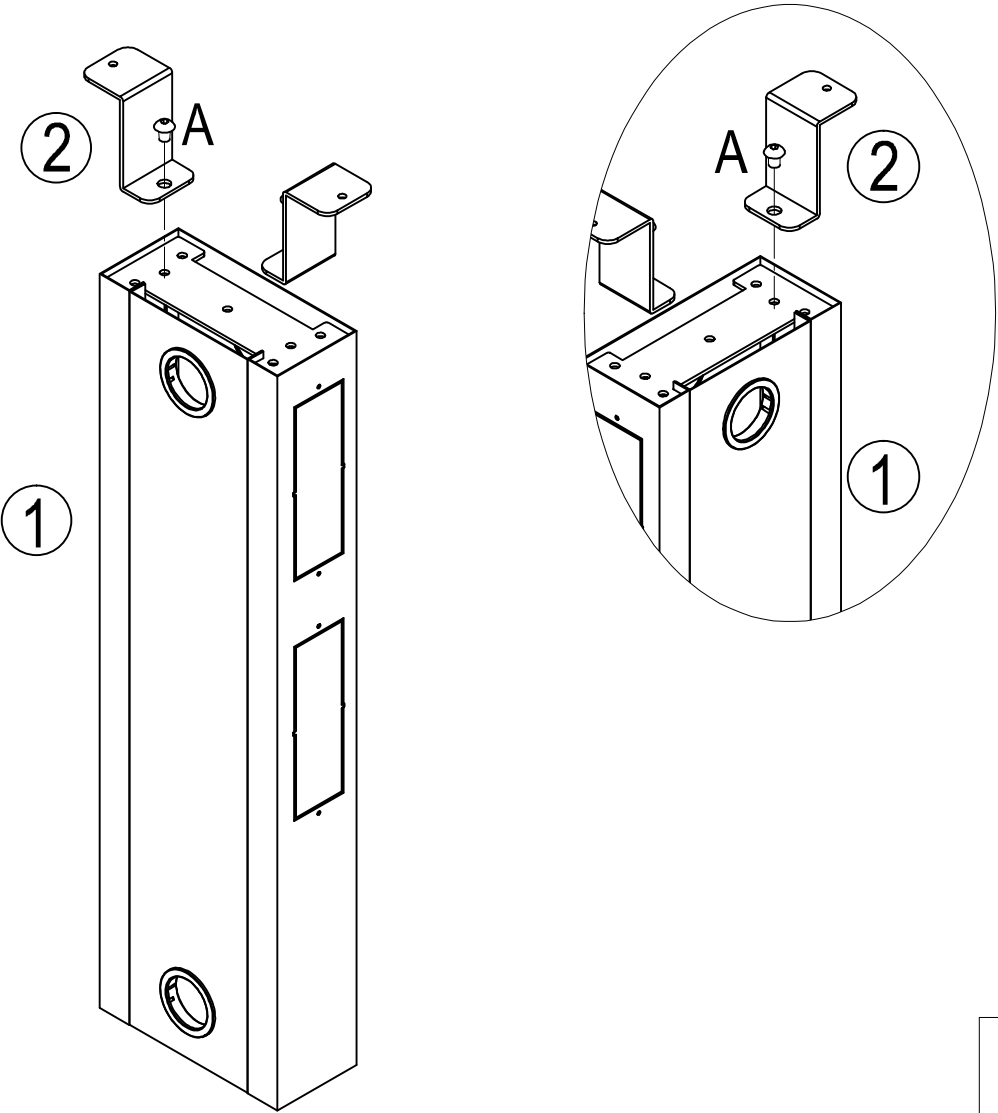


Step 1



	
A x2	Cx1

Step 2

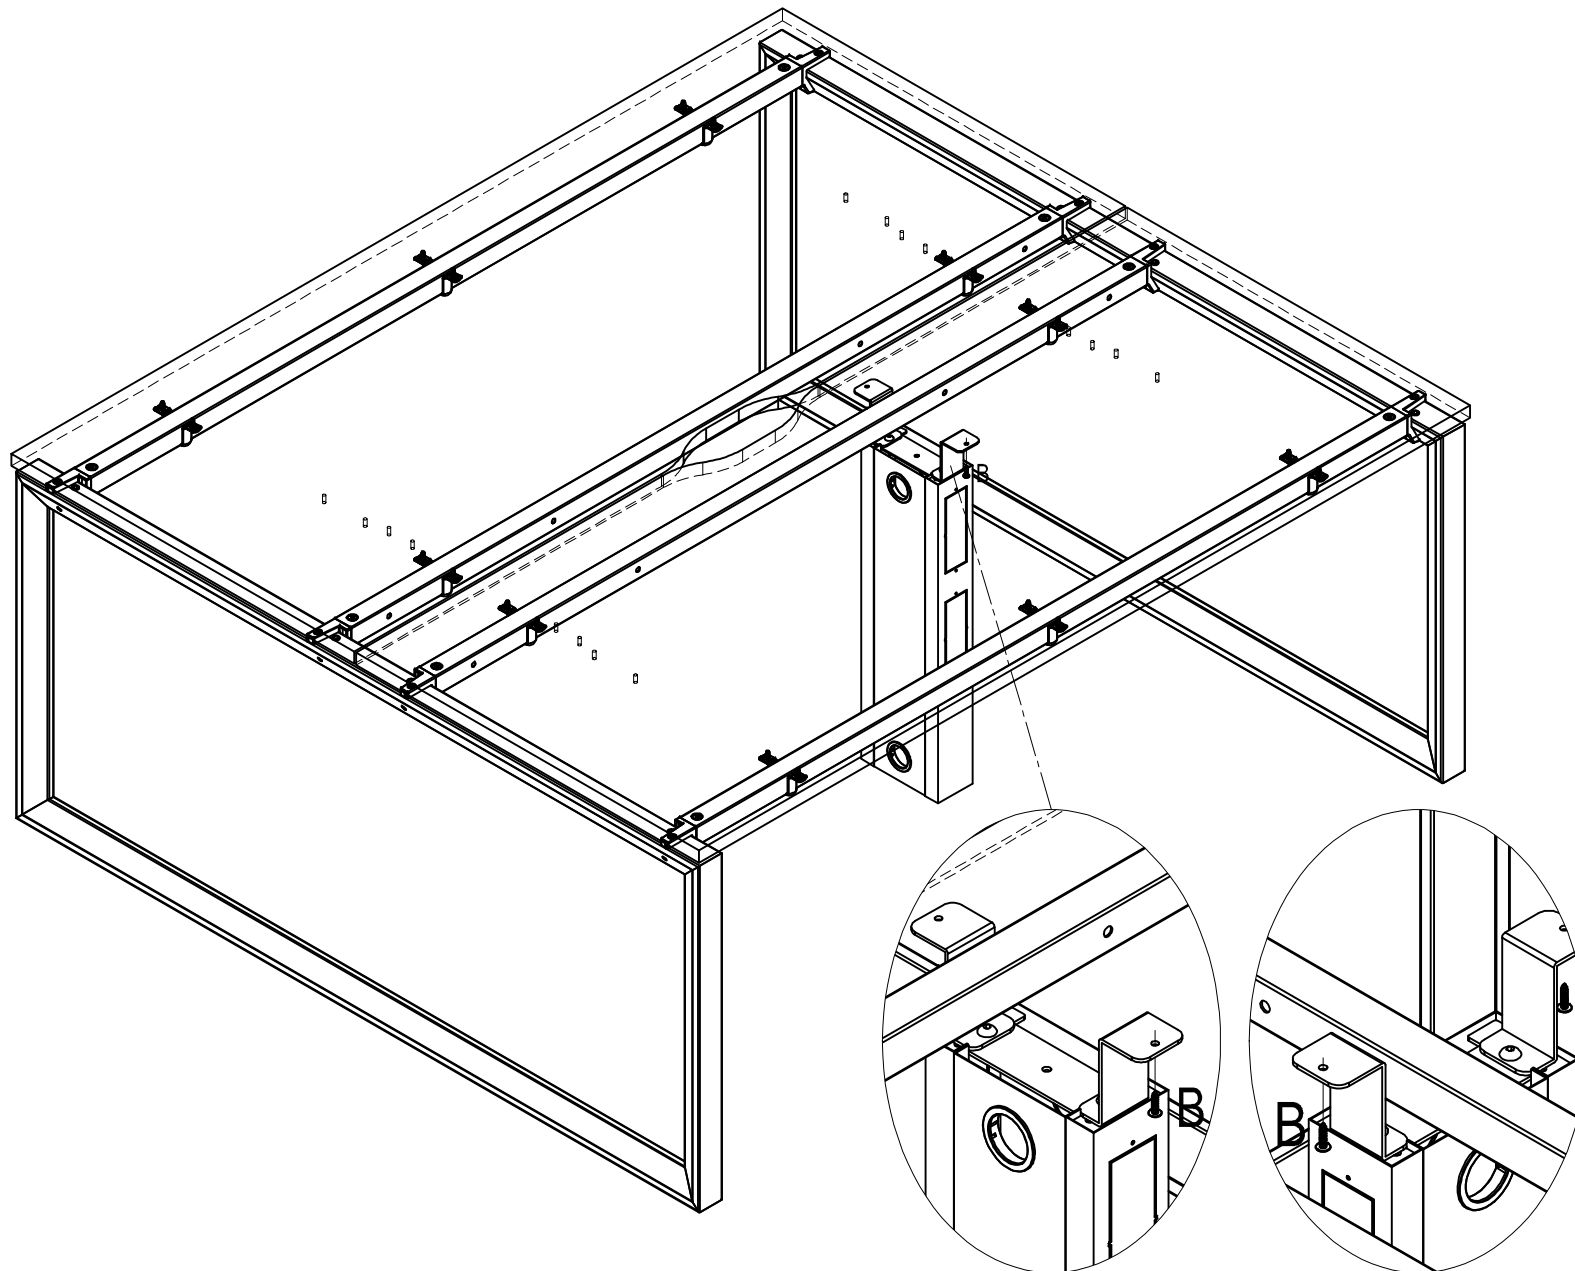

B x2

