



Assembly Instructions Velocity Mobile Pedestal

1 CARTON



MANUFACTURER CODE: VMP21L
OW CODES: CPVELMOBGB, CPVELPEDBW,
CPVELMOBGR, CPVELMOBWH, CPVELPEDWI

manufactured by designtec
www.designtec.com.au

10 YEAR
WARRANTY

NOTE

Please check you have all hardware before assembling.

If you are missing any hardware, please contact the store of purchase.

Please ensure you have the name of the item, required hardware part and quantity.

Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

Do not tighten screws before all screws are in the right place.

Do not use this product unless all bolts, screw and knobs are firmly secured.

Check that all bolts, screws and knobs are securely tightened at least every 4 months.


WARNING

If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.

Failure to follow these warnings could result in serious injury.

TOOLS REQUIRED FOR ASSEMBLY

1 x Philips Head Screwdriver



HARDWARE INCLUDED

Note - Individual hardware images are not to scale.

A - 17mm SCREW



x 15

B - HANDLE SCREW



x 6

C - HANDLE



x 3

D - CASTOR



x 4



IMPORTANT NOTE

The hardware pack is located in the top drawer of the unit.


Use keys taped to the bottom of the pedestal unit to unlock the top drawer.

STEP 1

Turn unit upside down to attach CASTORS (D), using 17mm SCREWS (A).

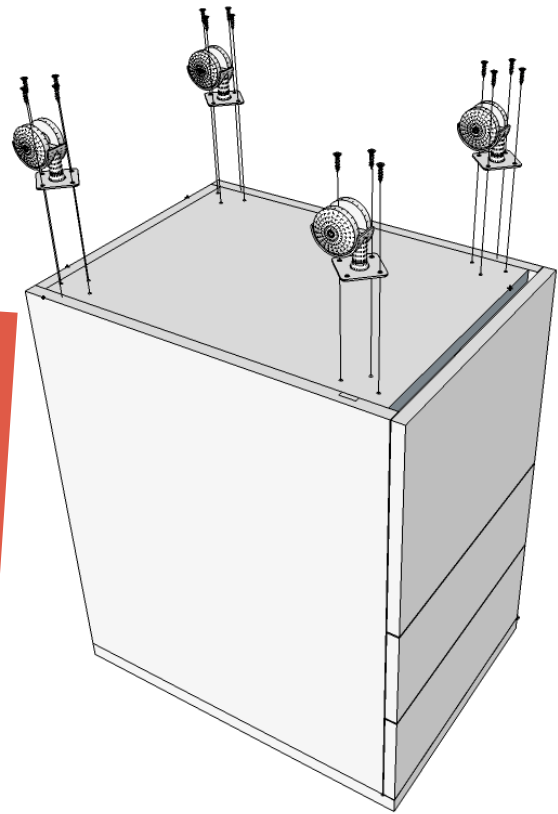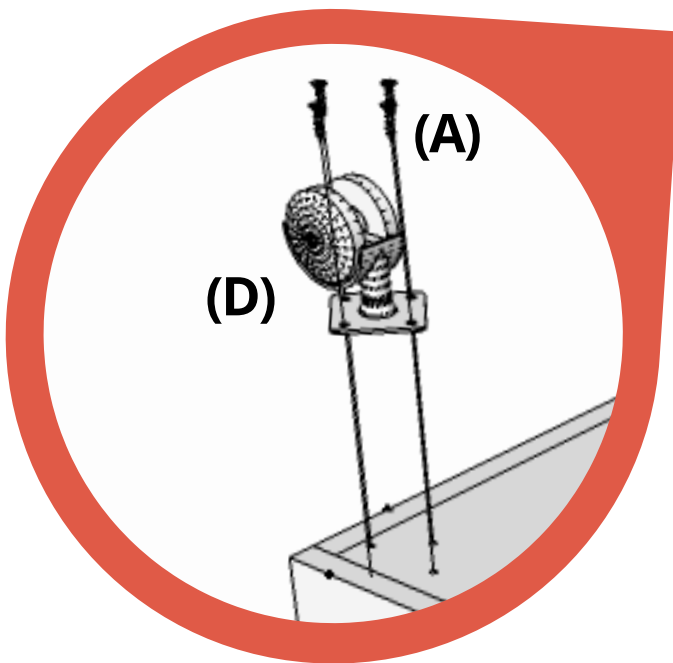


Note: only THREE (3) 17mm Screws (A) are required to secure the front left CASTOR (D) to allow for the locking grove.

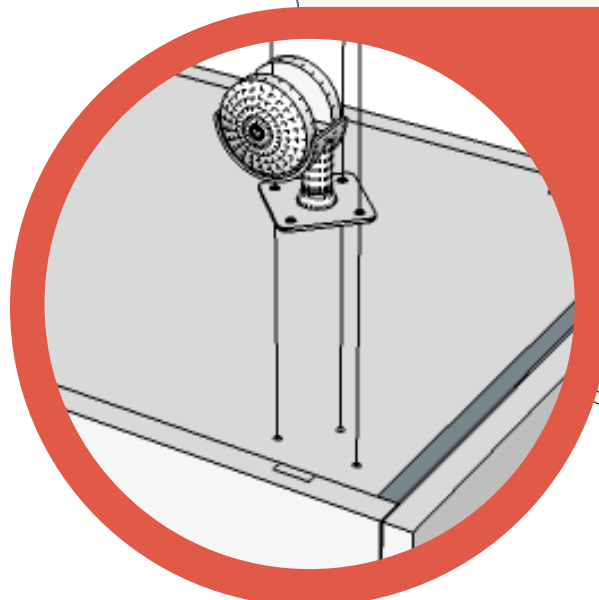

STEP 2

Once castor are fastened by using your screwdriver to secure, turn pedestal unit the correct way up to attached the handles.

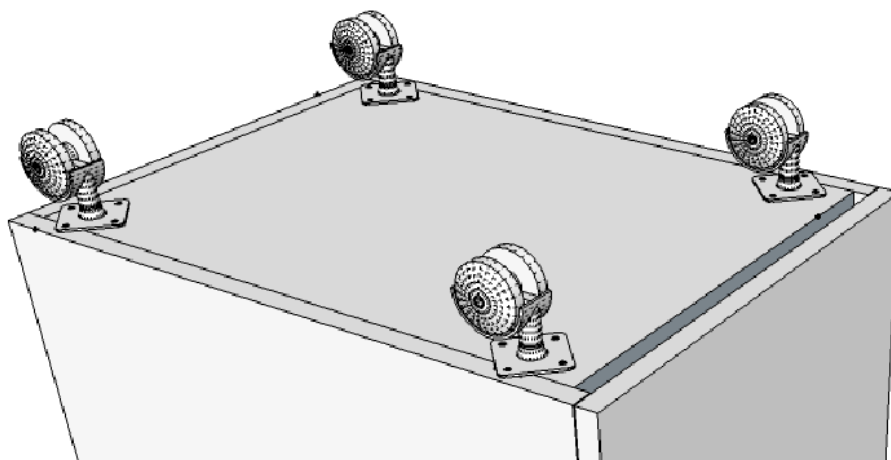

STEP 3

Open each drawer to attach HANDLES (C) using HANDLE SCREWS (B); fasten with screwdriver.

