




Kestrel Shower Tracks

Fitting Instructions


Movatrack - Shower track - Kestrel

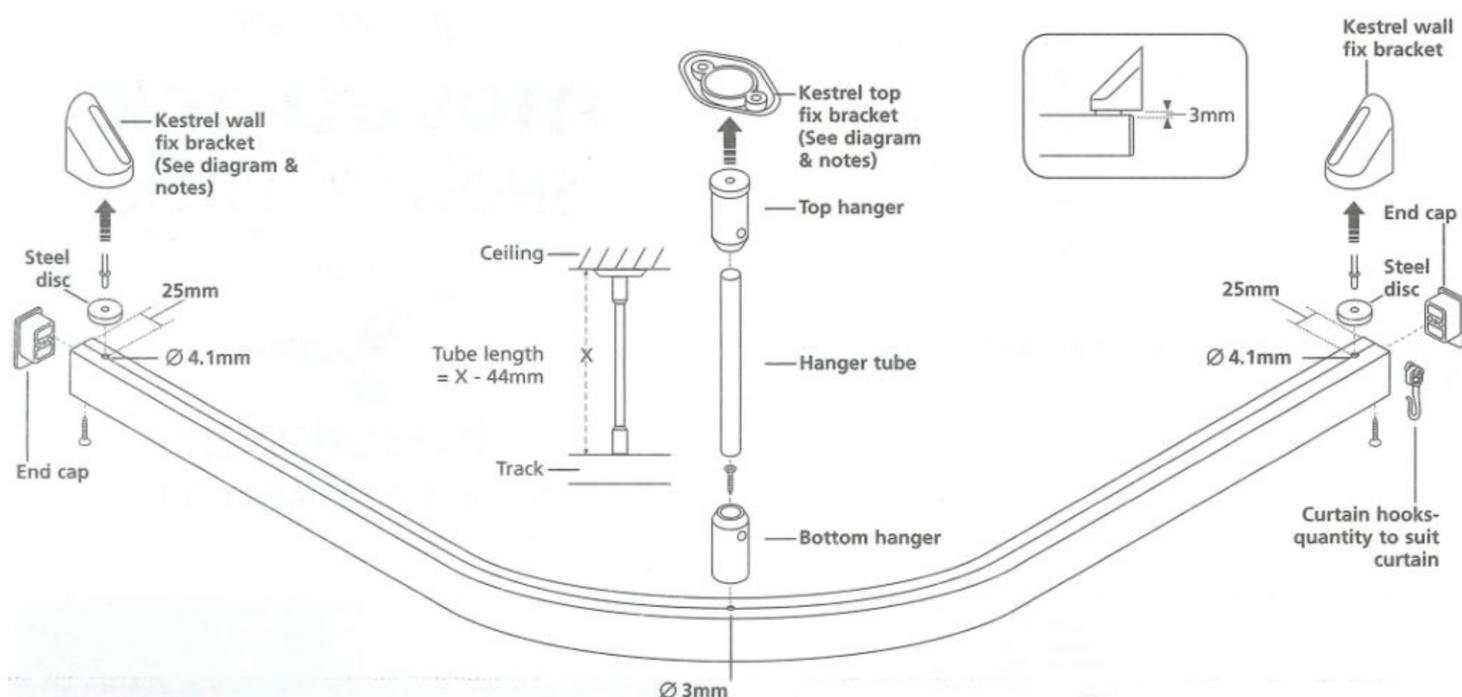




1. Check position and height of track ensuring that curtain will hang inside bath or shower tray. The aluminium track should be clear of the wall by 7mm at each end. Track may be trimmed with a hacksaw if necessary.
2. Fit in accordance with drawing using a plumb line to determine ceiling hanger position. [In the case of U-Shape track, one hanger assembly centrally between the two bends is sufficient].
3. Ensure track is level and cut hanger tube as per diagram.
4. Fit top or face fix brackets to ceiling or wall using suitable fixing screws/plugs as per shown below. It is important that the bracket is securely fixed to the substrate using TWO fixing screws and care must be taken to ensure that no ligature points are left once installation has been completed. If a degree of float is required in the magnet, the packing disc may be discarded.



K558PC

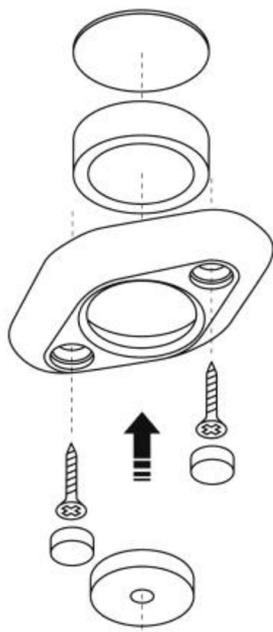

K555PC

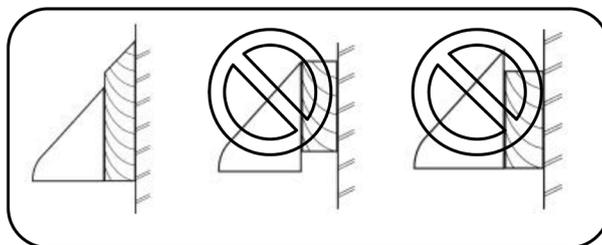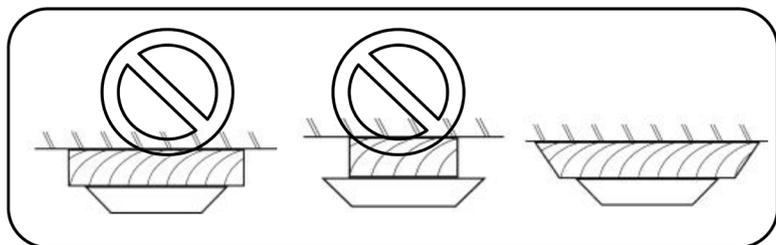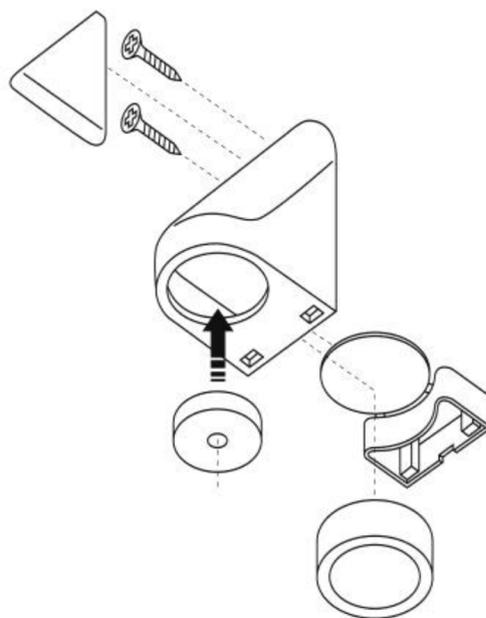

5. To allow the curtain to stack neatly at one end, a captive hook is retained by a self tapping screw. This can be repositioned if necessary by drilling another hole in the underside of the track using 3mm drill bit provided.
6. Once track is fitted and bracket positioning has been confirmed by testing, the push-in screw cover **MUST** be fitted to ensure that it is flush with the bracket body. The push-in screw cover is intended to be a tight fit to prevent unauthorised access to fixings.
7. Hang curtain on track.
8. Check curtain operation.



ALL BRACKETS

Discs should be horizontal and centre of gravity of load should be directly beneath centre-line of discs. Test completed installation. The downward force needed to part the brackets should never be more than 400N [40kg static load] at any point.

WARNING

The magnetic element of the Kestrel bracket is POWERFUL. Handle with care. If allowed to attach to a flat steel surface it may be difficult to remove. **DO NOT PLACE NEAR SENSITIVE ELECTRONIC EQUIPMENT.**

ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia
P. +61 2 4823 0000 E. info@hipac.com.au

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

hipac.com.au

ABN 27 600 353 688