



J-Trac Wardrobe Rails Mounting Instructions

Kit Includes:

- 1 x Ceiling Fix Rail (560mm or 1000mm)
- 2 x End Caps - Left/Right
- 1 x Security Screw Pack
- 4 x Coat Hanger, Standard (8 x for 1000mm kit)

The Wardrobe rail is designed to be ligature resistant and reduce risk of the rail or other parts becoming a weapon. Moreover, the hangers release from the rail when additional weight is applied.

Mounting shall be done so that the wardrobe rail fits tight against the surface it is mounted against. Uneven surfaces should be avoided. After installation check that no objects, wire, or string can be inserted between the rail and the wall or ceiling.

The rail shall always be installed with an end stop at each end of the rail.



Make sure that the rail is mounted with the straight side of the profile facing the wall, same side as the screw holes. [See figure 1 and 2]

The rail shall be fitted with countersunk security screws. The holes are adapted for counter sunk screws with a diameter of 5mm and 10mm head. Use all holes. Make sure that the head does not protrude from the rail.


Two rails shall not be mounted parallel to each other in any way. Profiles facing each other create a ligature risk. [See figure 3]

When the rail is cut to the desired length, the distance to the nearest countersunk hole from each end of the rail may vary. Cut the rail so that the distance between the nearest countersunk hole and the end stop does not exceed 185mm. No part of a countersunk hole covered by the endstop shall be visible. [See figure 4]


The rail's countersunk holes are pre-drilled with a CC of 200mm.

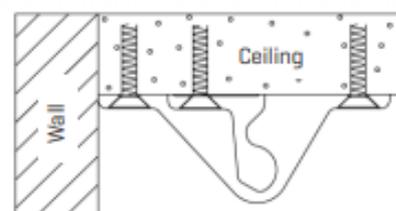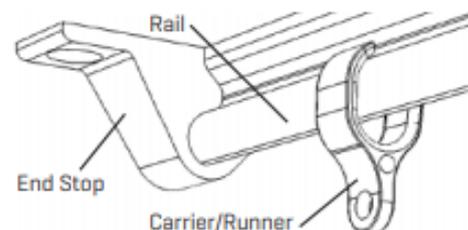


1. Correct placement facing the wall.

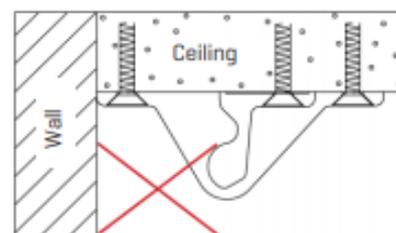

2. Incorrect placement facing the wall.

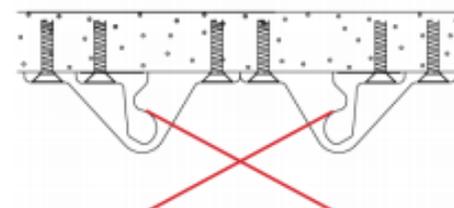

3. Incorrect placement of rails.

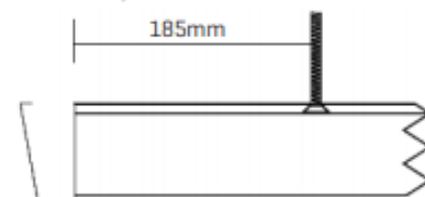

4. Distance between the nearest countersunk hole and end stop does not exceed 185 mm. No part of a countersunk hole covered by the endstop shall be visible.

ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia
P. +61 2 4823 0000 E. info@hipac.com.au

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

hipac.com.au

ABN 27 600 353 688