



Anti-Ligature En-Suite Door Set 138150

DATASHEET



Award-winning door with no known ligature points


- ▶ Leaves detach if a ligature is attempted, at 8kg load
- ▶ Strong magnets and pivot mechanism avoid leaves detaching during day-to-day use.
- ▶ Magnets can't be removed or ingested
- ▶ Soft, lightweight leaves minimise weaponisation
- ▶ Retrofits in under 60 minutes
- ▶ Less up-front and running costs compare with alternatives.



LIMITATIONS OF EXISTING OPTIONS


In-depth research has revealed the limitations of existing solutions:

- ▶ Any two hard surfaces meeting creates a ligature point.
- ▶ Load release is the only safe option

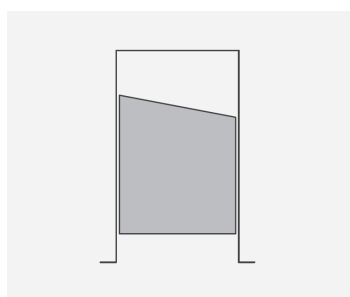


Cut-Down Door

- ▶ Multiple ligature risks on door frame, hinge and gap
- ▶ Can be used as both a weapon and hiding place

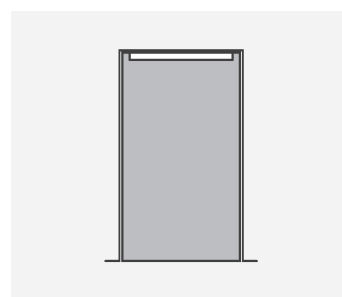


Full Door with Door-Top Alarm

- ▶ Low-level anchor points pose risk of bed sheet ligature
- ▶ Limits observation when bathroom in use

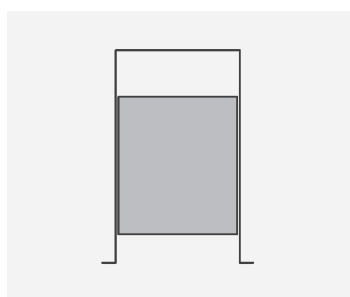

Side-Hung Magnetic Door

- ▶ Side-hung magnets detach too easily, so impractical
- ▶ Strong magnets in fabric can be removed and swallowed, causing internal injury and even death

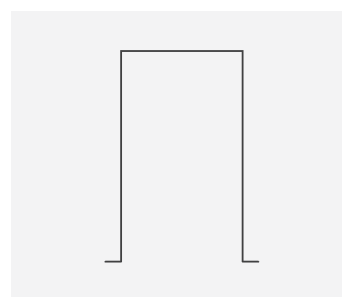


No Door/Curtain

- ▶ Lack of dignity and privacy
- ▶ Curtain blocks observation and requires regular replacement
- ▶ Doesn't emulate home environment



LIFE SAVING SOLUTION

Our en-suite door restores dignity and independence, as well as setting new standards for safety and design.

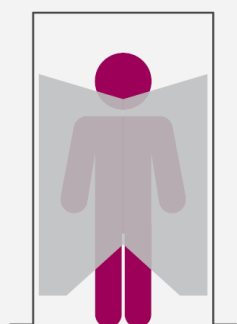

ENABLES PARTIAL OBSERVATION; PROVIDES DIGNITY

Like cubical doors in a leisure centre, the door acts as partial visual screen to preserve service user dignity.

Yet is also allows observation of head and feet to give clinicians peace of mind.



MINIMISES LIGATURE LEARNING

There's an option to allow staff-only reattachment - with a quarter turn of the staff key engaging the magnet - so a detached door leaf can inform clinical risk assessment.

This discourages service users from even attempting to tamper with the door, as well as minimising the opportunities to try



ENHANCES SAFETY


The door is tested to TS001 standards, and there are no known ligature points on the pivots or leaves.

The leaves detach if a ligature is attempted, but stay in place during day-to-day use - ensuring they are practical.

When detached, the leaves are an ineffective weapon because they are soft and lightweight.



Hipac Safehinge Primera En-suite Door set Lifesaving Details

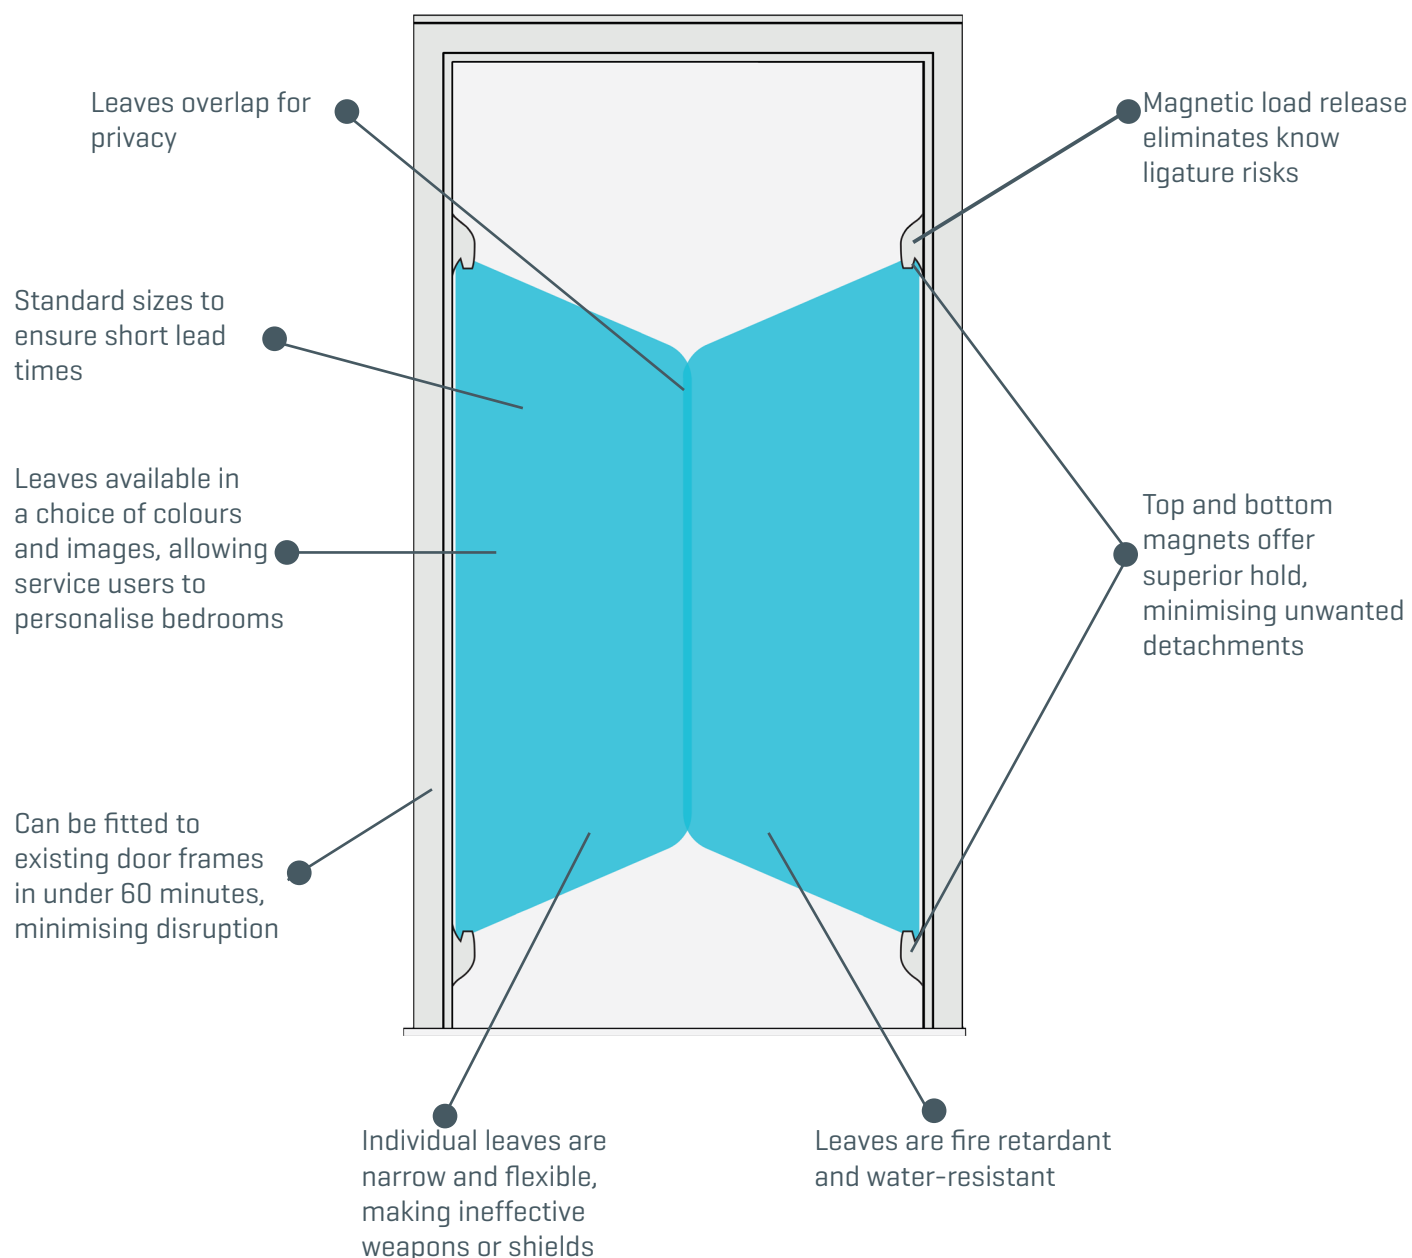

ABOUT HIPAC

We are an Australian healthcare company that guarantees to stand behind all our medical products, both manufactured and imported, because we're here for the life of our products and clients.

PO Box 797, 36 Long St. Goulburn NSW 2580, Australia
P. +61 2 4823 0000 E. info@hipac.com.au

SYDNEY | MELBOURNE | BRISBANE | ADELAIDE | PERTH

hipac.com.au

ABN 27 600 353 688